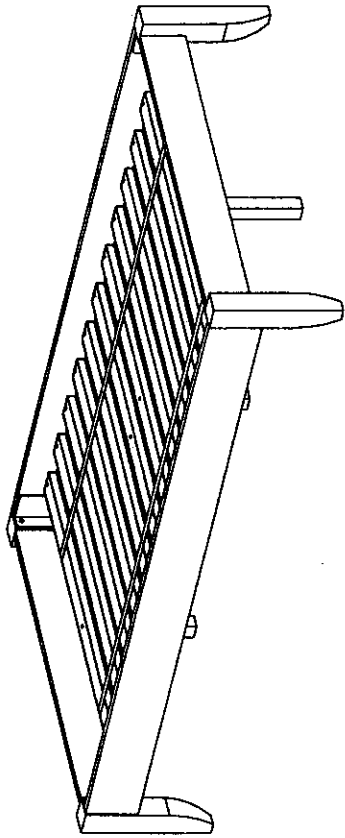








ASSEMBLY INSTRUCTIONS

BB 0010



Complete view of conventional Bed

Hardware in this box

	M8 x 20 mm JCBC 8 pieces		Washer 8 pieces		M6 x 70 mm JCBC 3 pieces		Wood Screw M4 x 32 mm 24 pieces
					4 mm Allen Key		5 mm Allen Key

Box 1 of 2
Part in this box

Headboard

Footboard

Slats 12 pieces

Leg Support 3 pieces

Box 2 of 2

Side Rails

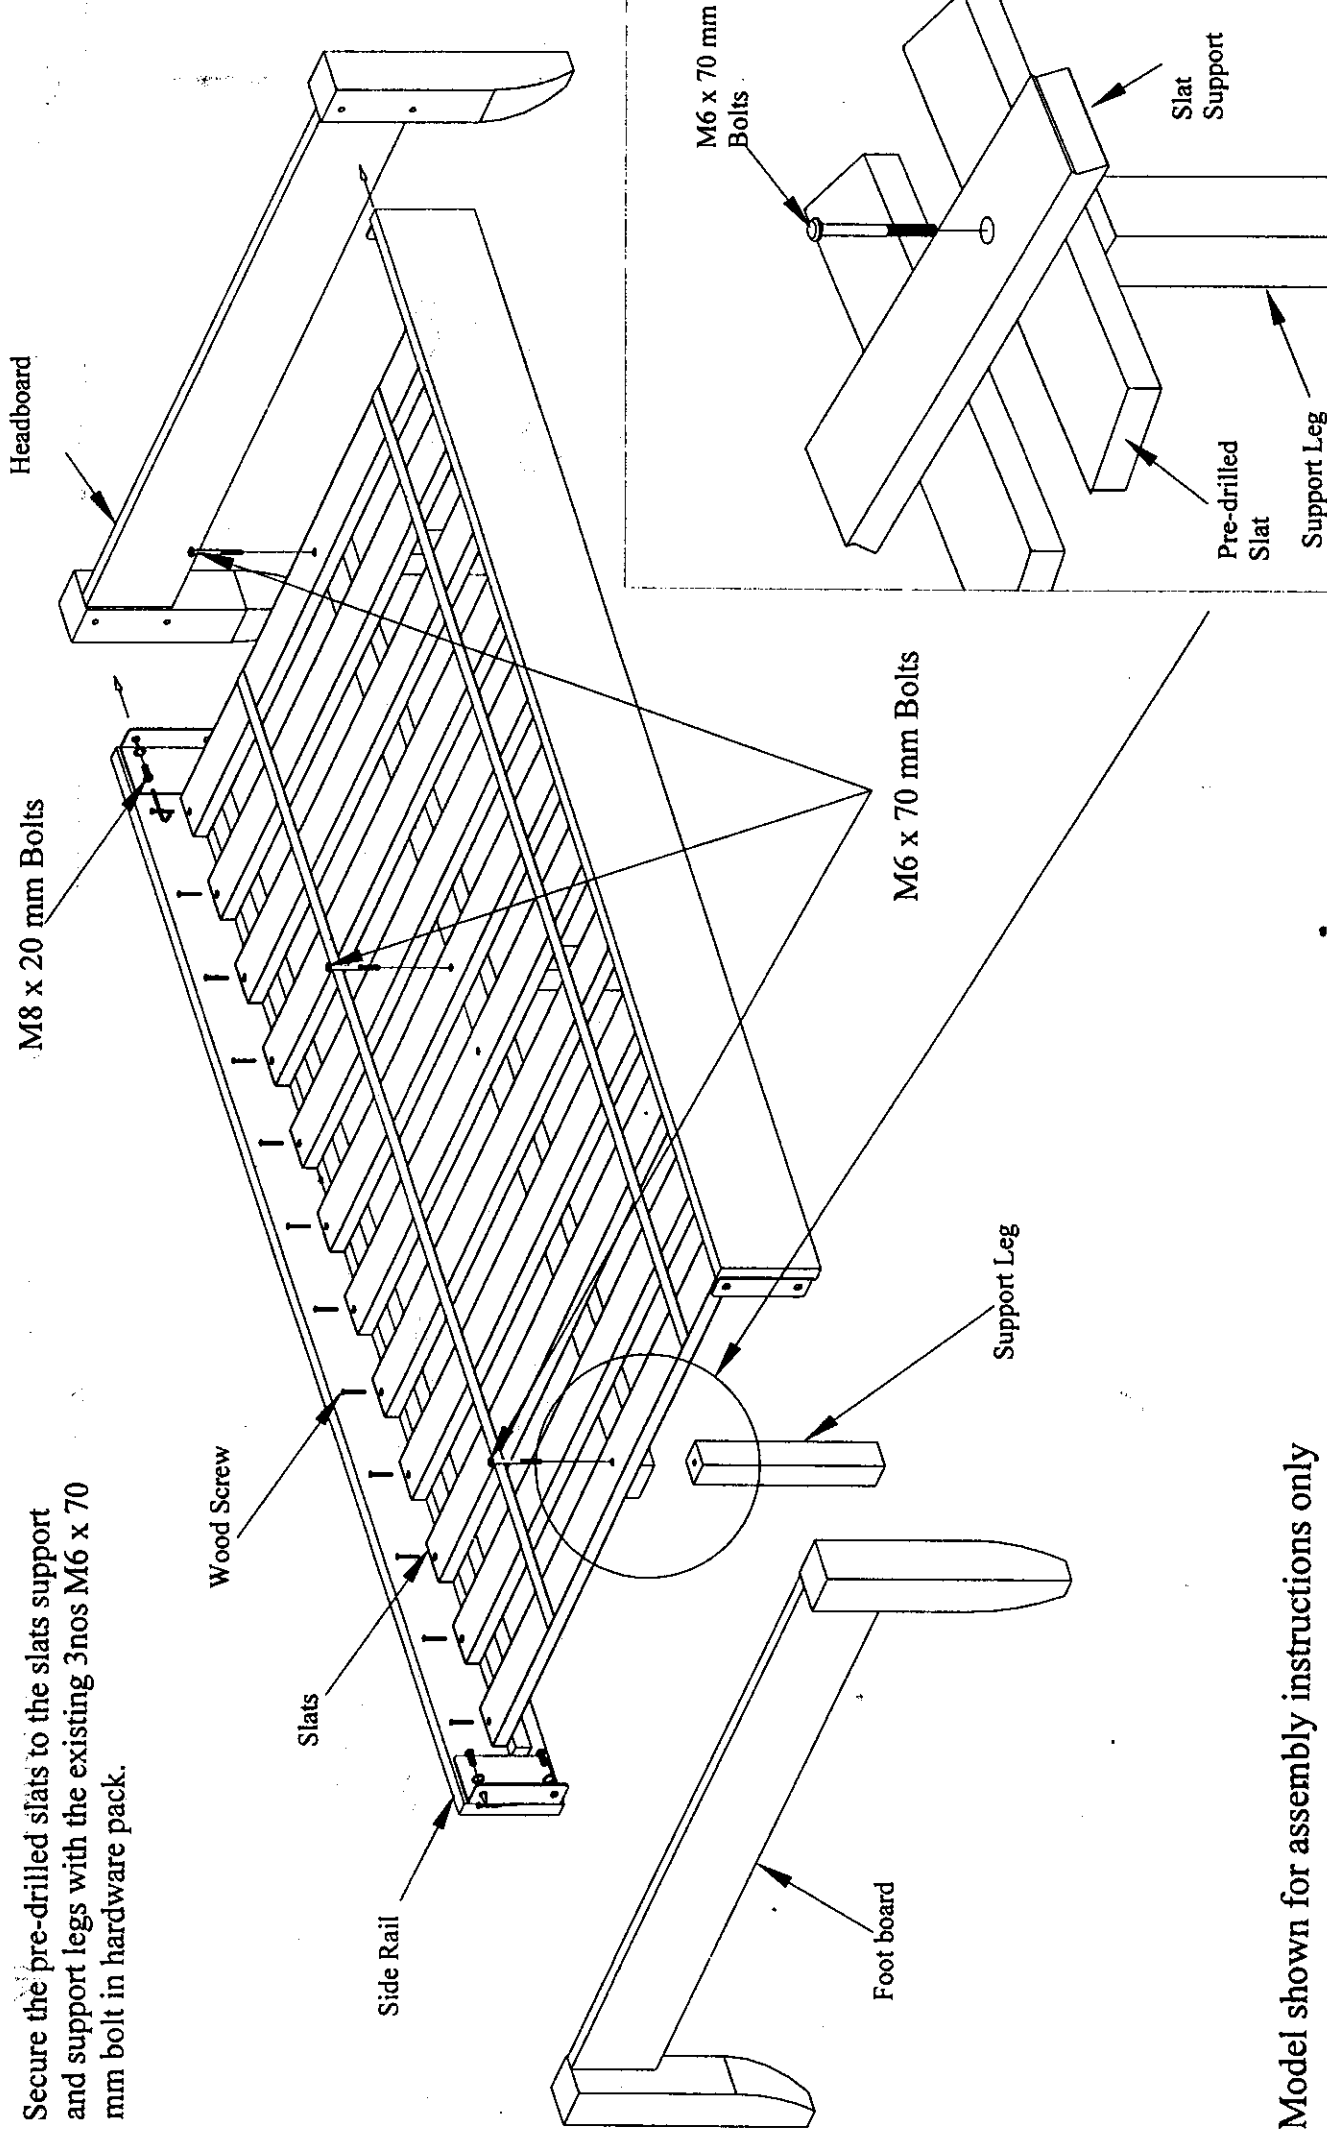
Center Slat support

Assembly Instructions

Replacement part of leg support

BB 0010

Secure the pre-drilled slats to the slats support and support legs with the existing 3 nos M6 x 70 mm bolt in hardware pack.



Model shown for assembly instructions only