


# VALENCIA BED


## Box # 1

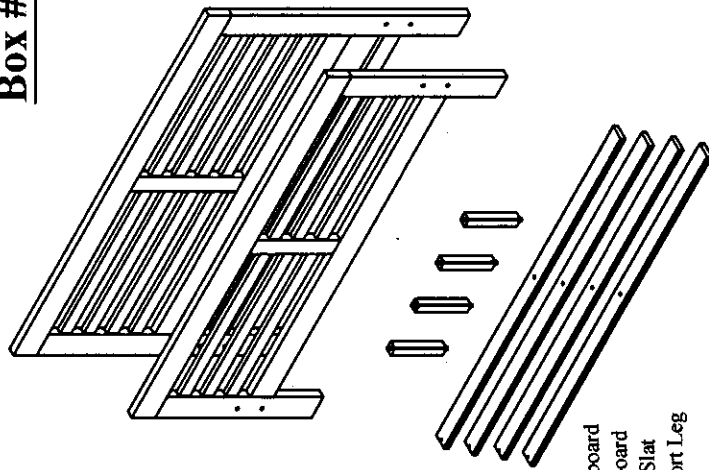

- 1 pc. Headboard
- 1 pc. Footboard
- 4 pcs. Bored Slat
- 4 pcs. Support Leg


## Optional Slat

10 pcs. Slat

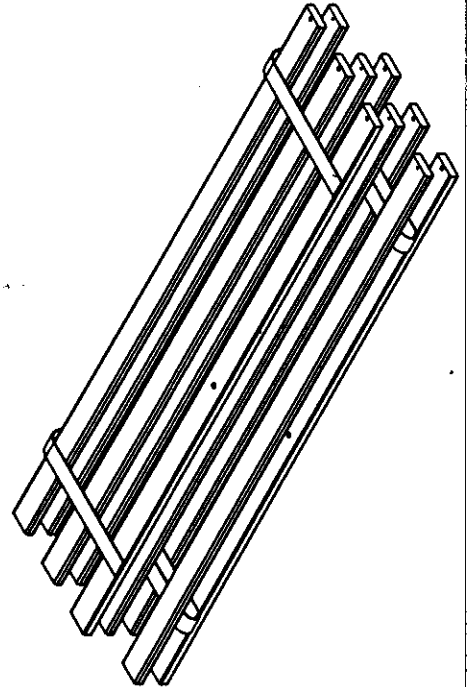


## Box # 2


- 2 Pcs. Side Rail
- 1 Pc. Slat Support

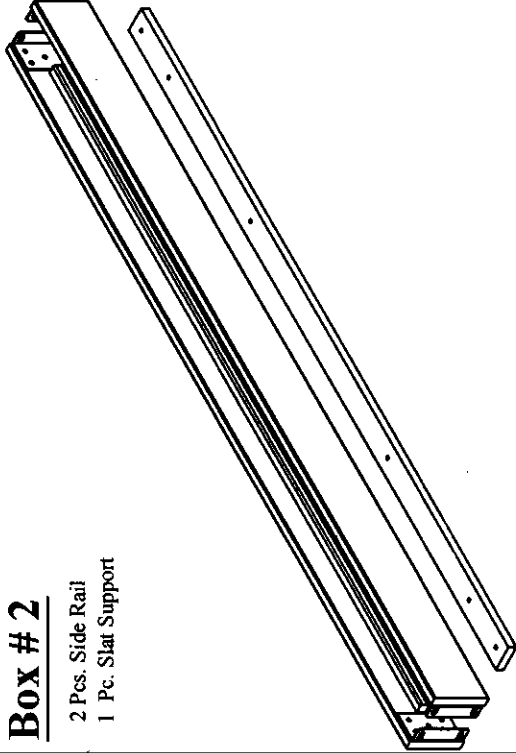

A complete assembled view of a Conventional Bed

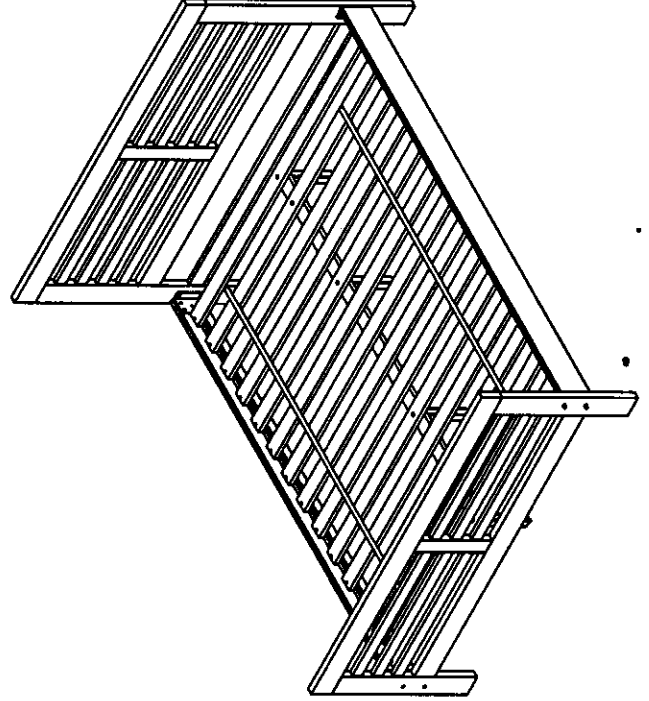

## Hardware Pack in Box # 1

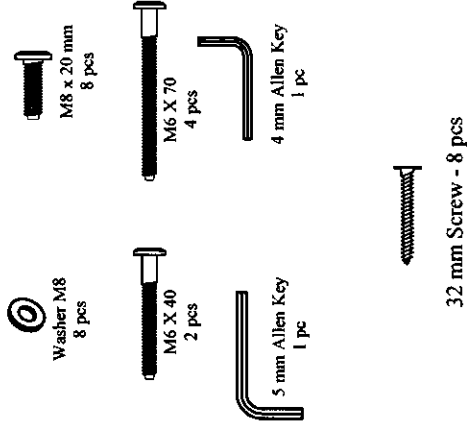

32 mm Screw - 20 pcs  
( wrapped in separate Plastic bag )  
Optional Slats Box

# VALENCIA BED

## Bed Assembly Instructions

### Step 1

Fix side rails to head board & foot board as show with the M8x20mm bolts, washers and nuts.

### Step 2

Place the conventional slats, slat supports and legs as shown using the M6x70mm bolts.  
Use the two M6 x 40mm bolts to attach the second outer slat to the slat support.  
After tightening all the bolts, screw the slats in place on to the side rails with the woodscrews provided as shown.

