













ASSEMBLY INSTRUCTION- FULL CONTEMPORARY BED

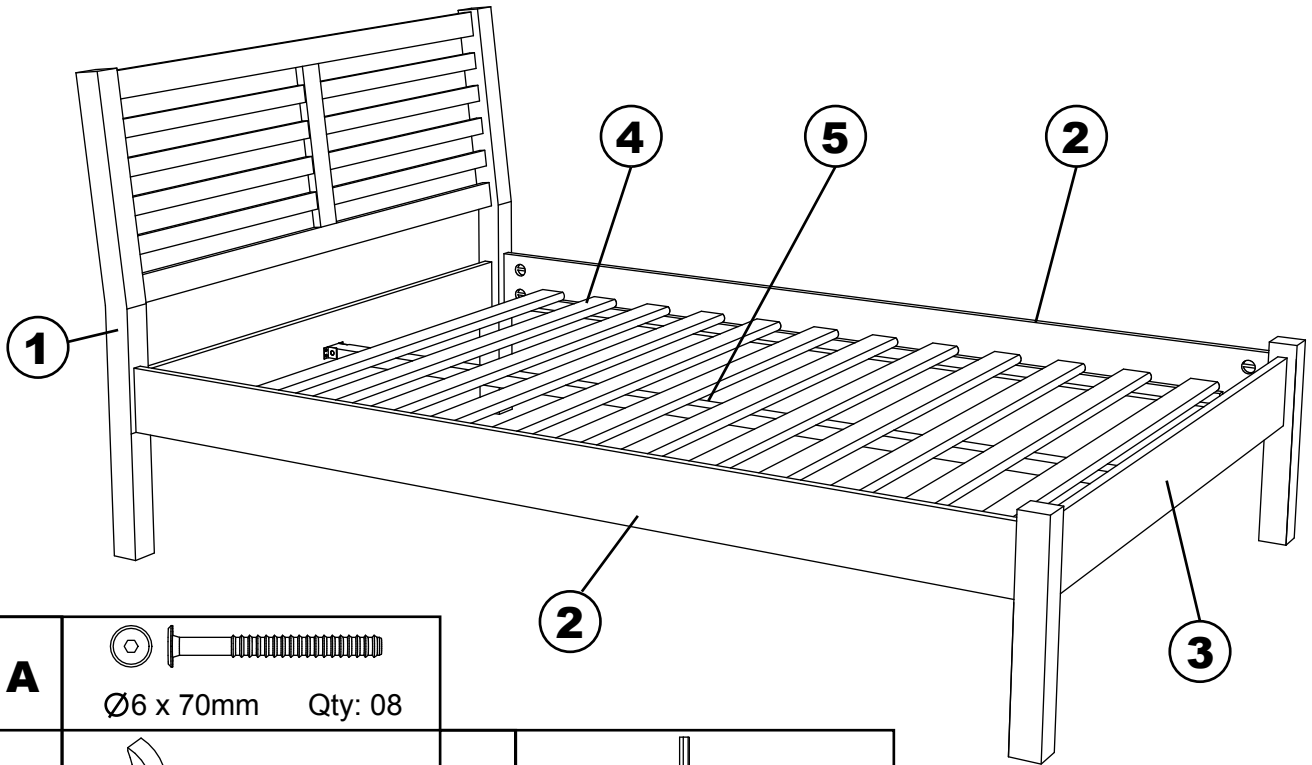



A	 Ø6 x 70mm Qty: 08	C	 Qty: 01
B	 Qty: 08	E	 Ø4 x 30mm Qty: 24
D	 Ø10 x 40mm Qty: 4	F	 Ø4 x 15mm Qty: 08
J	 Qty: 02	G	 Qty: 02
		H	 Ø6 x 45mm Qty: 02

Step: 1


D	 Ø10 x 40mm Qty: 04
----------	---

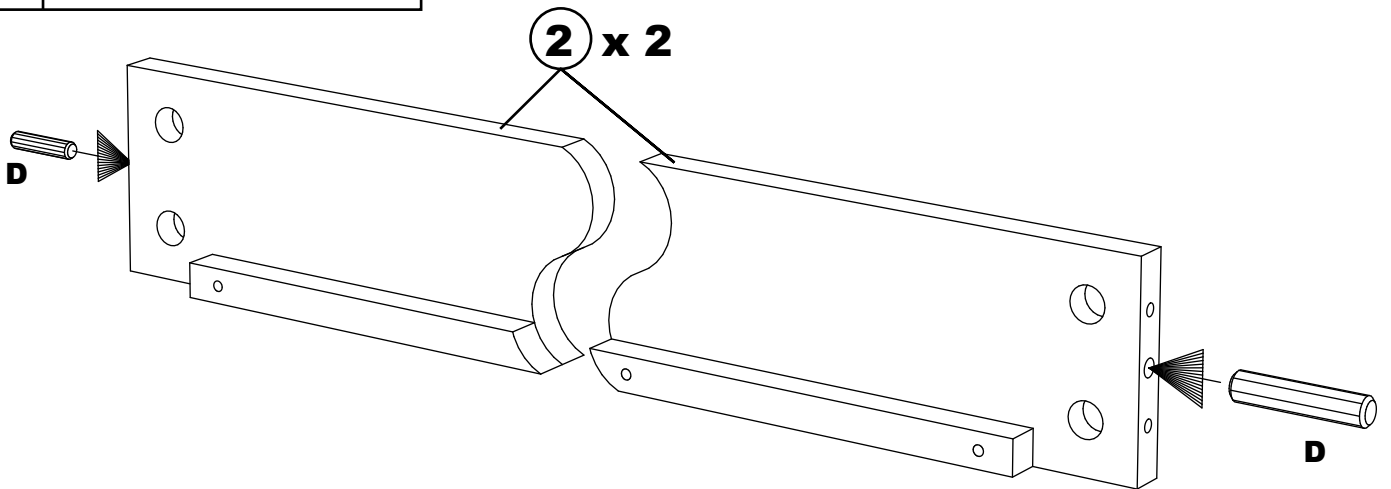


Step: 2

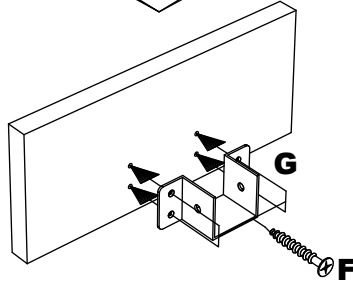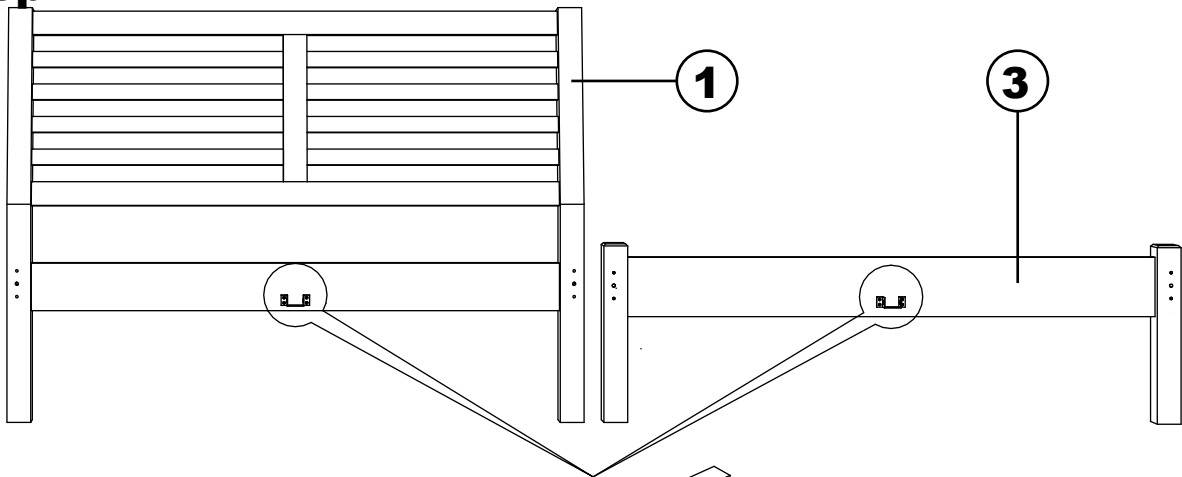

F


 $\text{\O}4 \times 15\text{mm}$ Qty: 08

G




Qty: 02

Step: 3

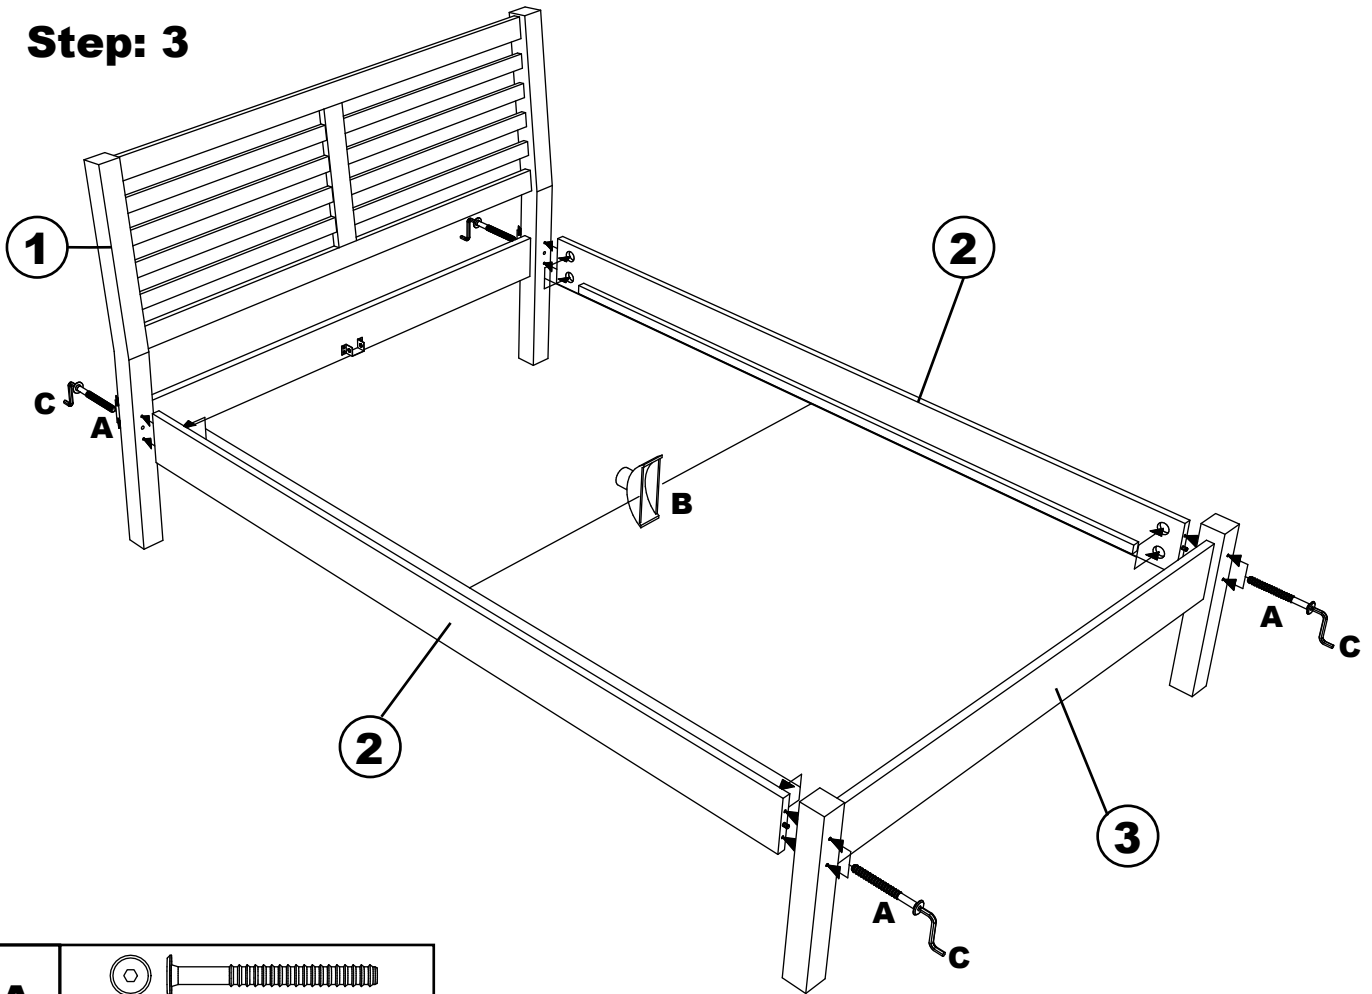

A


 $\text{\O}6 \times 70\text{mm}$ Qty: 08

B




Qty: 08





C



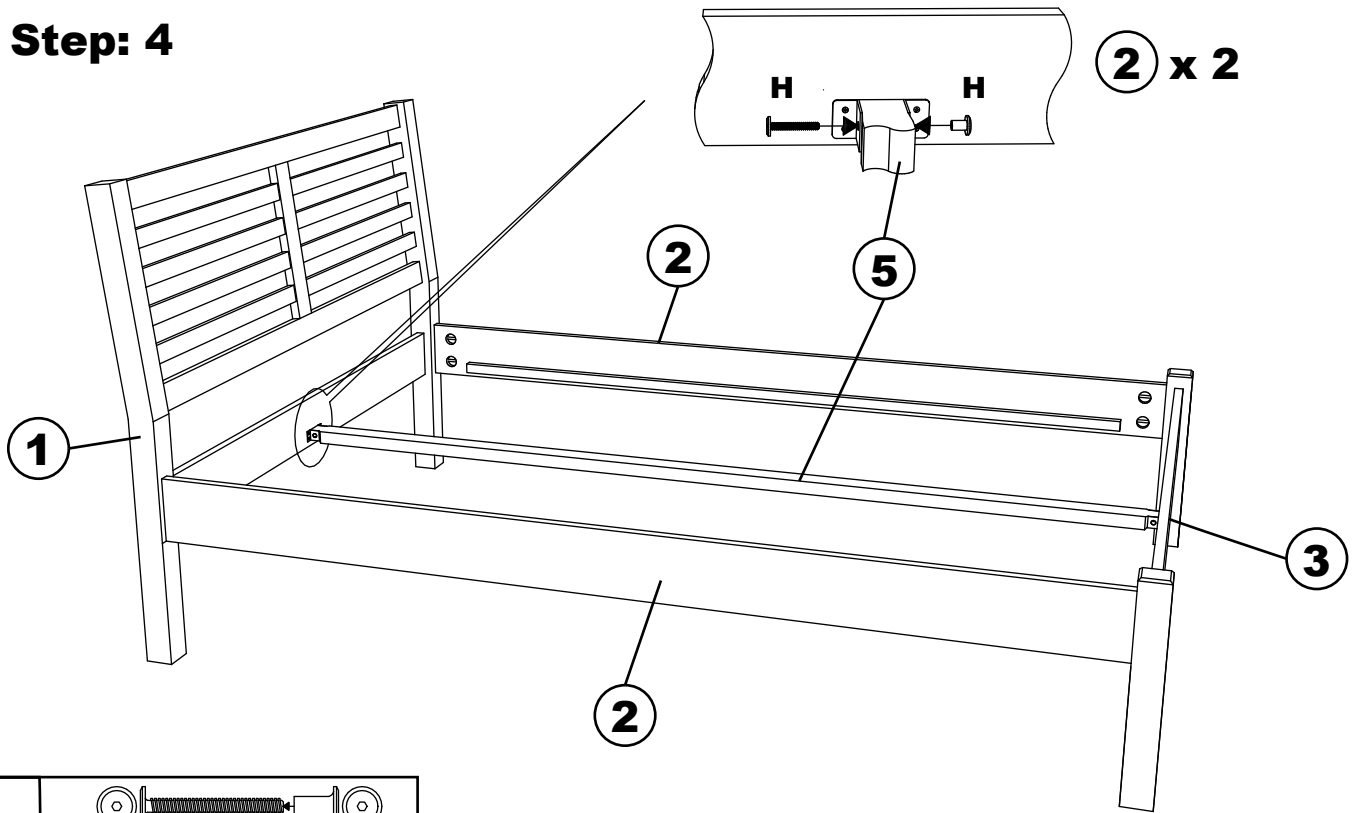

Qty: 01


Step: 4



H    
 Ø6 x 45mm Qty: 02

Step: 5

E  
 Ø4 x 30mm Qty: 24

J 
 Qty: 02

