









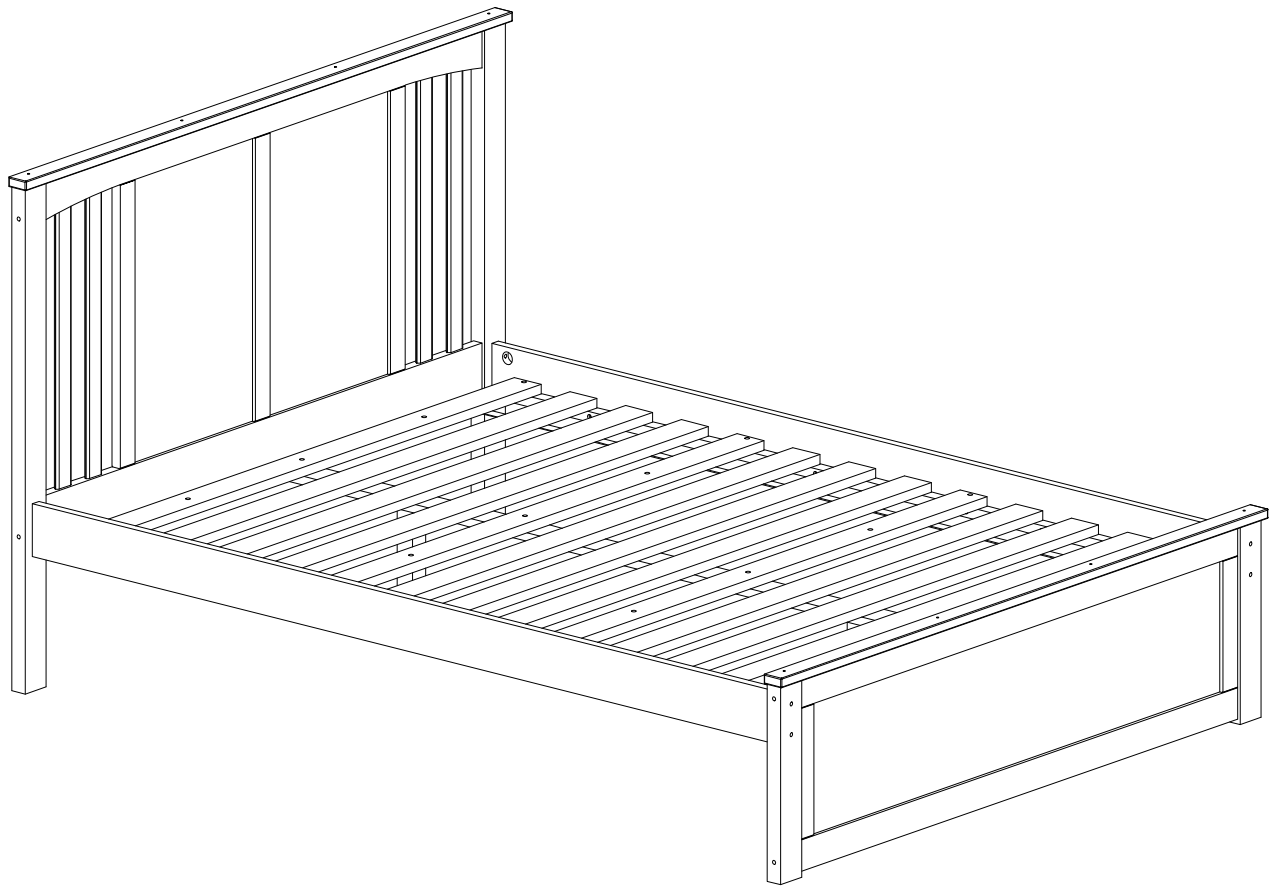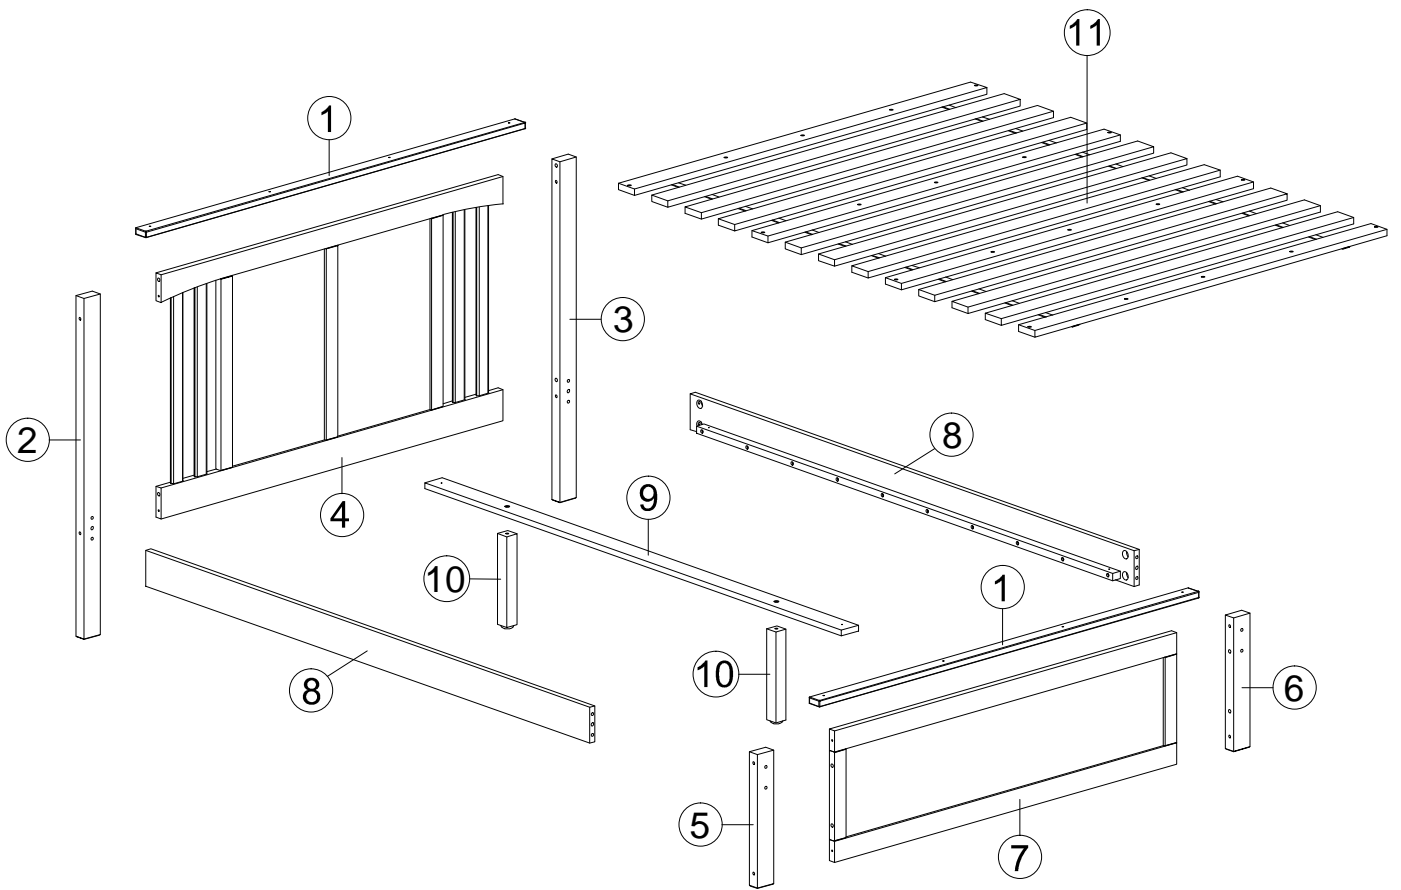


ASSEMBLY INSTRUCTIONS - 3217 FULL MISSION CAPTAINS BED







<b>A</b>	 Ø1/4" x 75mm QTY: 08	<b>D</b>	 Ø7 x 100mm QTY: 08
<b>B</b>	 Half Moon 1/4" QTY: 08	<b>E</b>	 Ø4 x 40mm QTY: 08
<b>C</b>	 Ø6 x 30mm QTY: 02	<b>F</b>	 Ø4 x 30mm QTY: 12
		<b>G</b>	 Ø10 x 40mm QTY: 12
		<b>H</b>	 Allen Key QTY: 01



## Step 01


<b>G</b>	 Ø10 x 40mm QTY: 12
----------	---

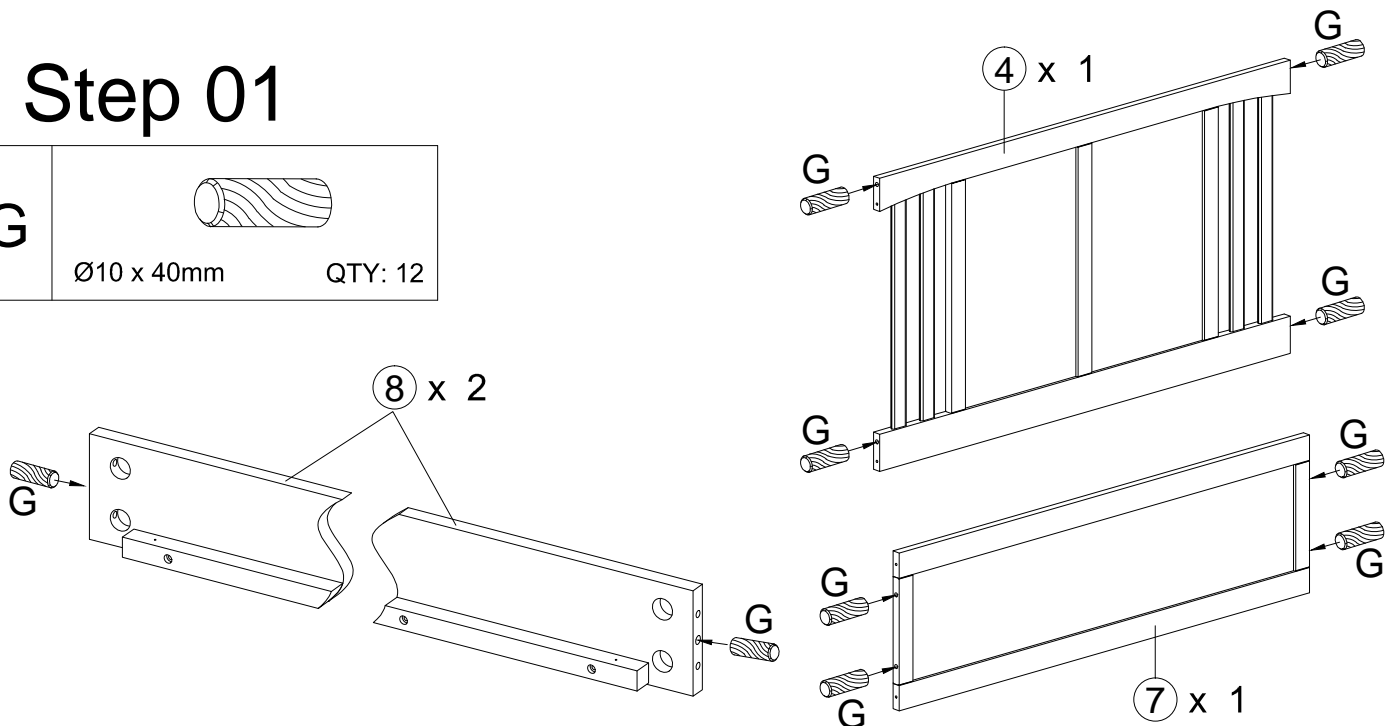


# Step 02

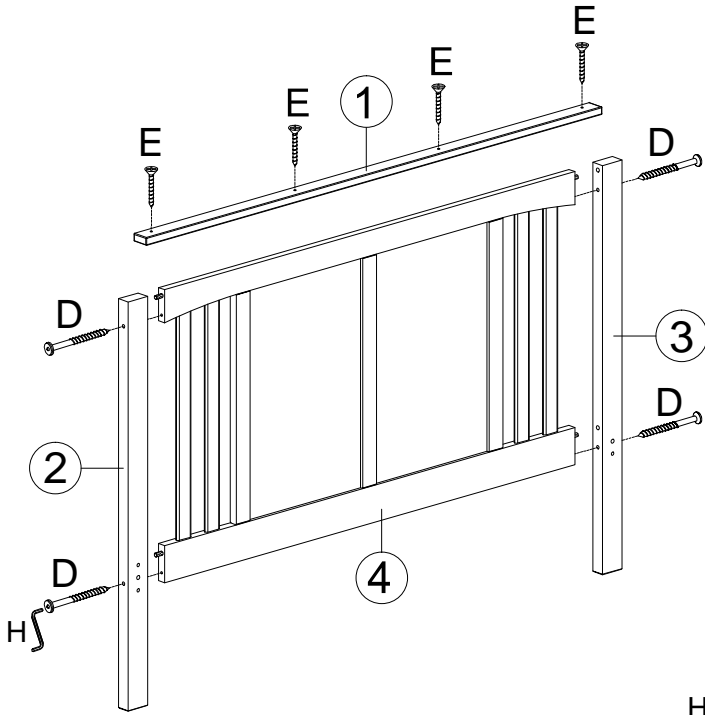



<b>D</b>		QTY: 08
<b>E</b>		QTY: 08

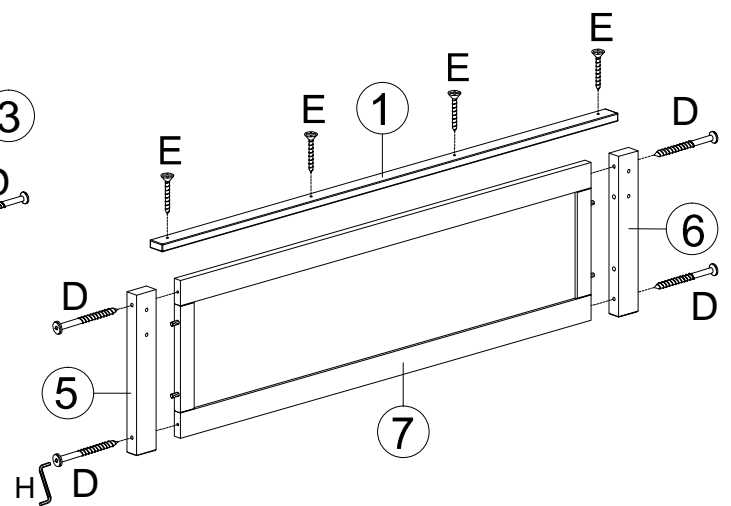



<b>H</b>		Allen Key QTY: 01
----------	---	----------------------

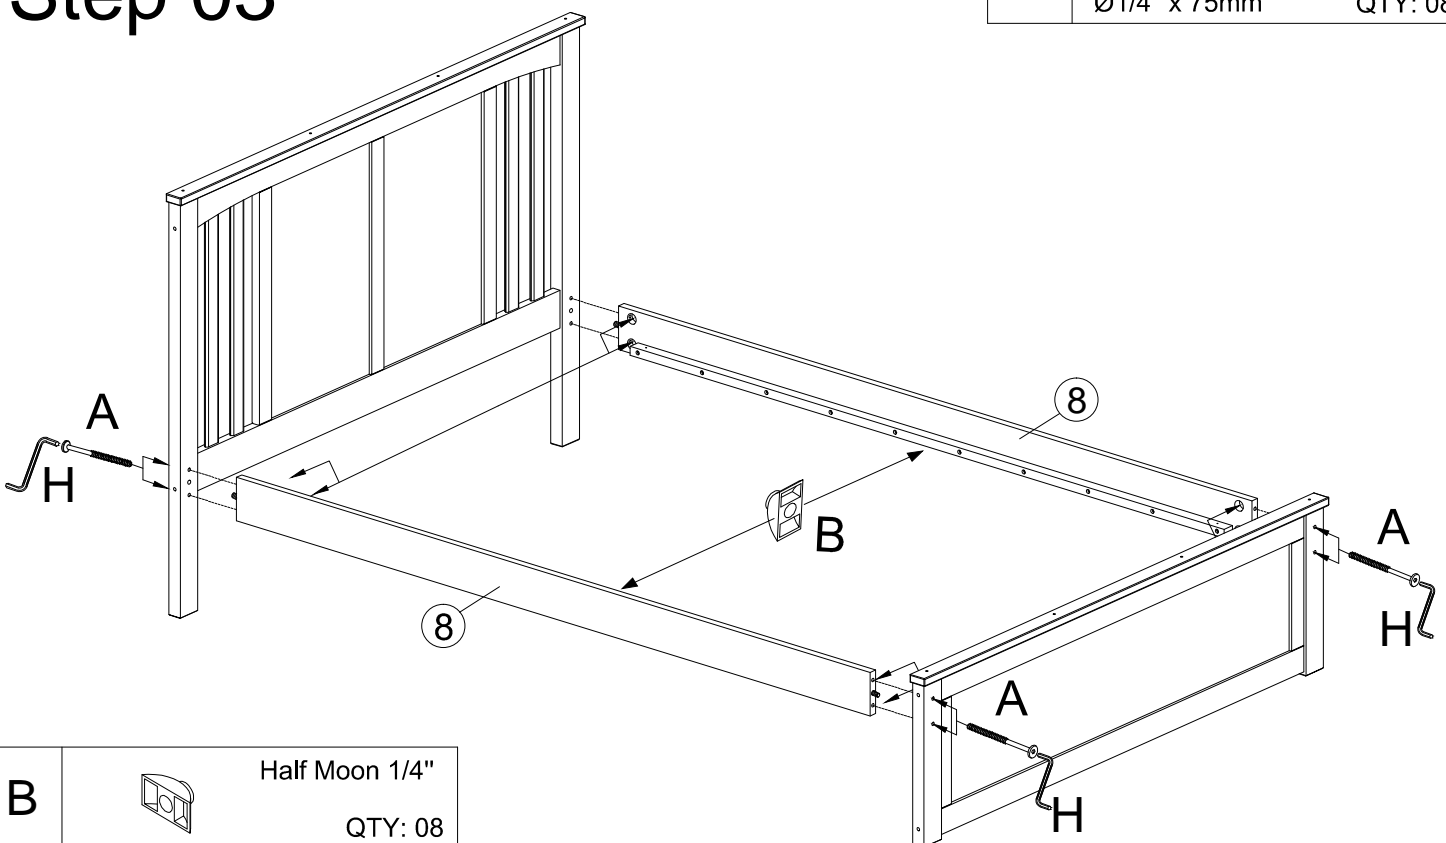
# Step 03





<b>A</b>		QTY: 08
----------	---	---------


<b>B</b>		Half Moon 1/4" QTY: 08
<b>H</b>		Allen Key QTY: 01
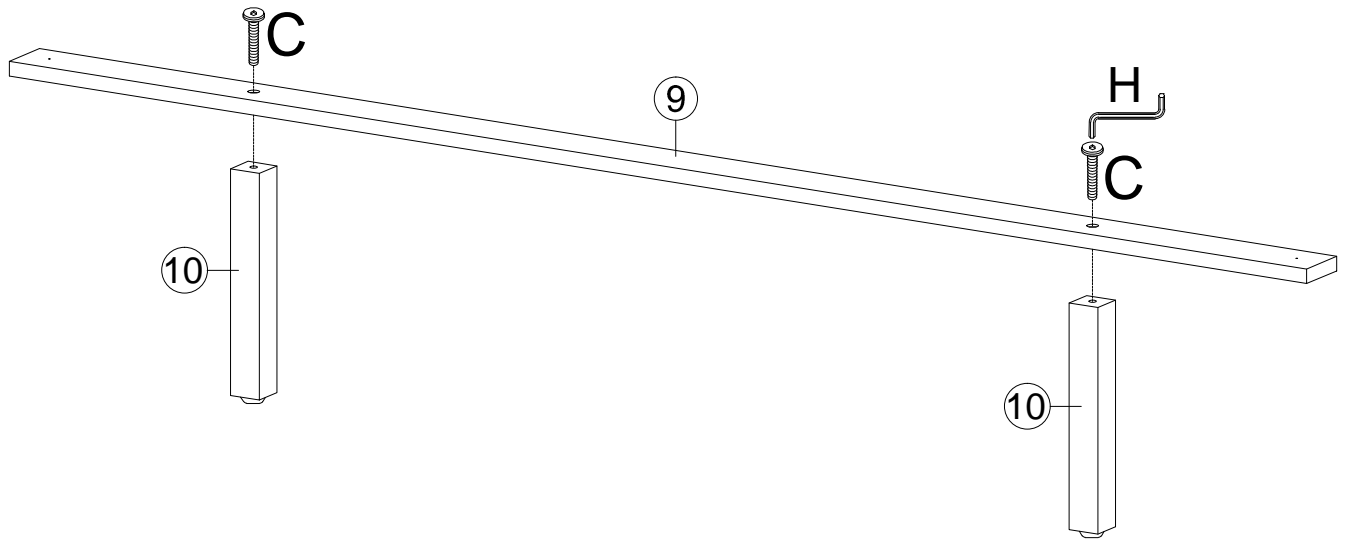
# Step 04



C	 Ø6 x 35mm	QTY: 02
H		Allen Key QTY: 01

# Step 05

F	 Ø4 x 30mm	QTY: 12
---	--	---------

