



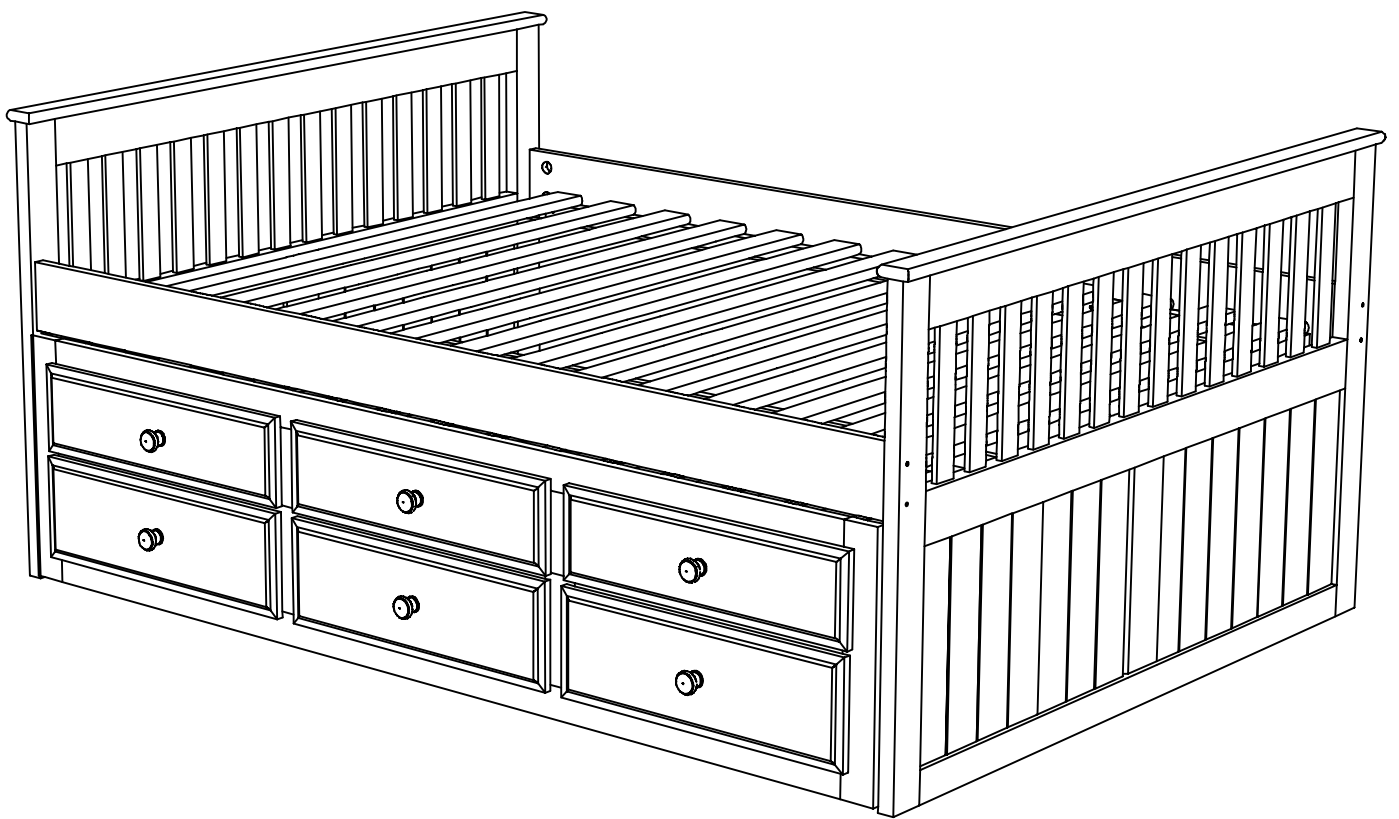


ASSEMBLY INSTRUCTIONS - TWIN MISSION CAPTAINS BED

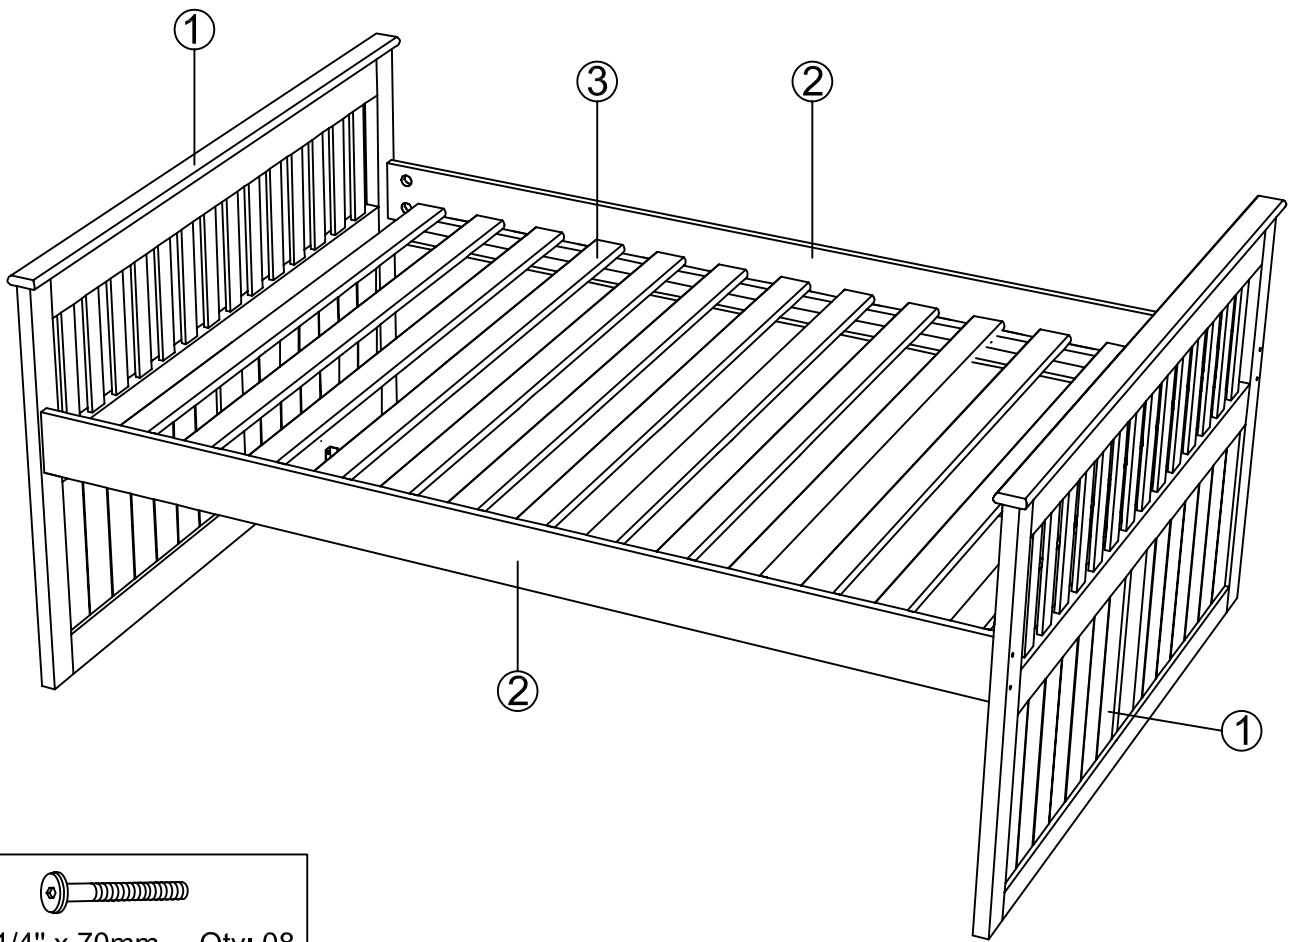





A		Ø1/4" x 70mm Qty: 08
----------	---	----------------------


B		Half Moon 1/4" Qty: 08
----------	---	------------------------

D		Ø10x40mm Qty: 04
----------	---	------------------


I		Allen Key Qty: 01
----------	---	-------------------



E		Ø4x30 mm Qty: 08
----------	---	------------------


G		Ø3.5x 20mm Qty: 04
----------	--	--------------------


F		Qty: 02
----------	--	---------

Step 01

D		Ø10x40mm Qty: 04
----------	---	------------------

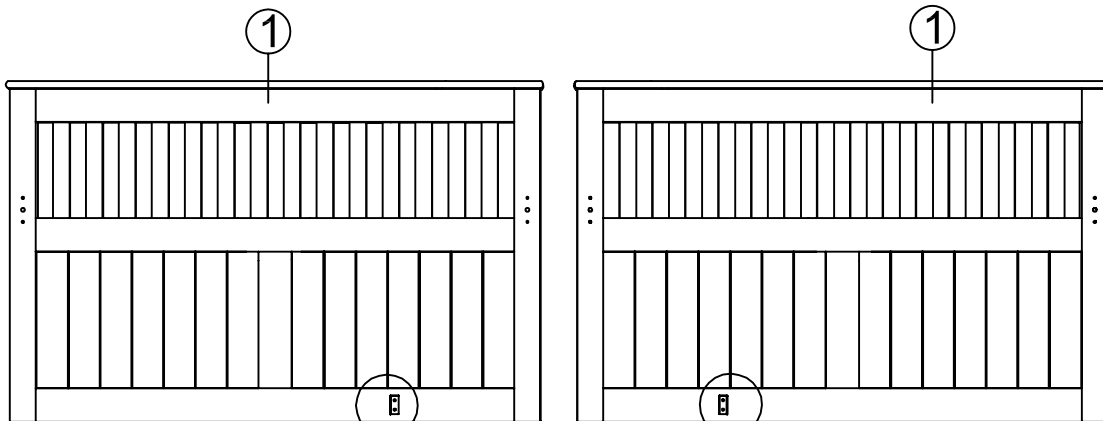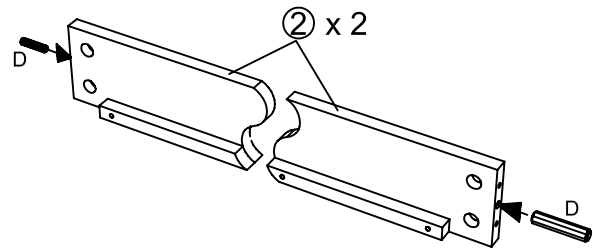

G		Ø3.5x 20mm Qty: 04
----------	---	--------------------


F		Qty: 02
----------	---	---------

Step 02

A



Ø1/4" x 70mm Qty: 08

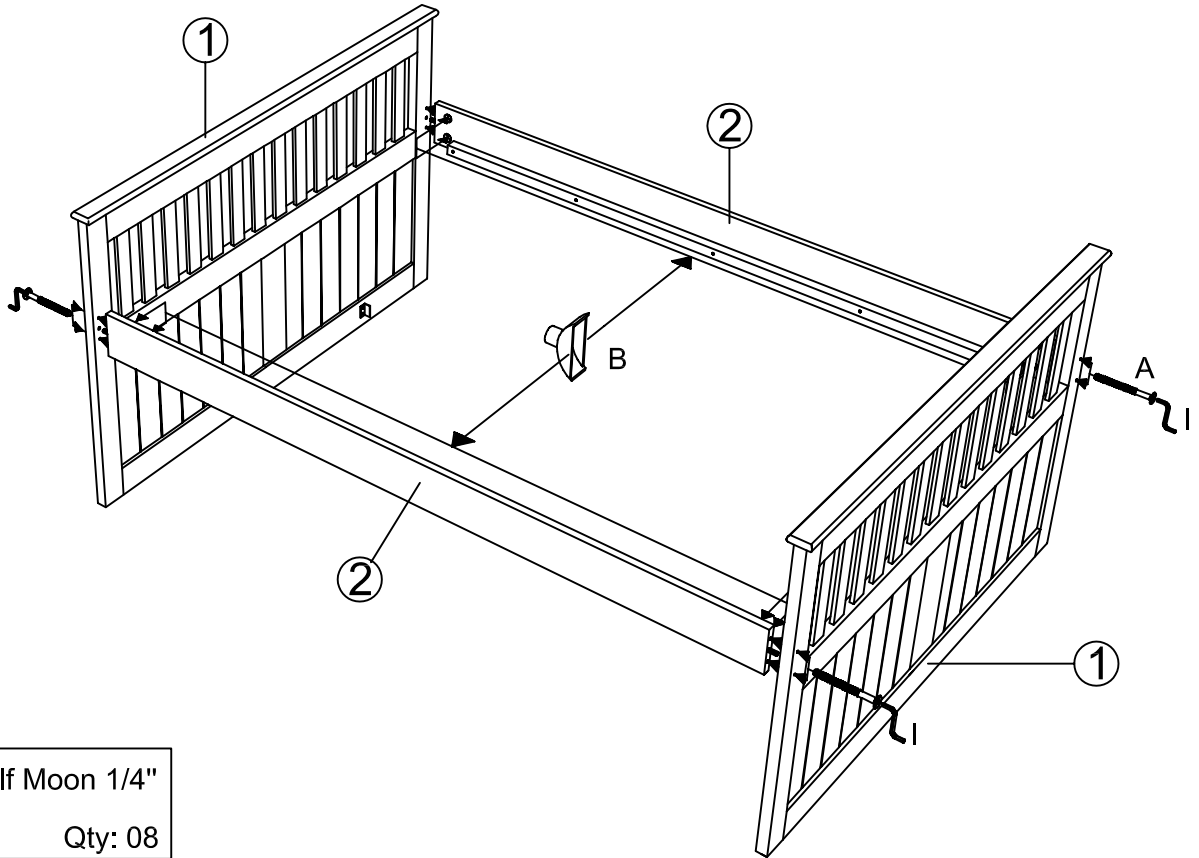

B



Half Moon 1/4"

Qty: 08

I




Allen Key


Qty: 01


Step 03









E




Ø4x30 mm Qty: 08

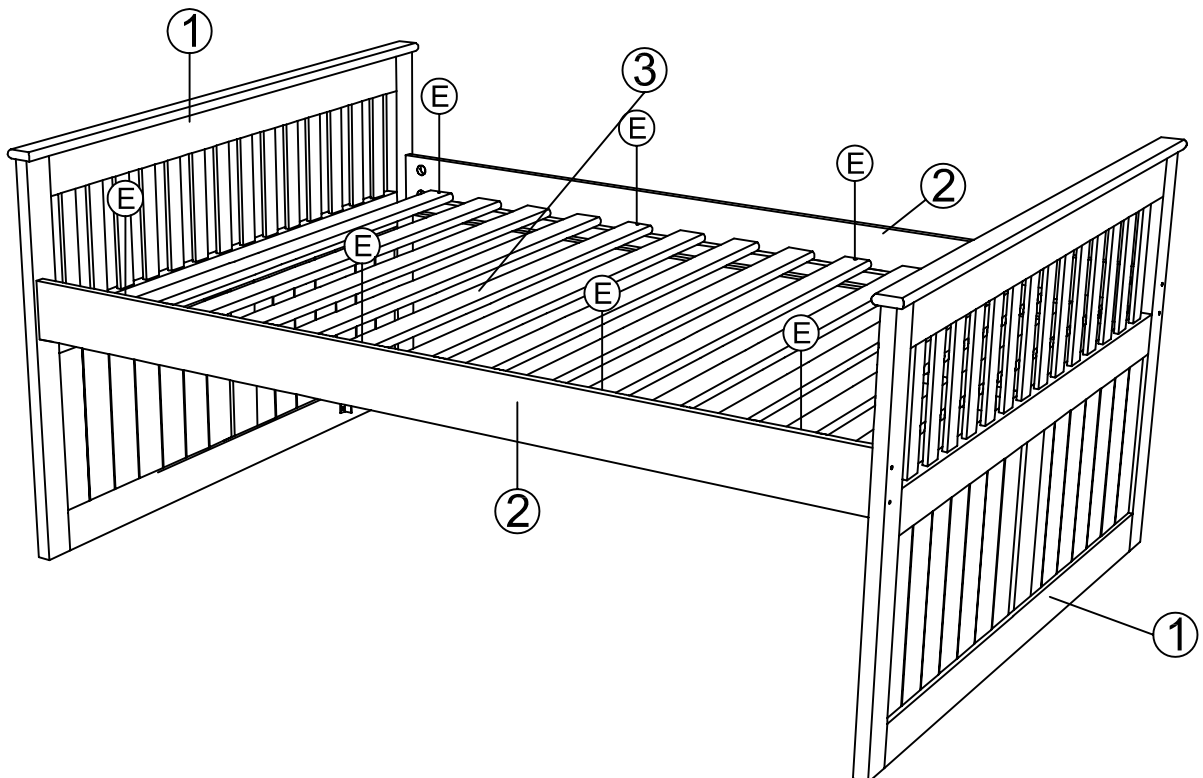


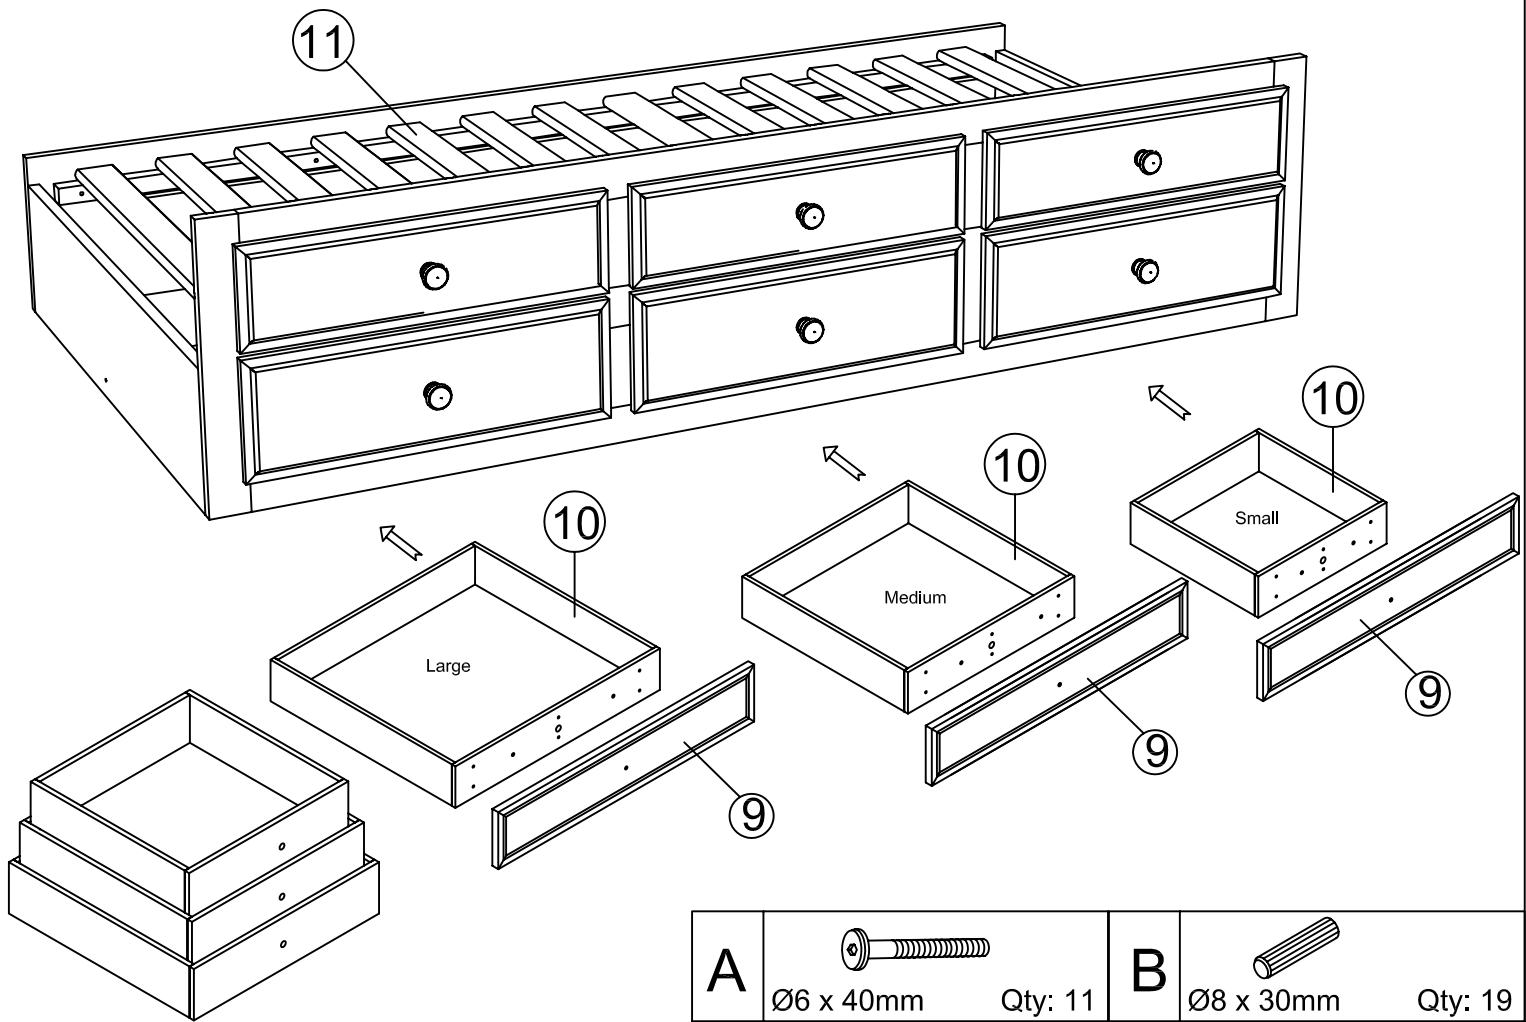


A	 Ø6 x 40mm	Qty: 11	B	 Ø8 x 30mm	Qty: 19
C	 Ø4 x 35mm	Qty: 23	D	 Ø4x25 mm	Qty: 18
E		Qty: 06	F	 Ø8 x 20mm	Qty: 06
G		Qty: 04	H	 Ø3x15mm	Qty: 16

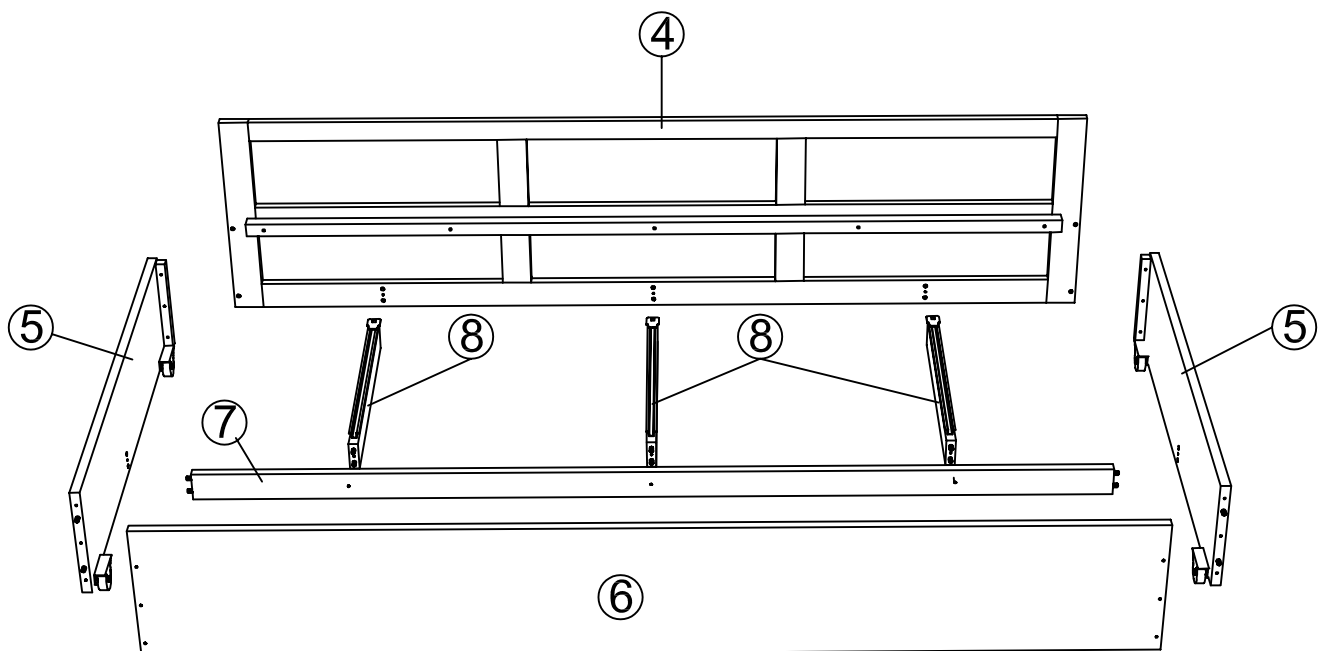







Step 01


B		Qty: 19
Ø8 x 30mm		


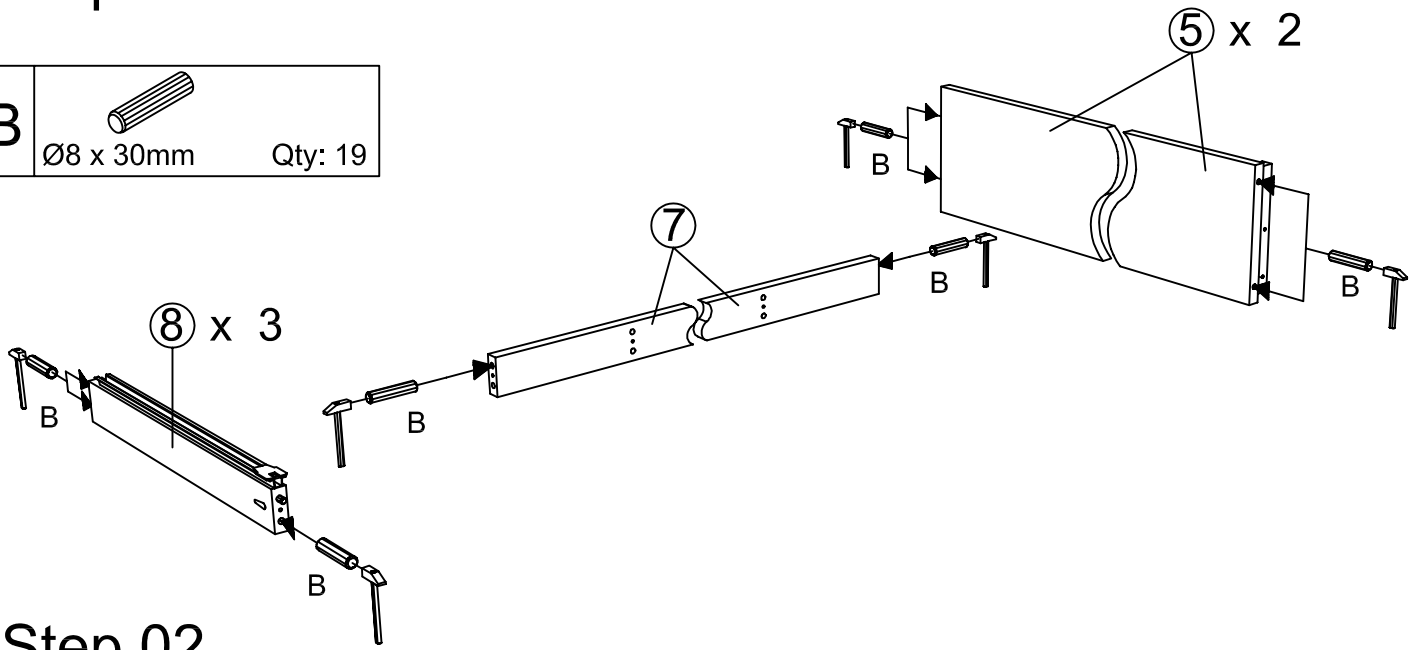






Step 02

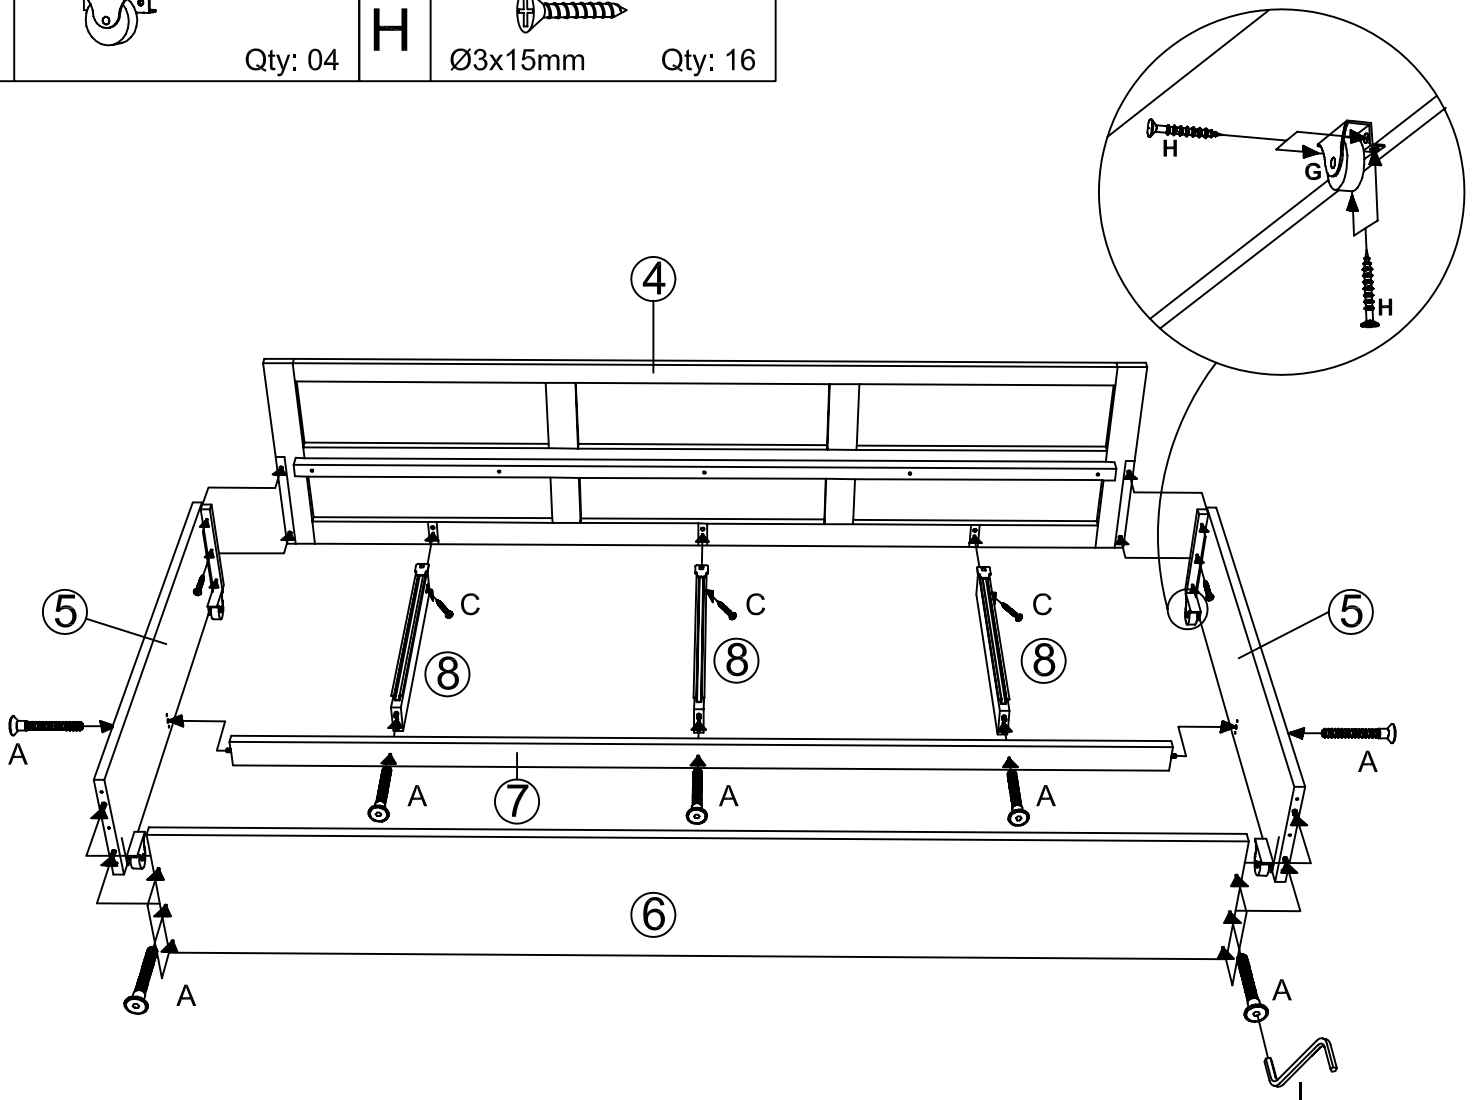A		Qty: 11	C		Qty: 9	I		Allen Key	Qty: 01
Ø6 x 40mm			Ø4 x 35mm						
G		Qty: 04	H		Qty: 16				
			Ø3x15mm						

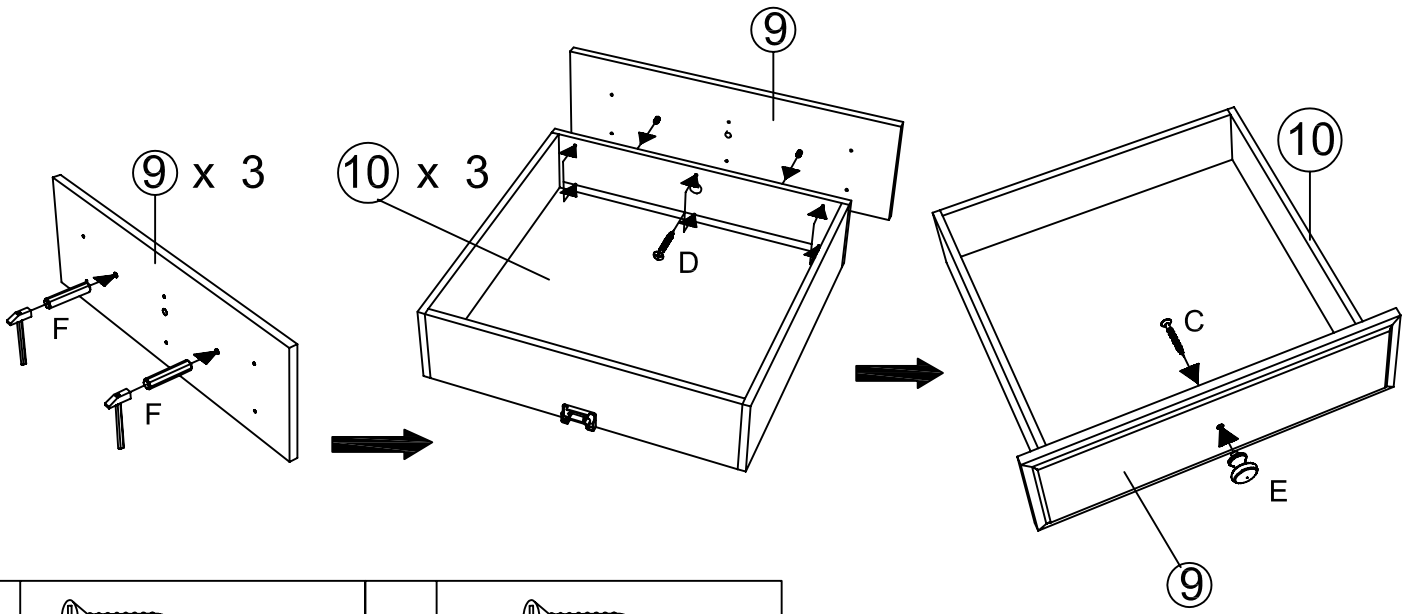



C	 Ø4 x 35mm	Qty: 6	D	 Ø4x25 mm	Qty: 18
E		Qty: 06	F	 Ø8 x 20mm	Qty: 06

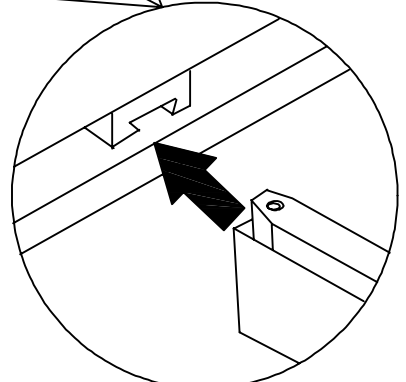
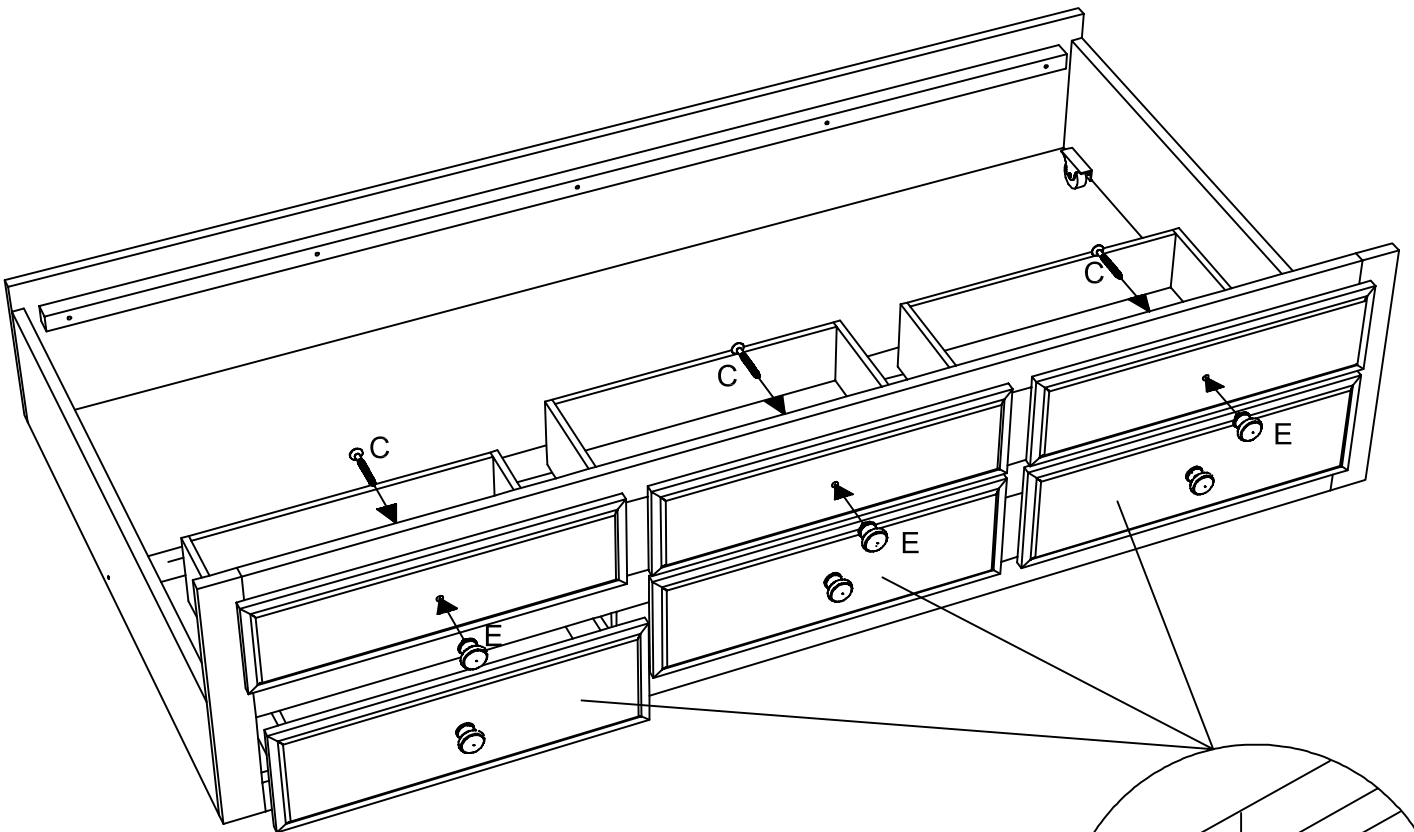


C





Ø4 x 35mm

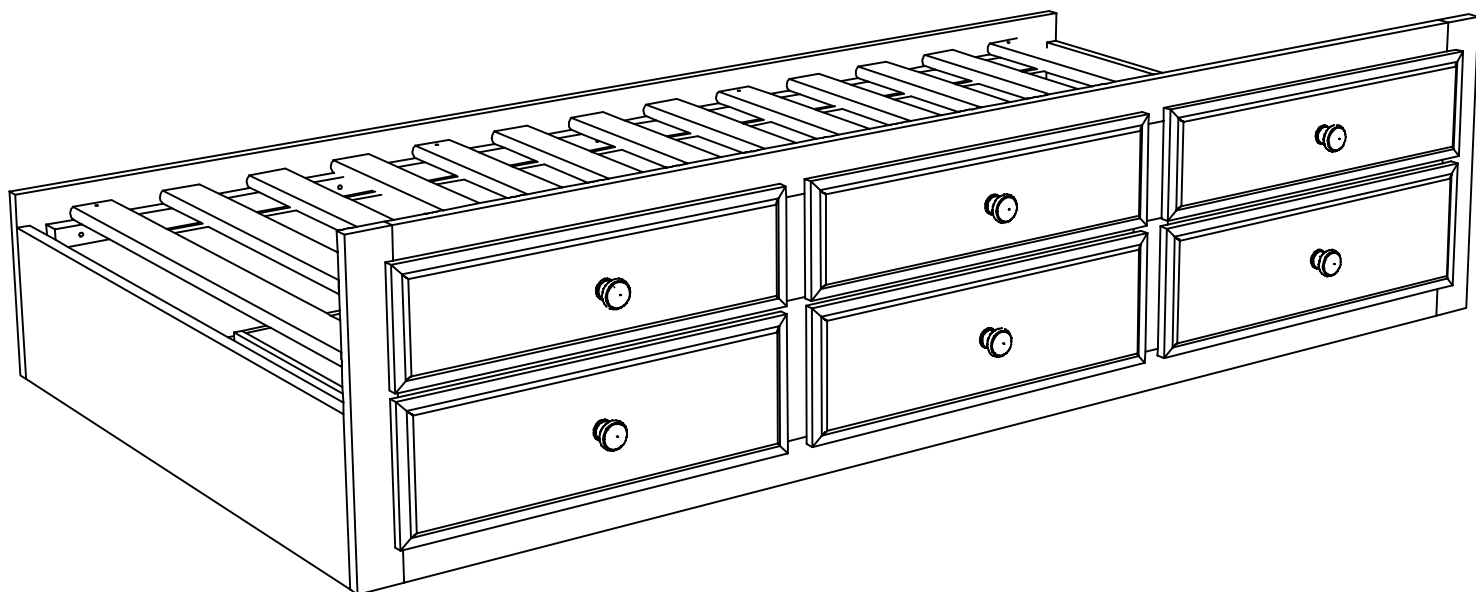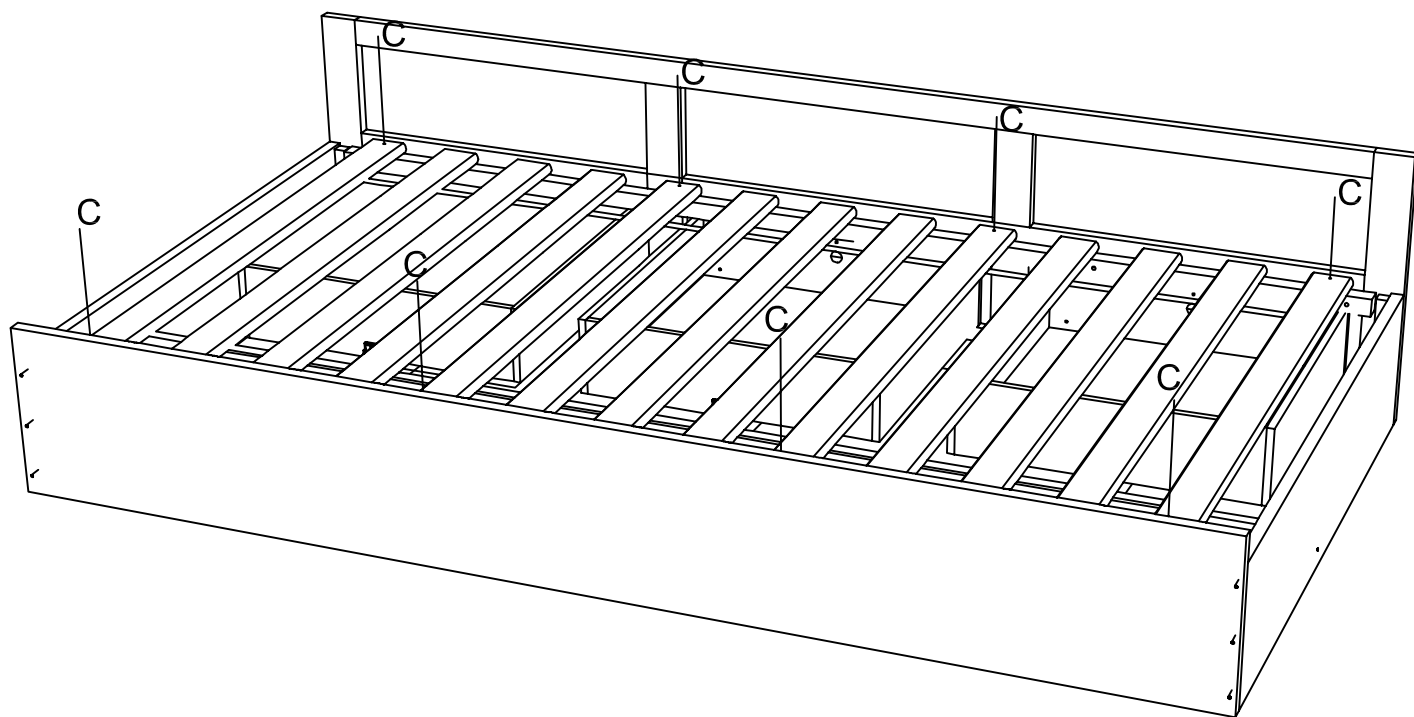








Qty: 8

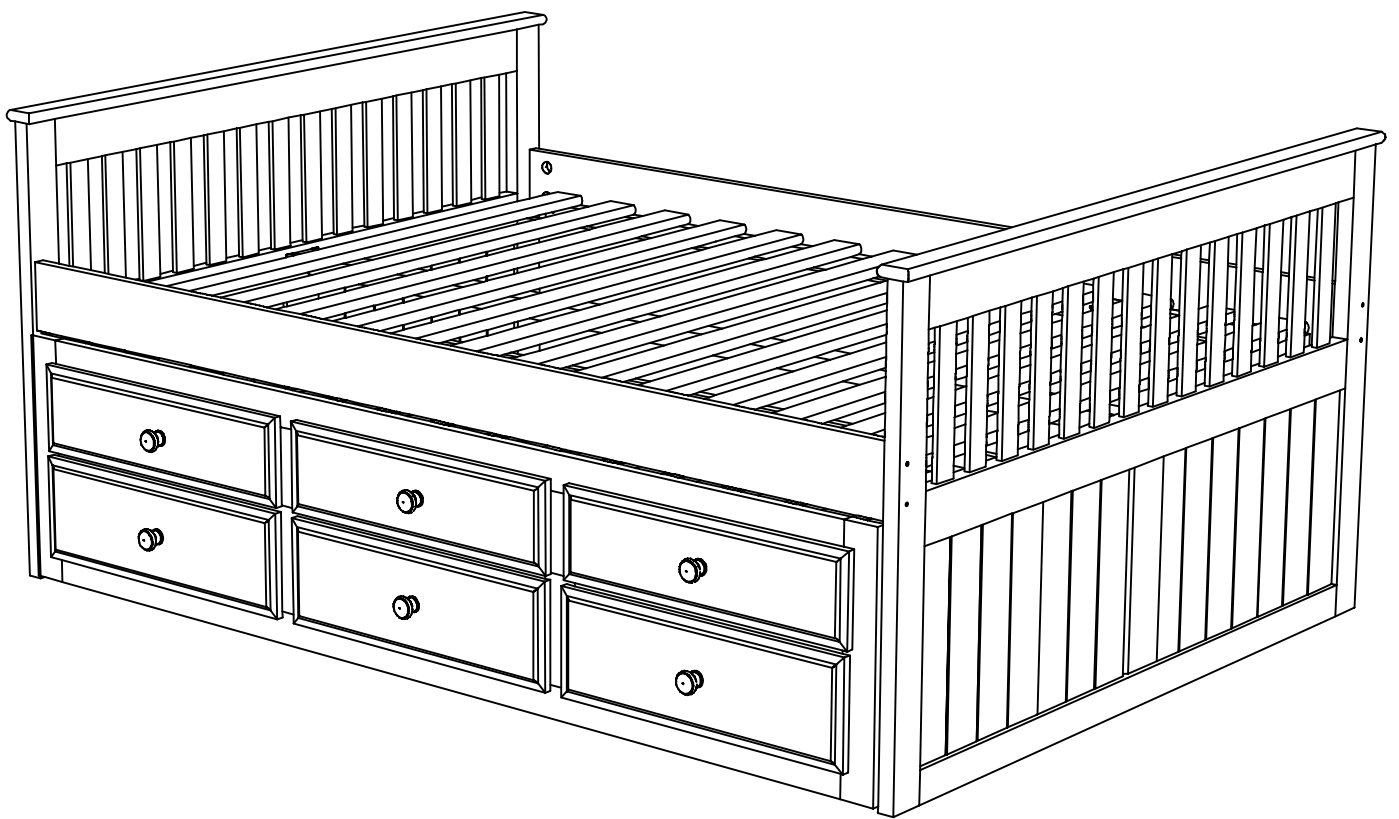


ASSEMBLY INSTRUCTIONS - FULL MISSION CAPTAINS BED

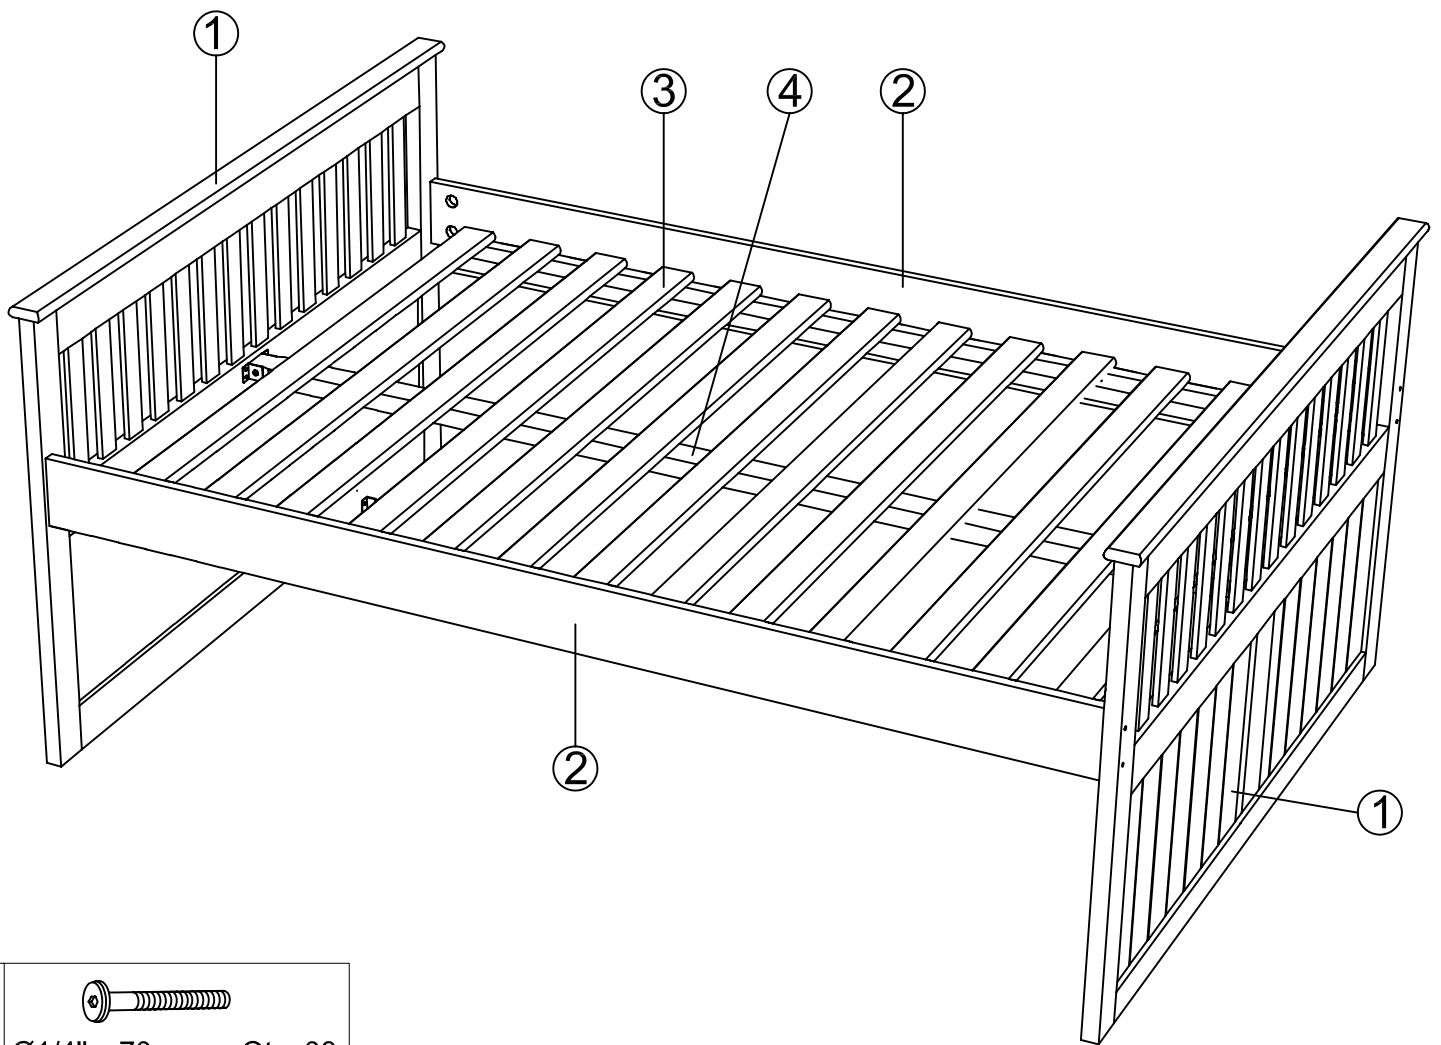




A	 Ø1/4" x 70mm Qty: 08	B	 Half Moon 1/4" Qty: 08	D	 Ø10x40mm Qty: 04	G	 Ø3.5x 20mm Qty: 12	I	 Allen Key Qty: 01	E	 Ø4x30 mm Qty: 08	H	 Qty: 02	F	 Qty: 02	J	 Ø6x45 mm Qty: 02
----------	---	----------	--	----------	---	----------	---	----------	--	----------	---	----------	--	----------	---	----------	--


Step 01

D	 Ø10x40mm Qty: 04
----------	---

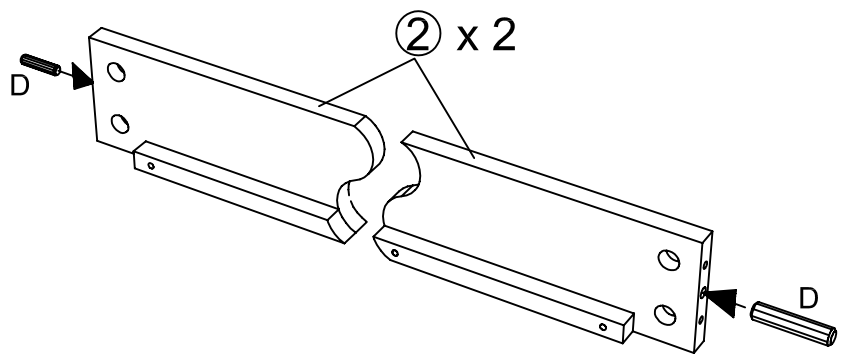


Step 02


H




Qty: 02

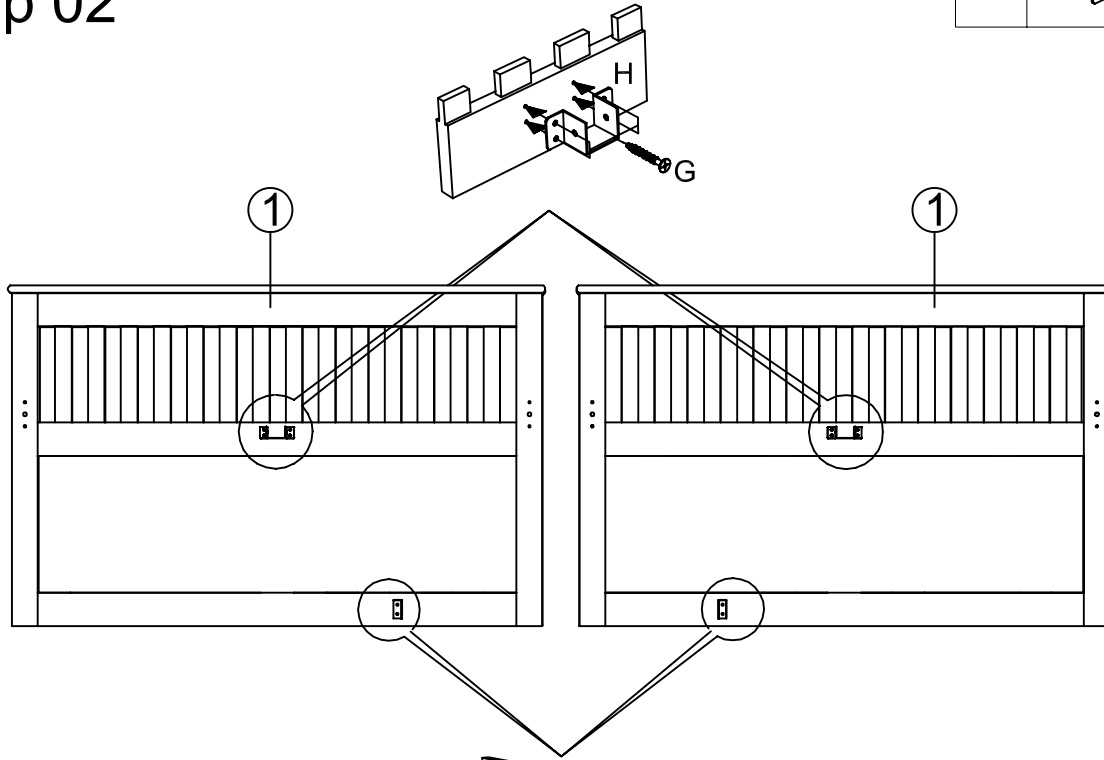


F



Qty: 02

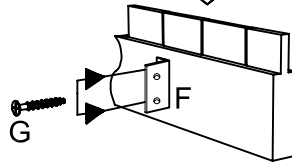

G



Ø3.5x 20mm


Qty: 12

Step 03

A



Ø1/4" x 70mm Qty: 08

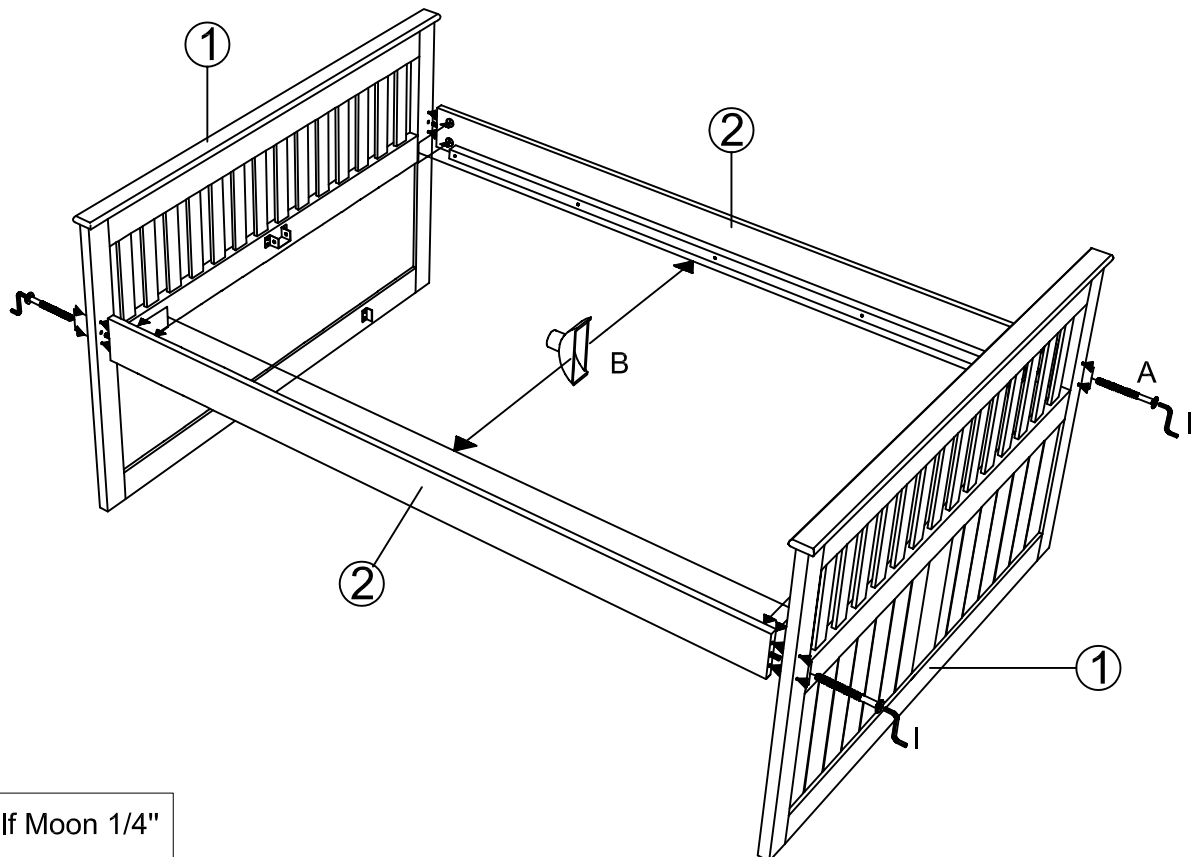

B



Half Moon 1/4"

Qty: 08


I



Allen Key

Qty: 01

Step 04

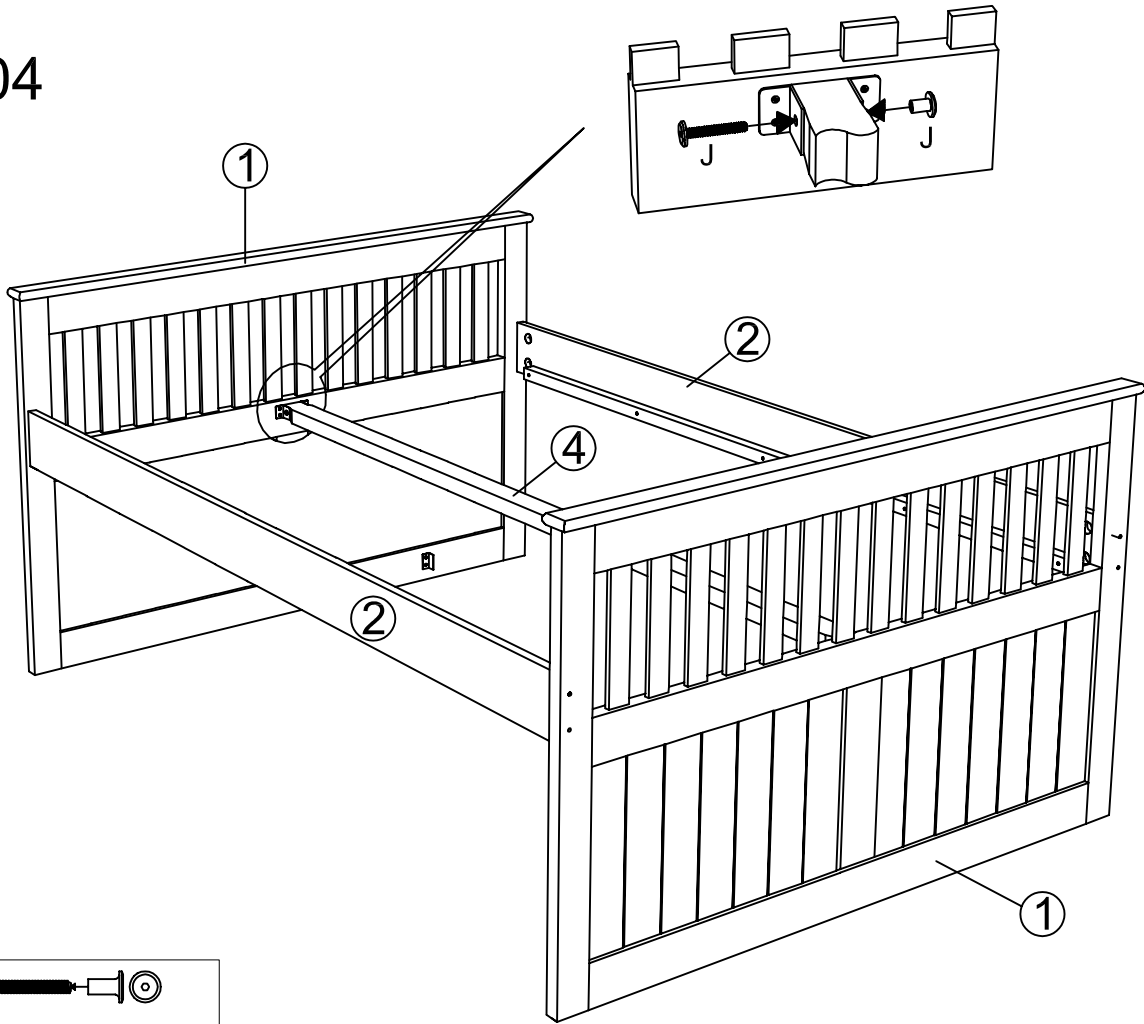


J




Ø6x45 mm

Qty: 02

Step 05

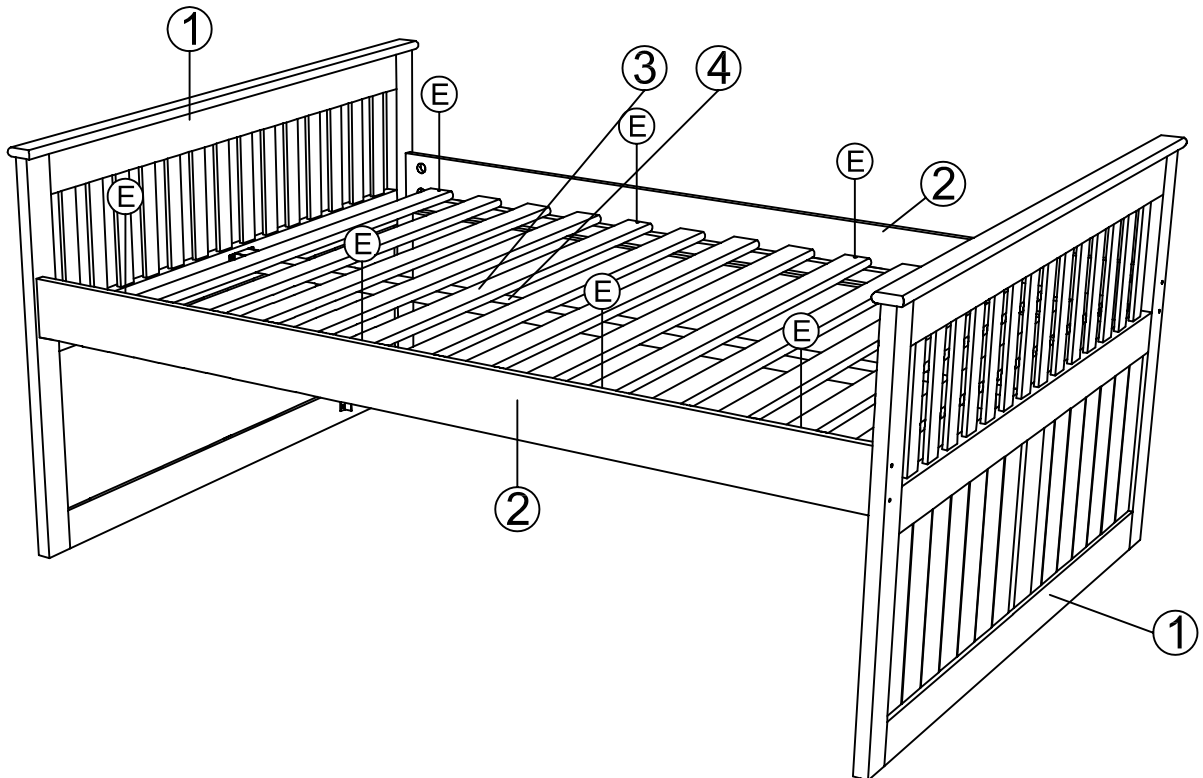










E




Ø4x30 mm


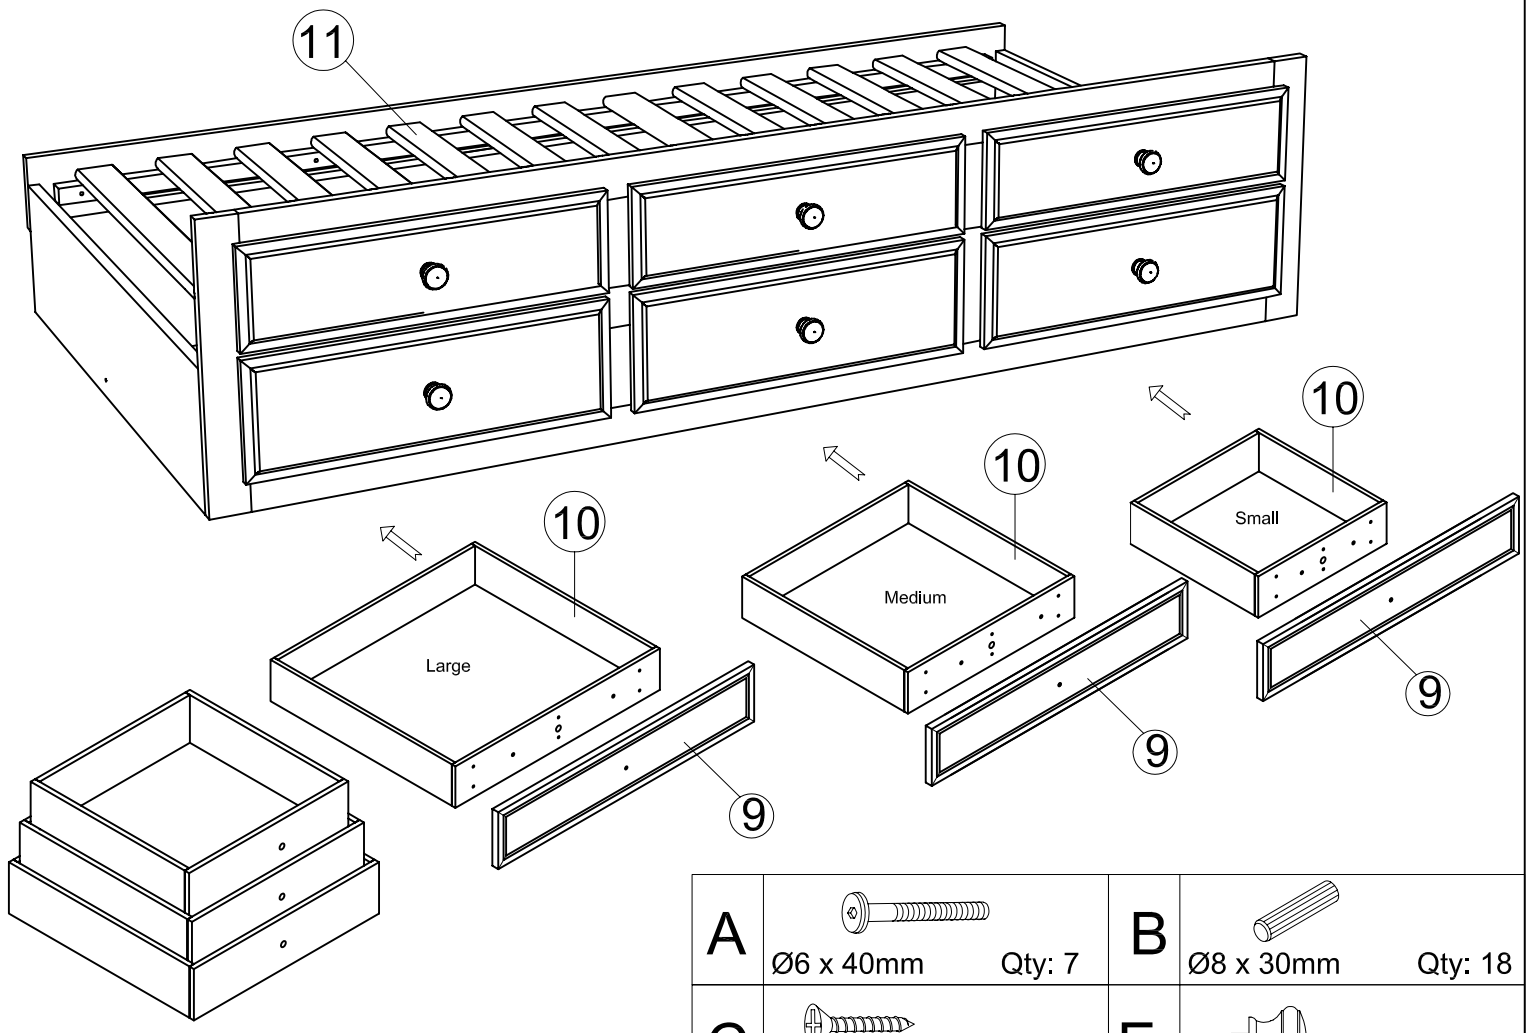
Qty: 08




A	 Ø6 x 40mm	Qty: 7	B	 Ø8 x 30mm	Qty: 18
C	 Ø4 x 30mm	Qty: 41	E	 Qty: 06	
F	 Ø8 x 20mm	Qty: 06	G	 Qty: 04	
H	 Ø3x15mm	Qty: 16	I	 Ø10 x 40mm	Qty: 4


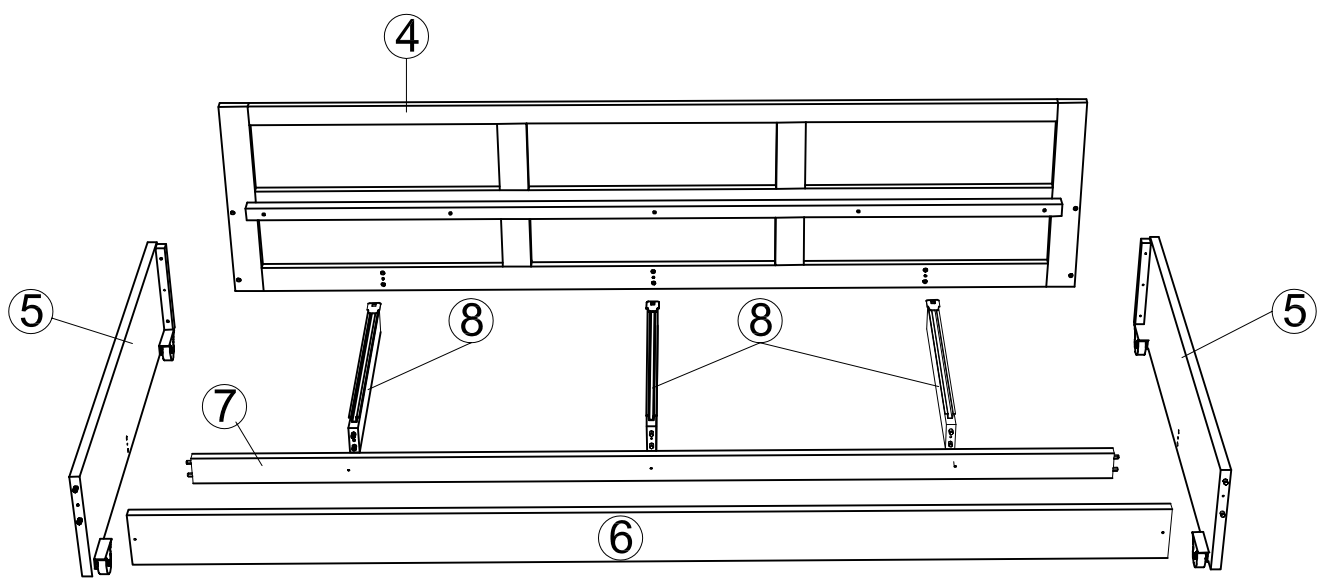





Step 01


B	 Ø8 x 30mm	Qty: 18
I	 Ø10 x 40mm	Qty: 4

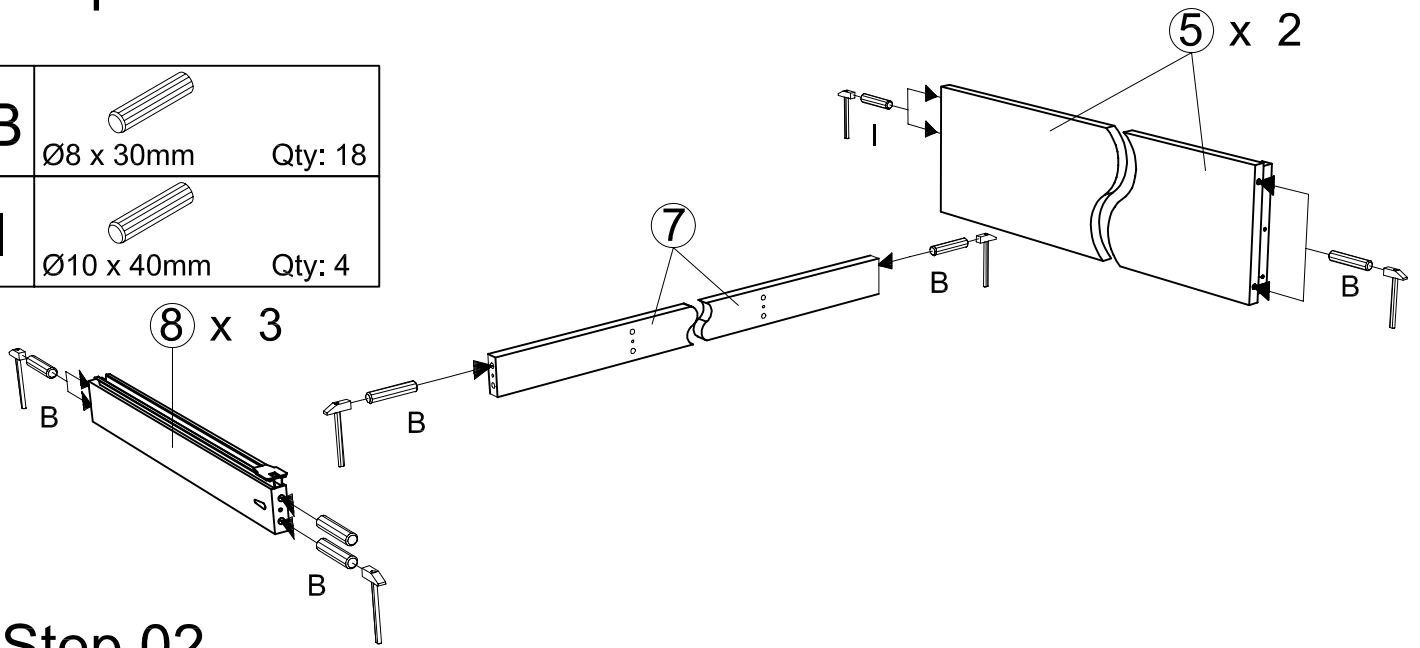


Step 02

A	 Ø6 x 40mm	Qty: 7	C	 Ø4 x 30mm	Qty: 9
G	 Qty: 04		H	 Ø3x15mm	Qty: 16

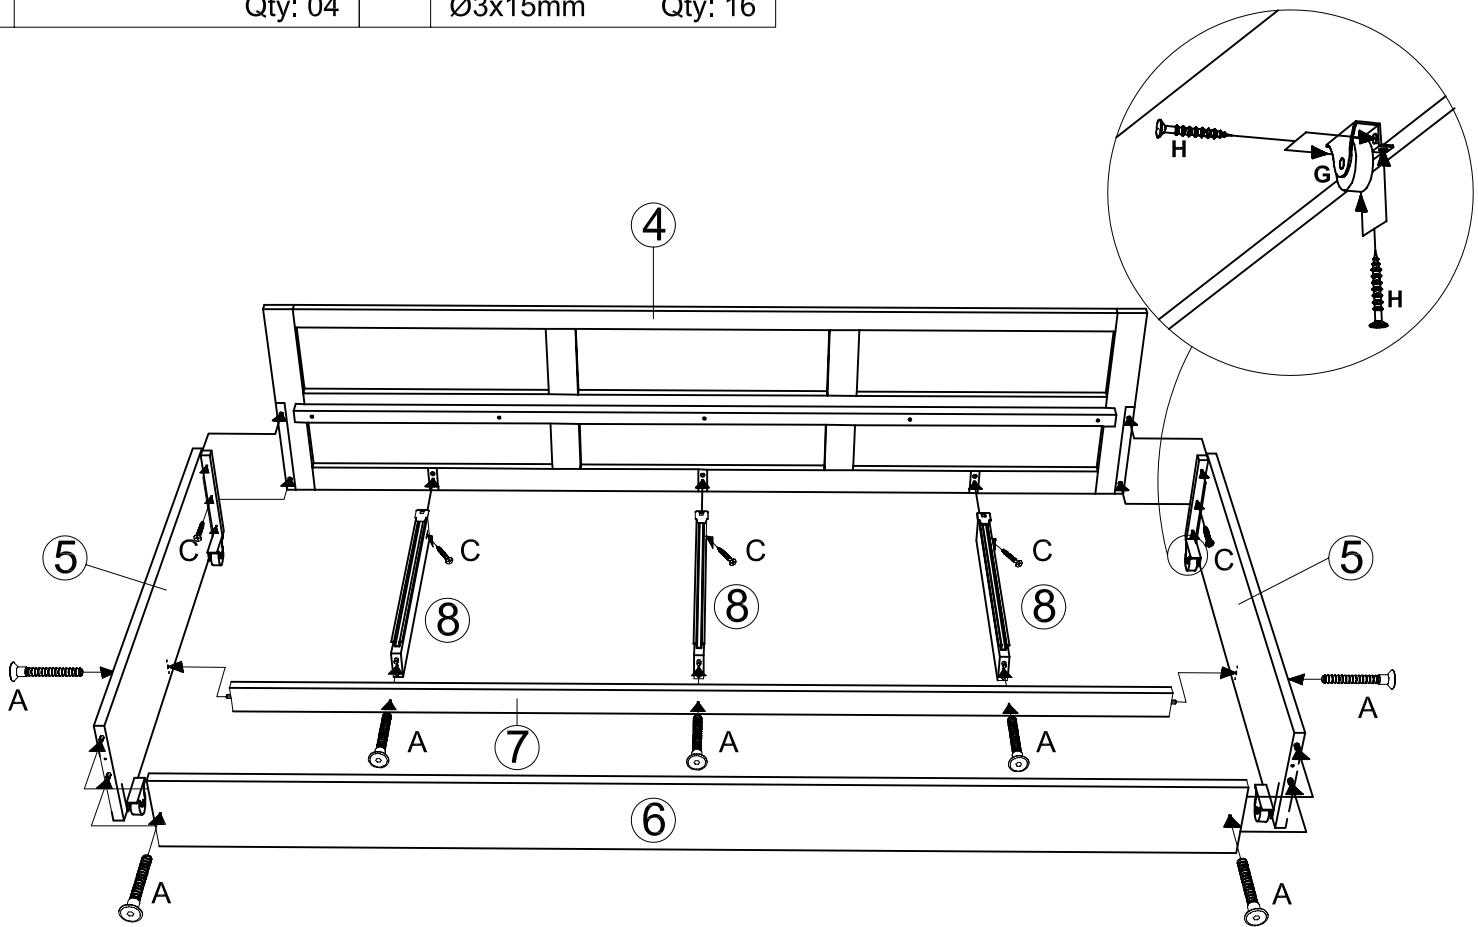

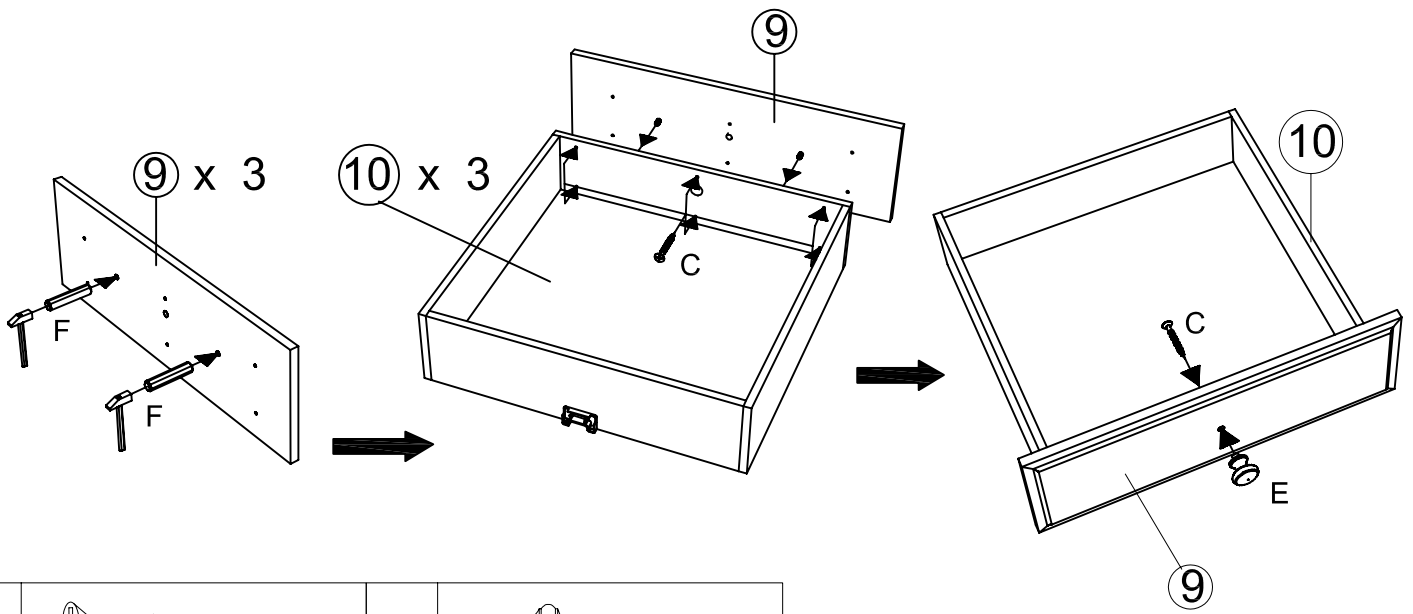

C




Qty: 24

E





Qty: 06


F



Qty: 06

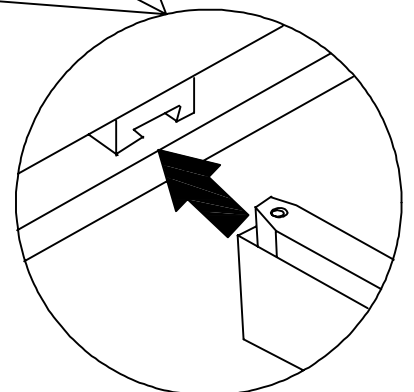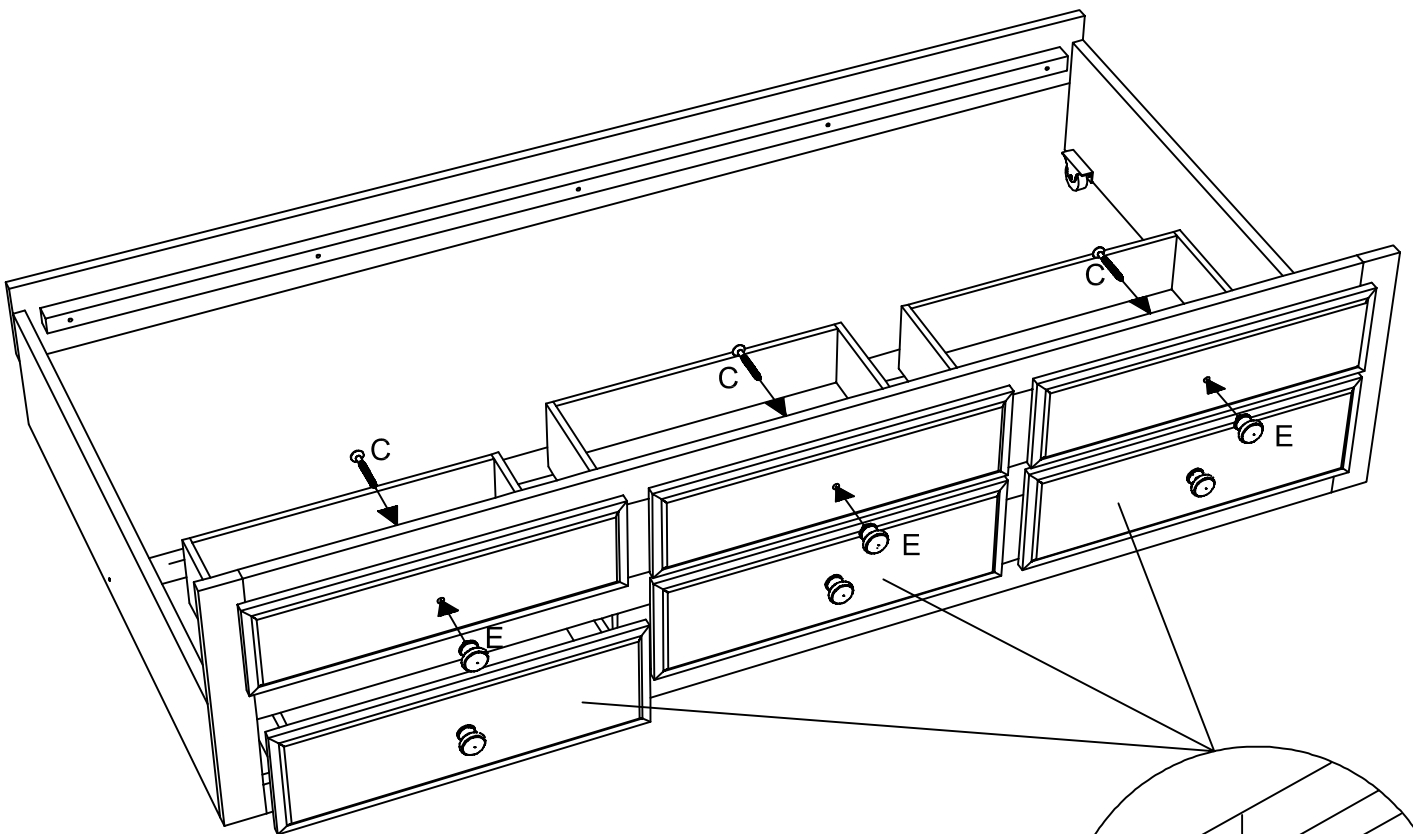

C



Ø4 x 30mm

Qty: 8

