


ASSEMBLY INSTRUCTIONS


153 FULL PROMO BED

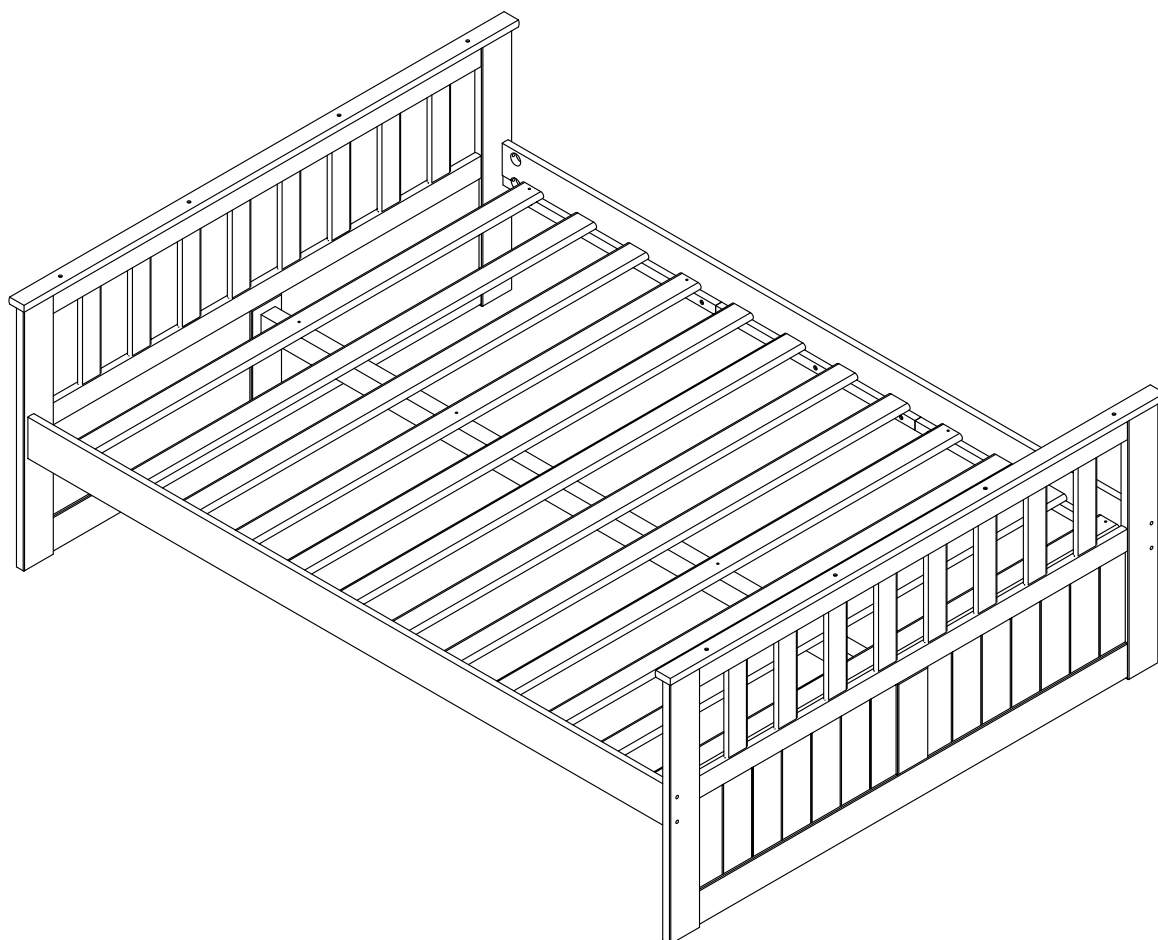


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



Tool Required




(Phillips Key) (Hammer)
(Not Includ) (Not Includ)




IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part list: 153 FULL PROMO BED

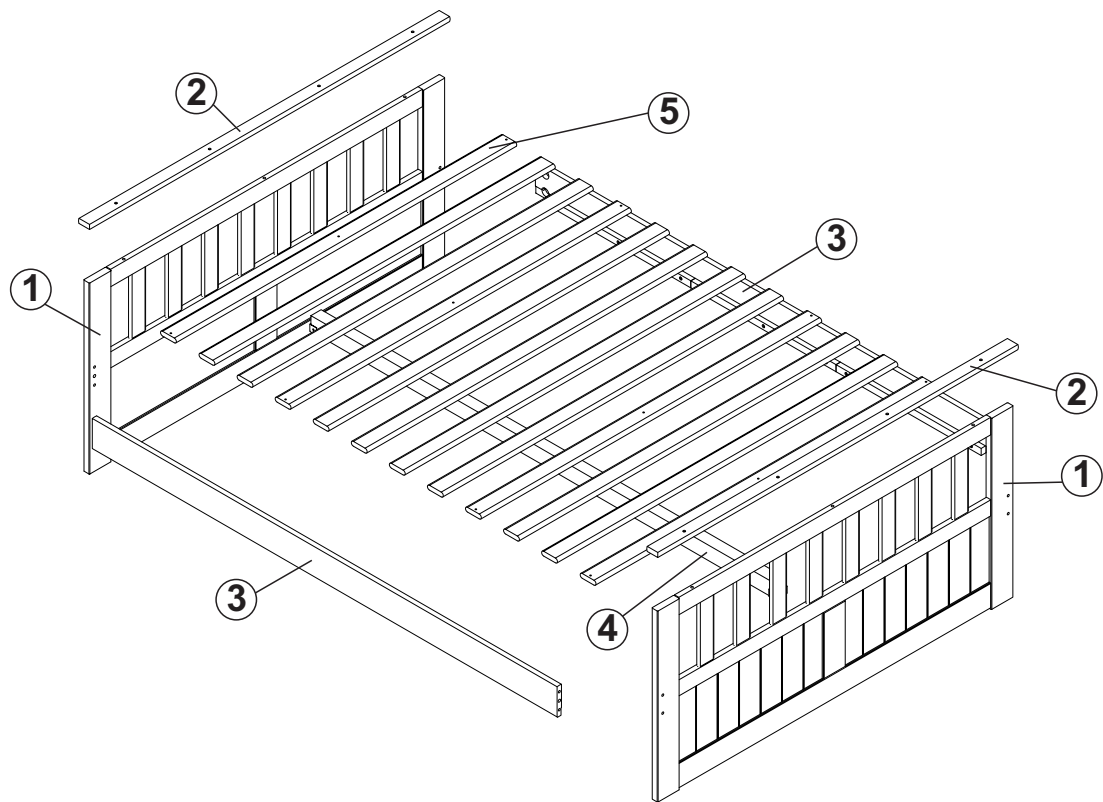

Identifying the Hardware/part list- Identify the hardware using the illustrations below.


A  Qty **08**
1/4 x 70 Screw

B  Qty **08**
1/4" Half Moon

C  Qty **20**
4,0 x 35 Screw

D  Qty **01**
Allen Key



E  Qty **12**
3,5 x 16 Screw

F  Qty **02**

G  Qty **04**
10 x 40 Wood Dowel


H  Qty **06**
8 x 30 Wood Dowel

01

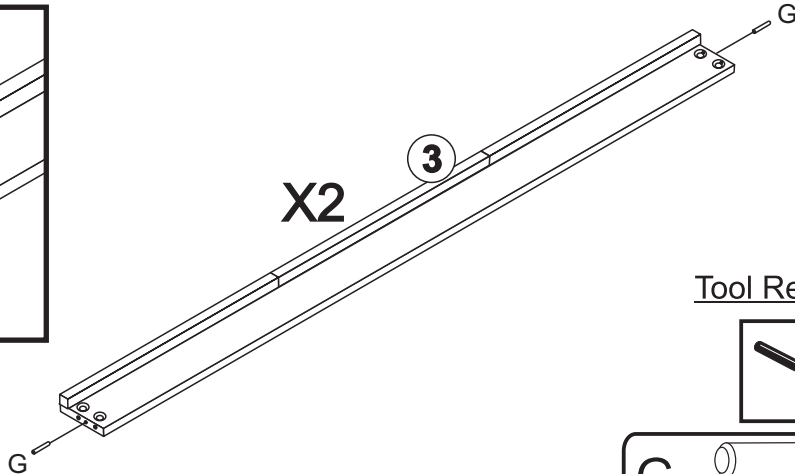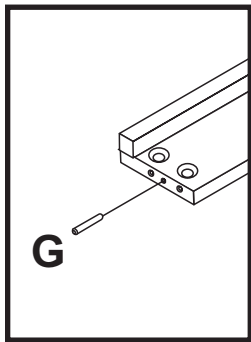

Tool Required




G  Qty **04**
10x40 Wood Dowel


IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

02

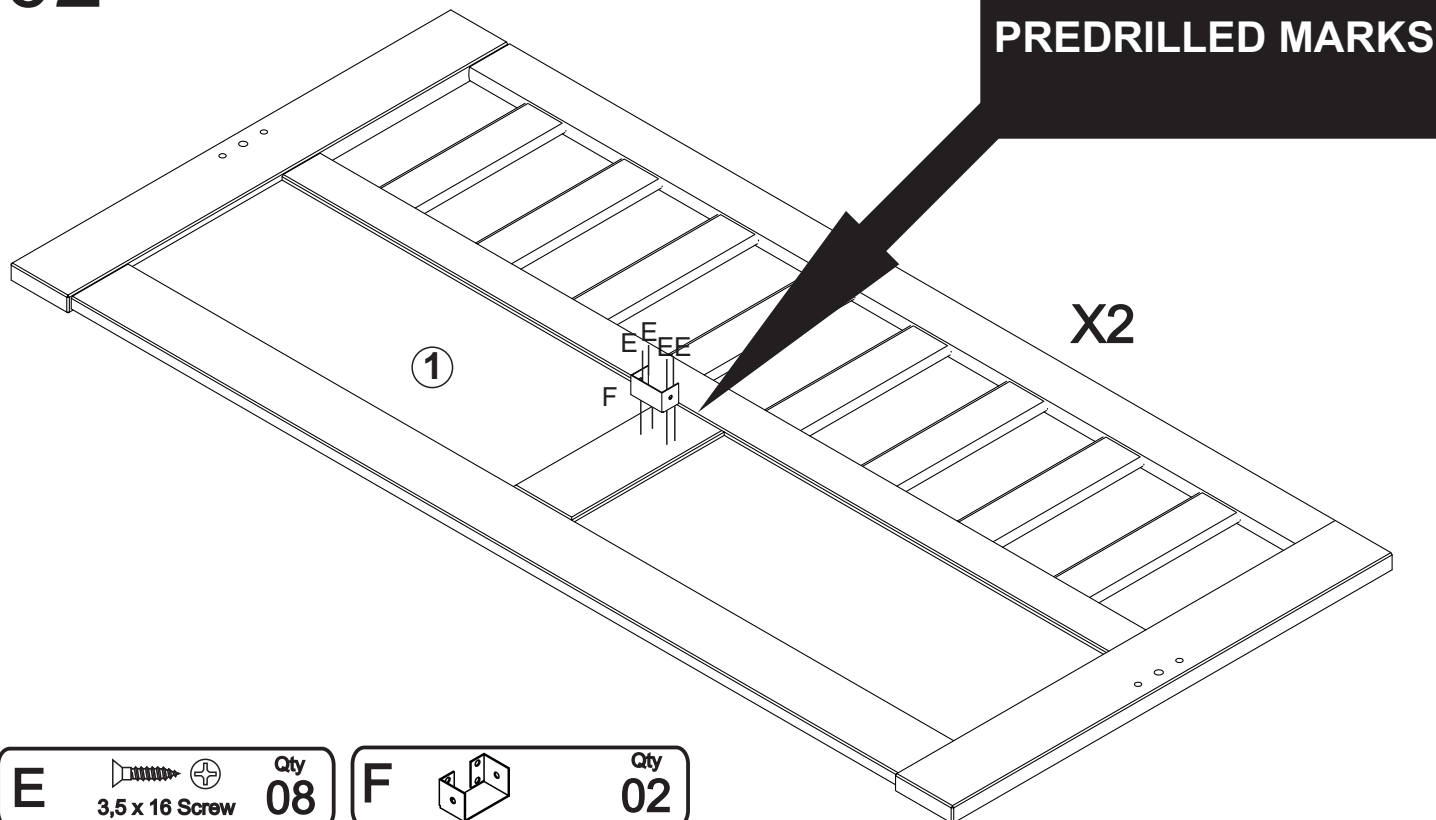


03

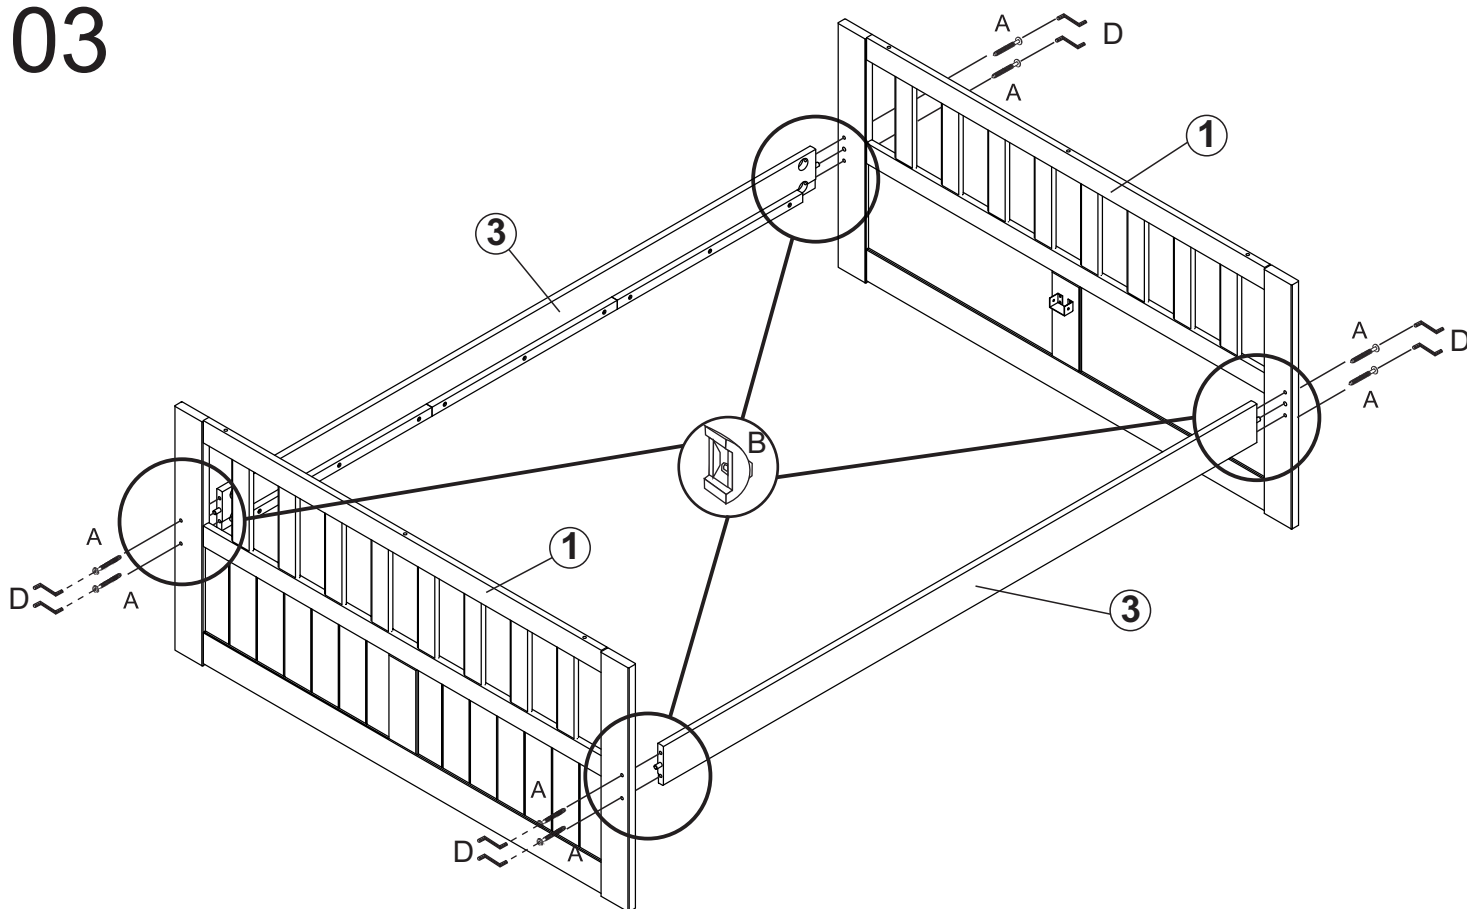

IMPORTANT:


PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

04

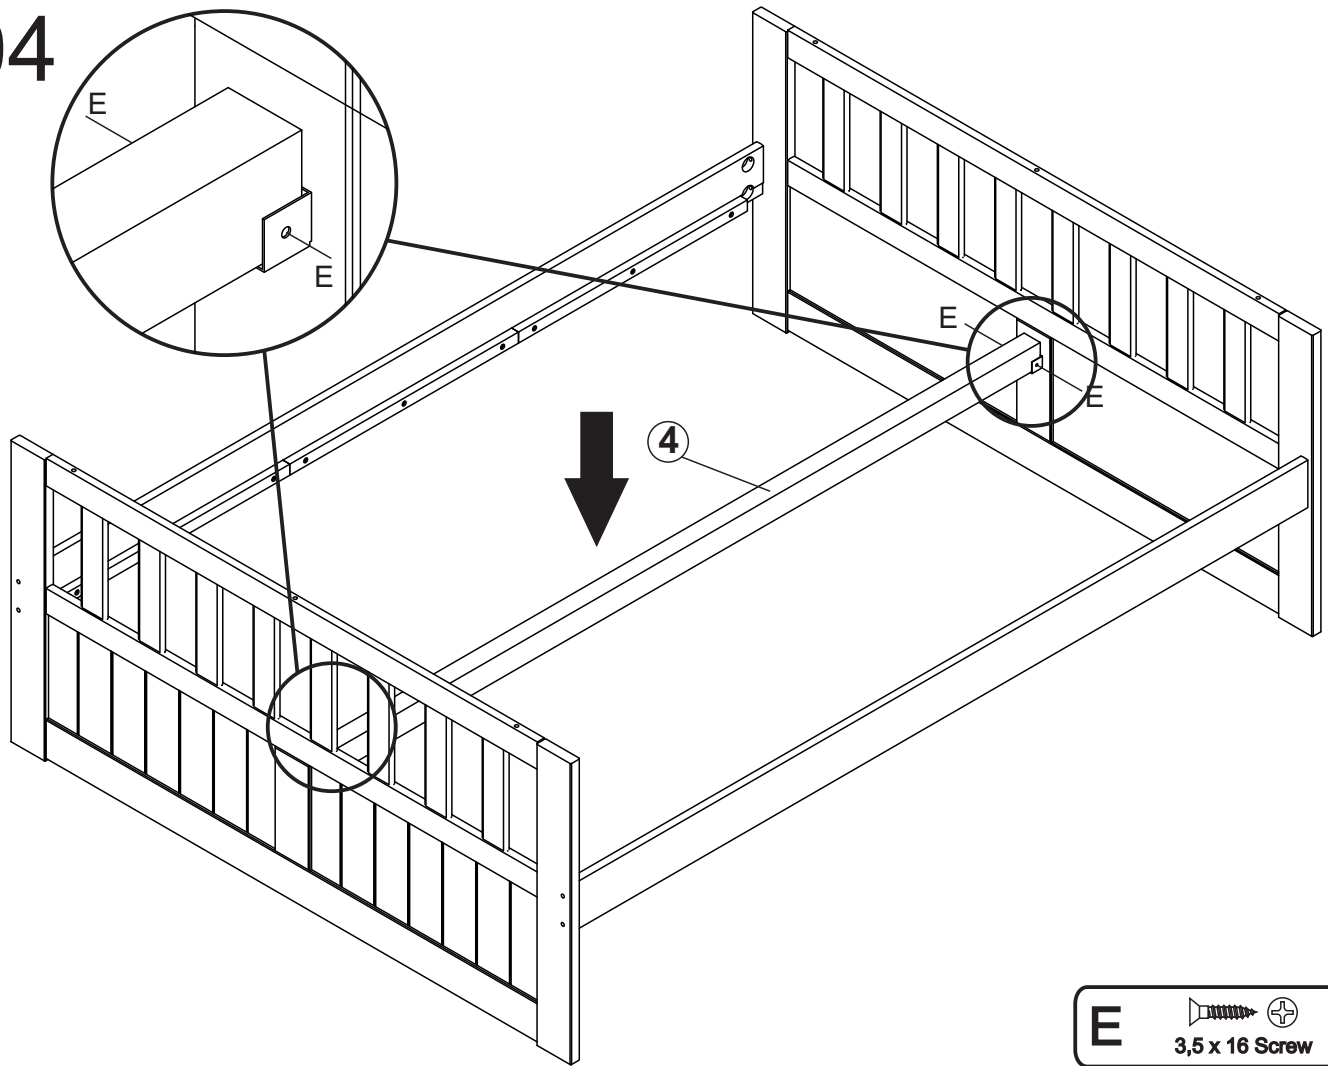

E		Qty
	3,5 x 16 Screw	04

05

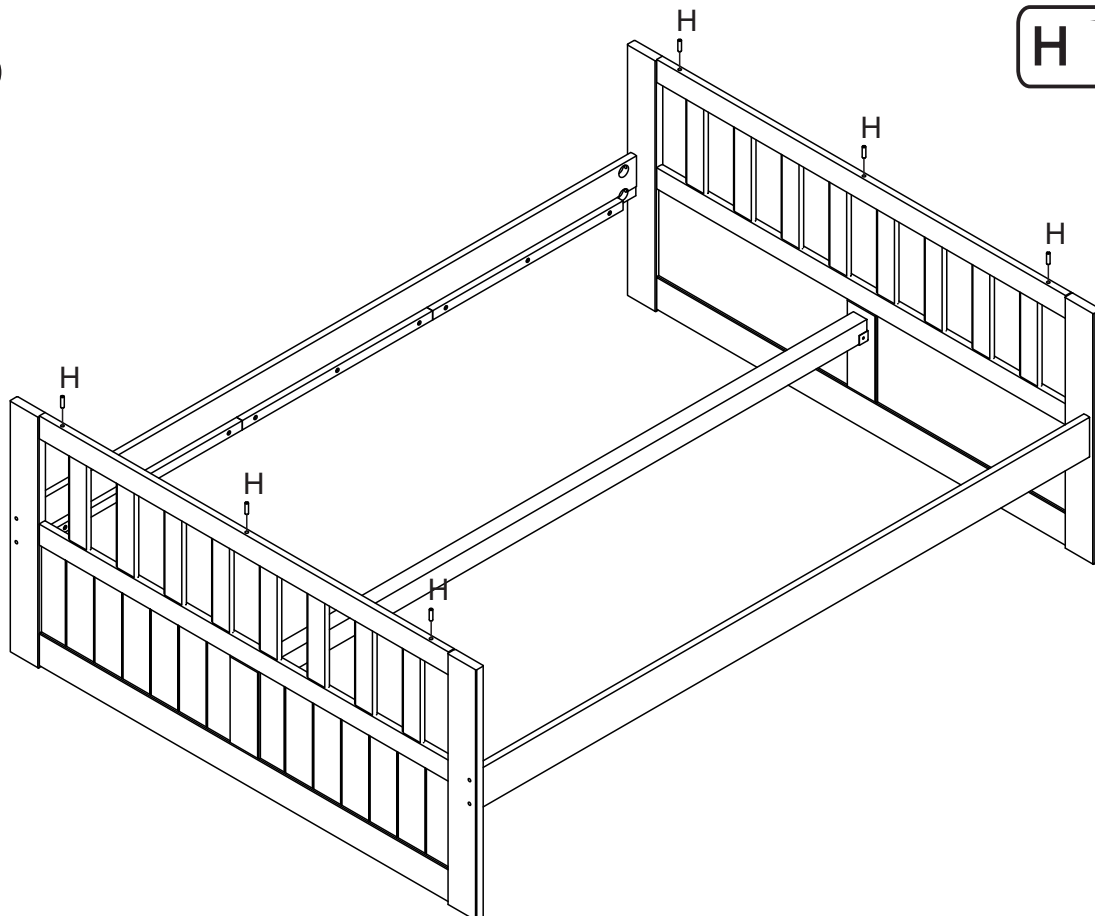


H		Qty
	8 x 30 Wood Dowel	06

Tool Required




IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


06

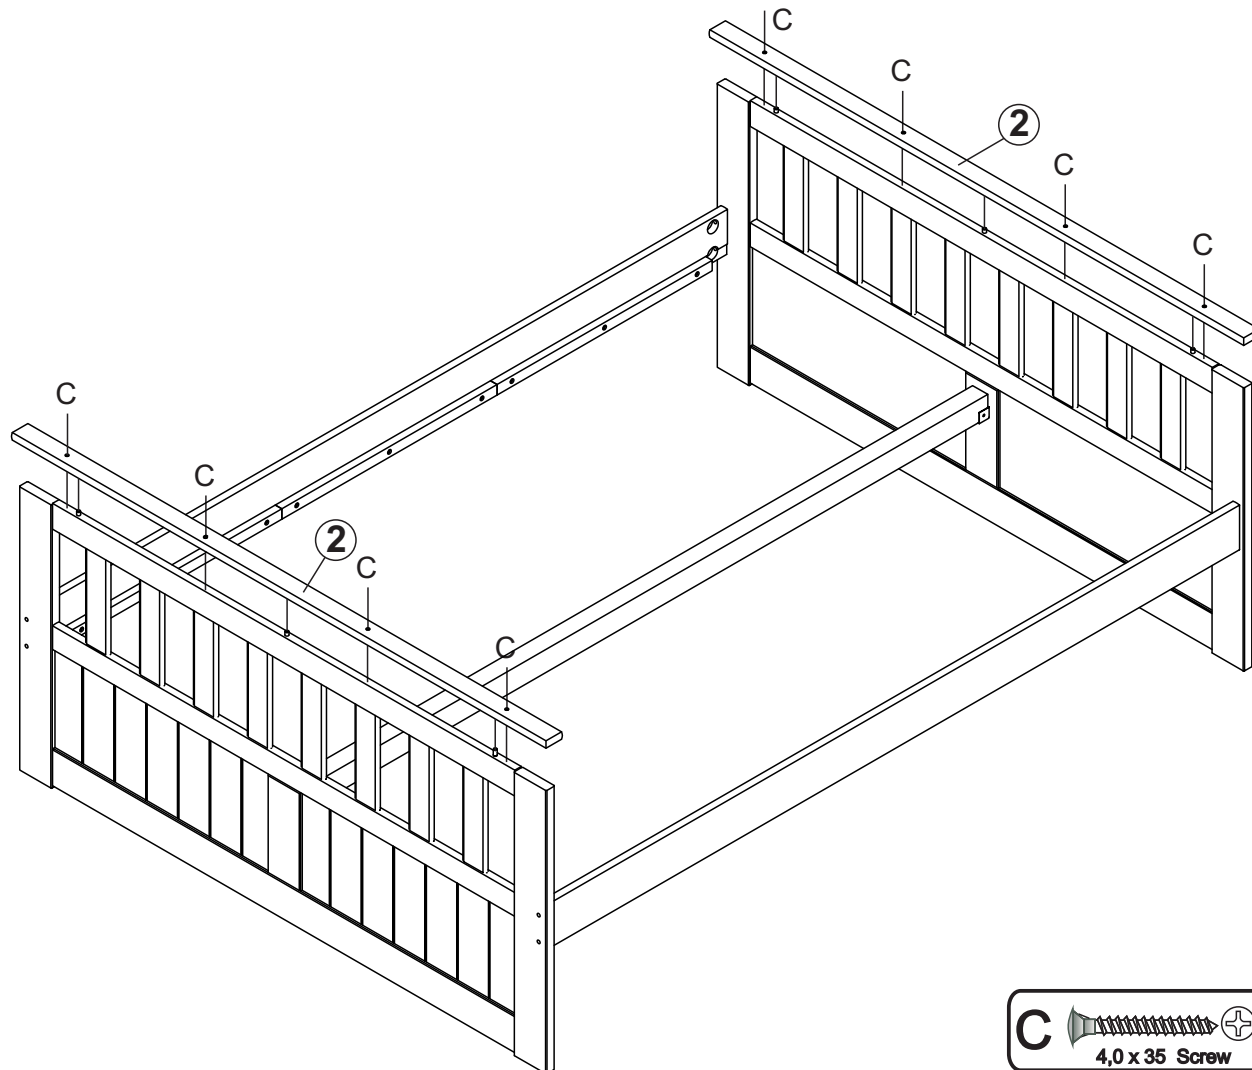

C  **Qty 08**
4,0 x 35 Screw

07

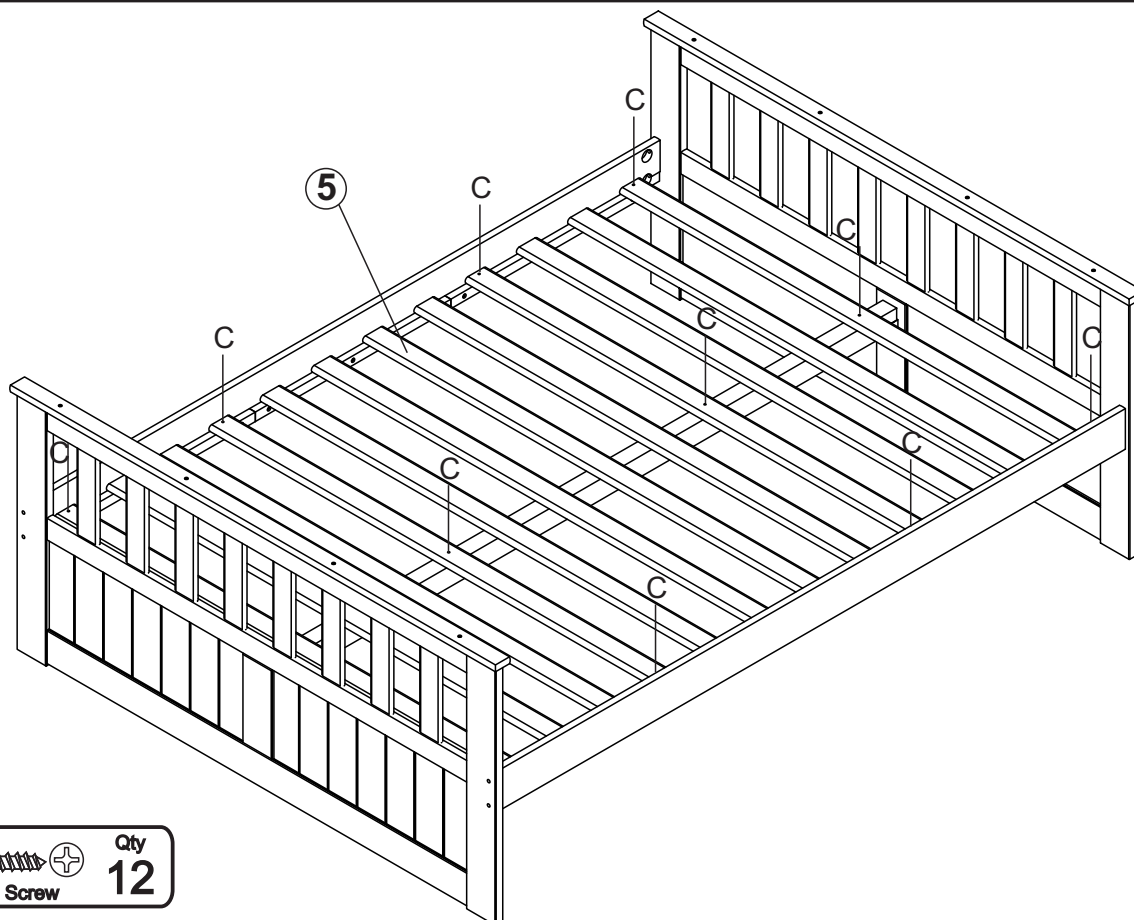

C  **Qty 12**
4,0 x 35 Screw

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY