



Fort Whorth, Texas 76140

STAIRWAY FOR BUNK BED # 210

ASSEMBLY INSTRUCTIONS

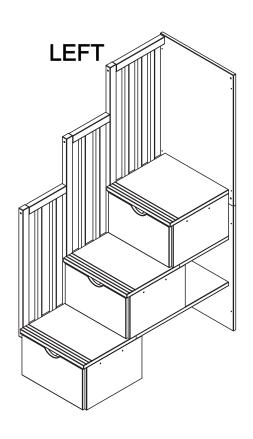


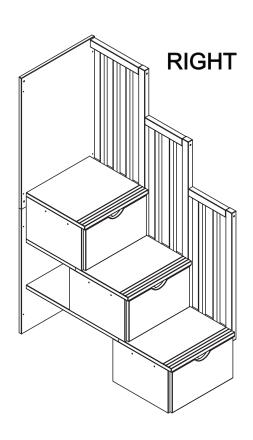

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

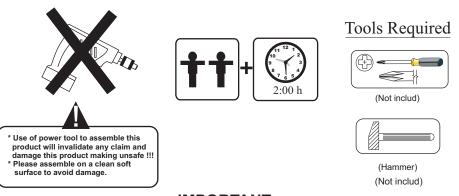



IMPORTANT:


PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


Part List: STAIRWAY FOR BUNK BED # 210 **(21)** 16 **13** (12) (18) 20 19 (12) **x3** (13) **(22)** 12


Identifying the Hardware/part list- Identify the hardware using the illustrations below.

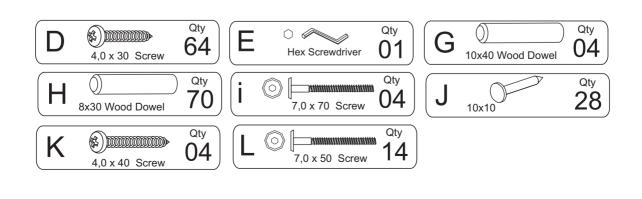

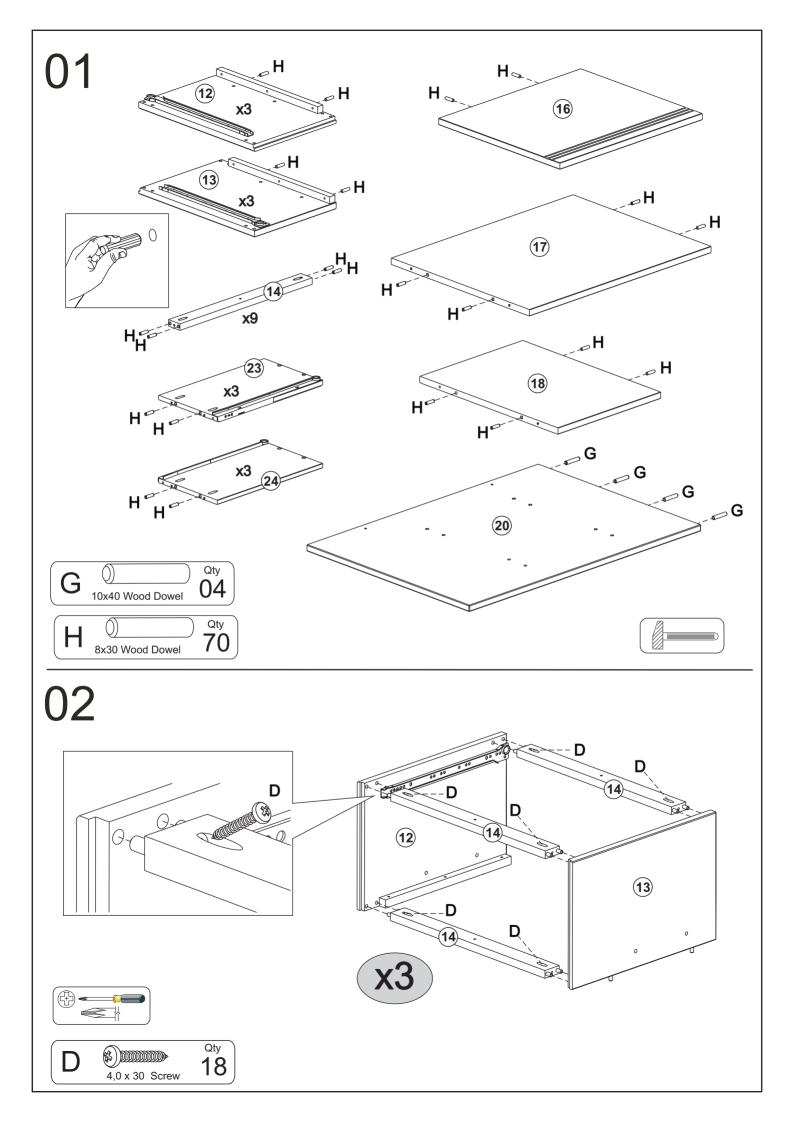


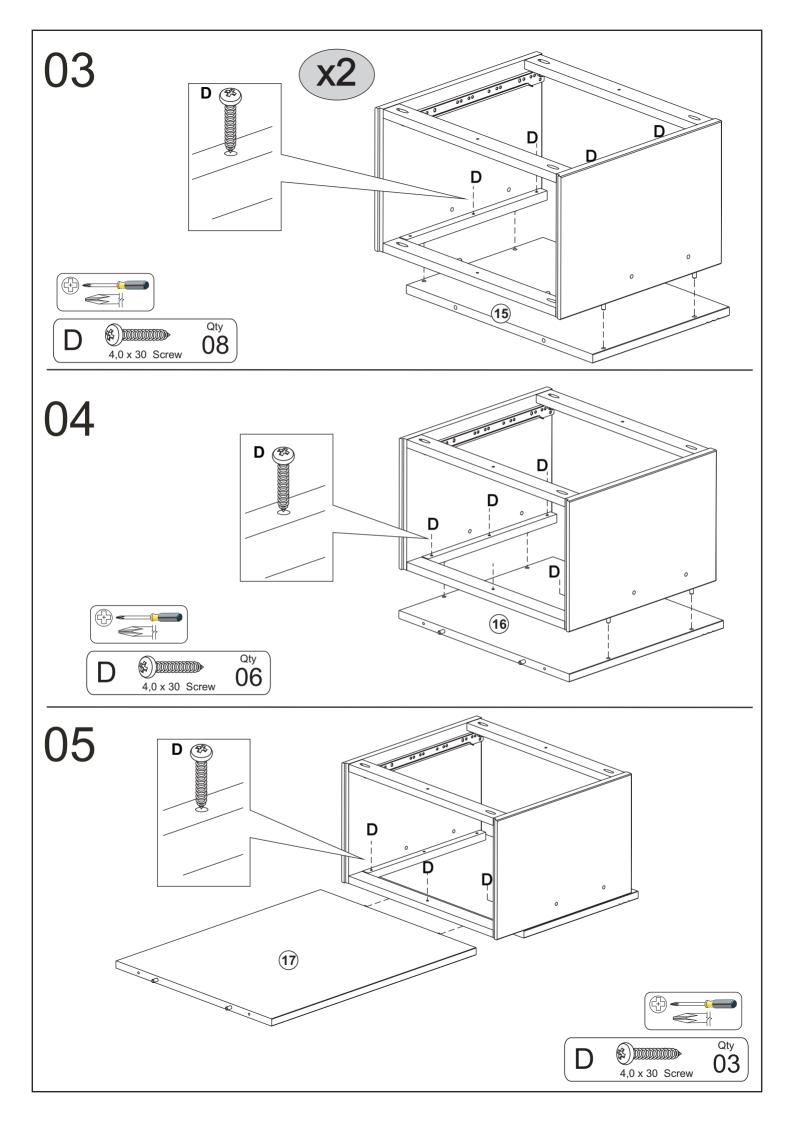


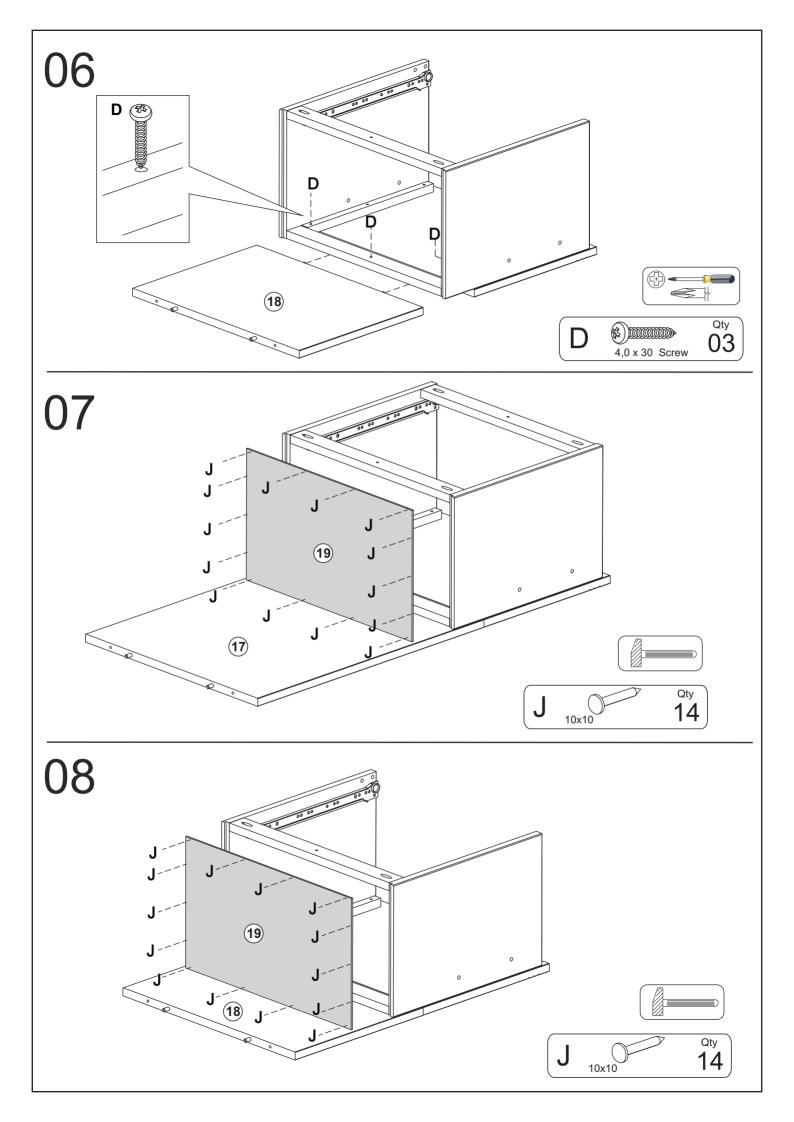


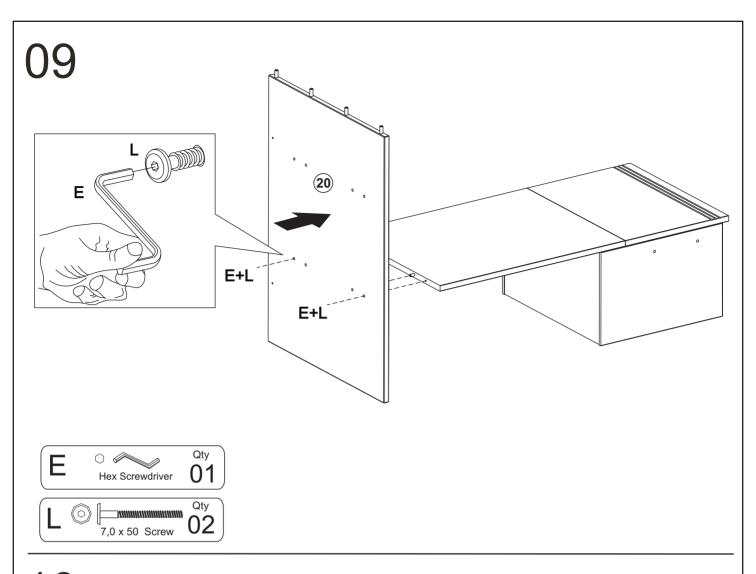





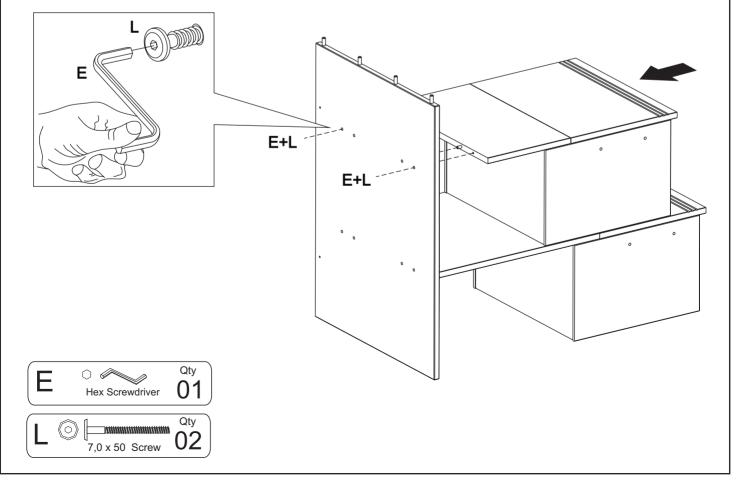


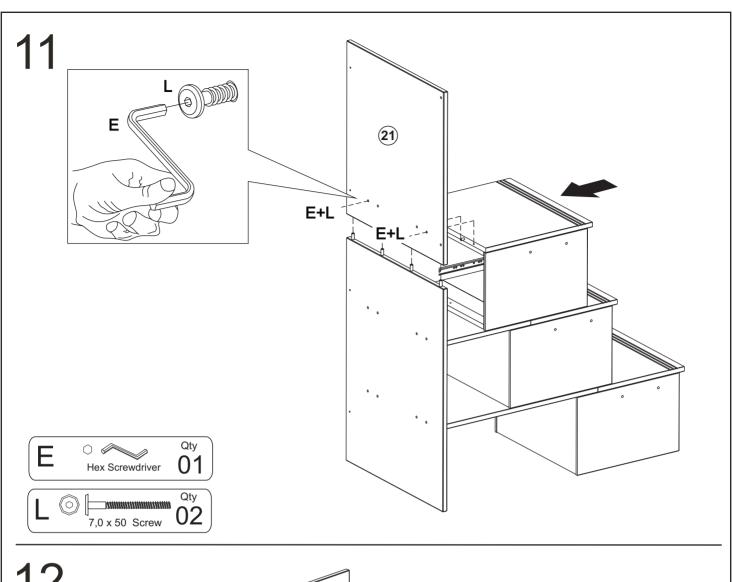


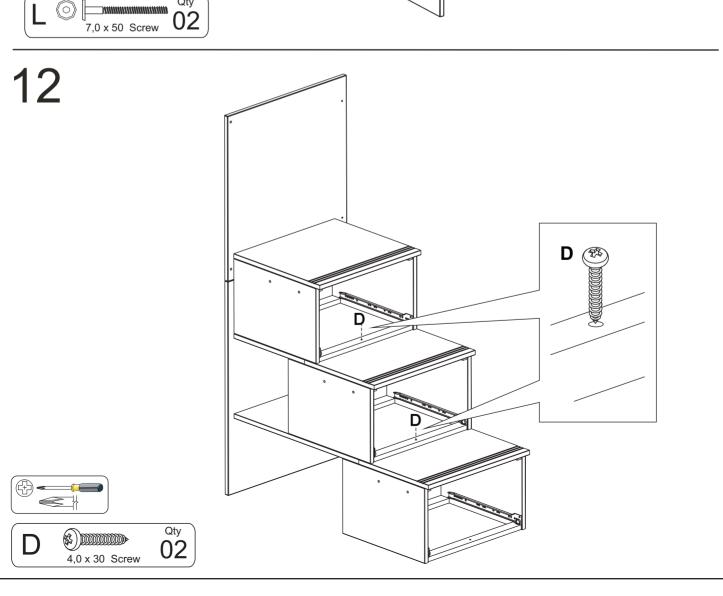


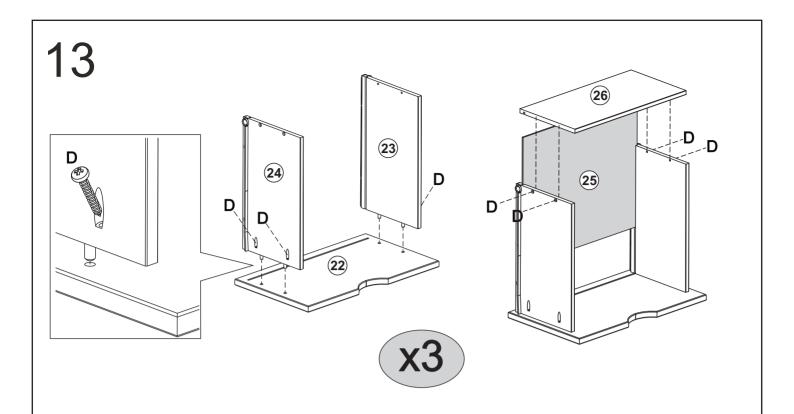




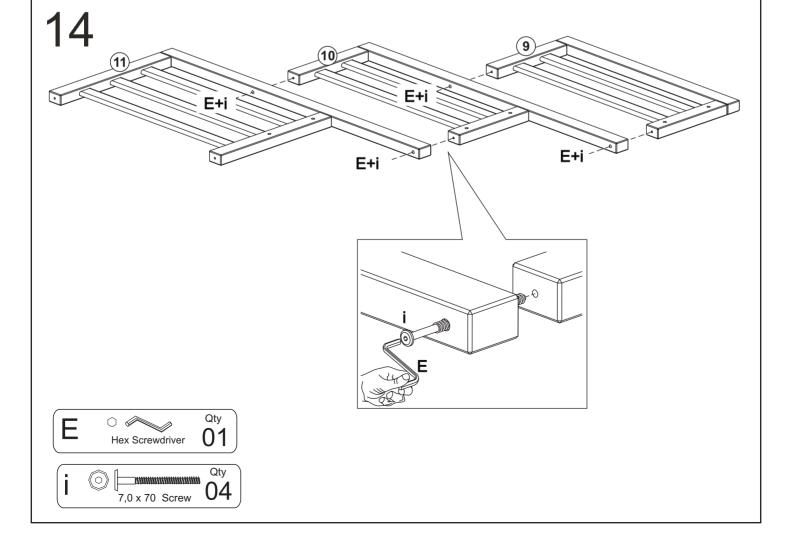


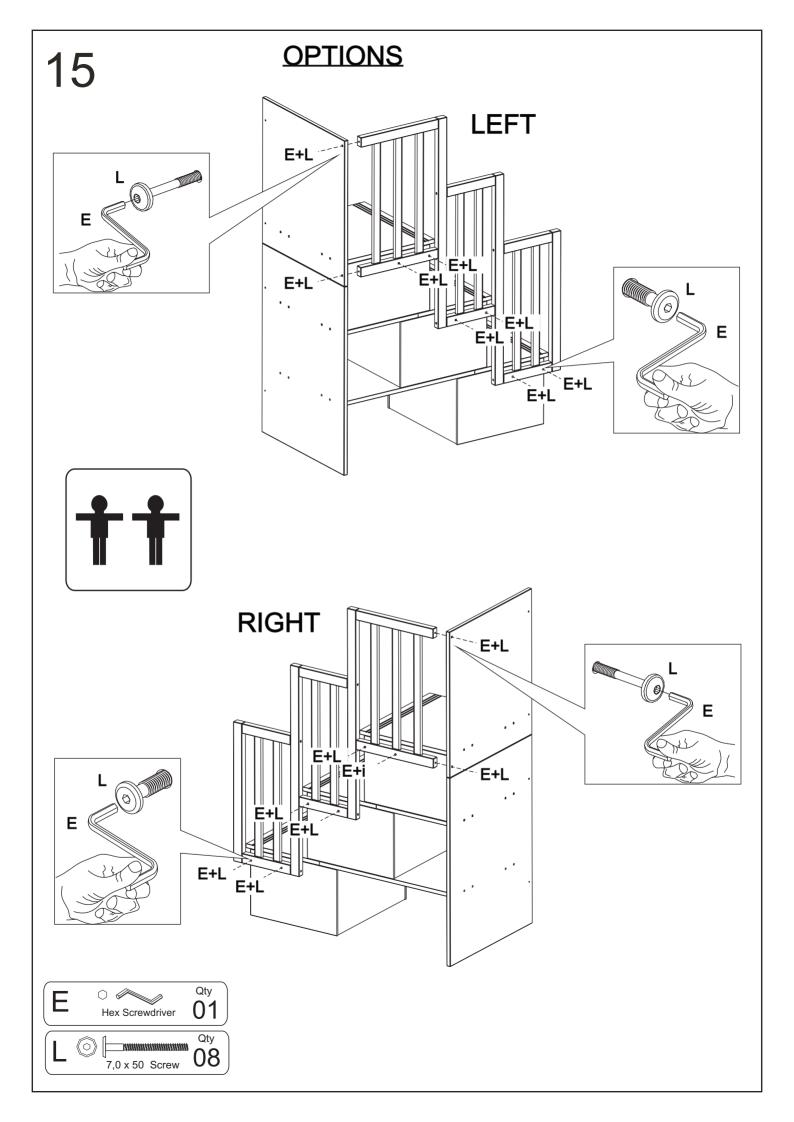

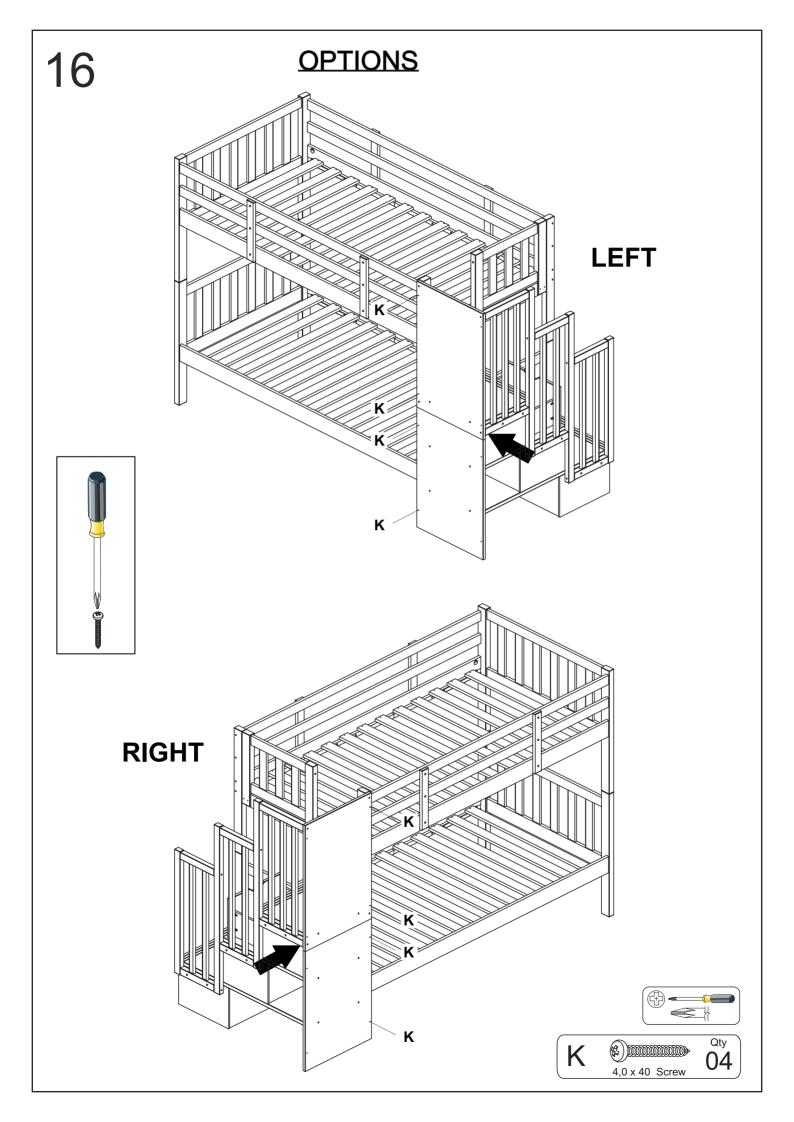

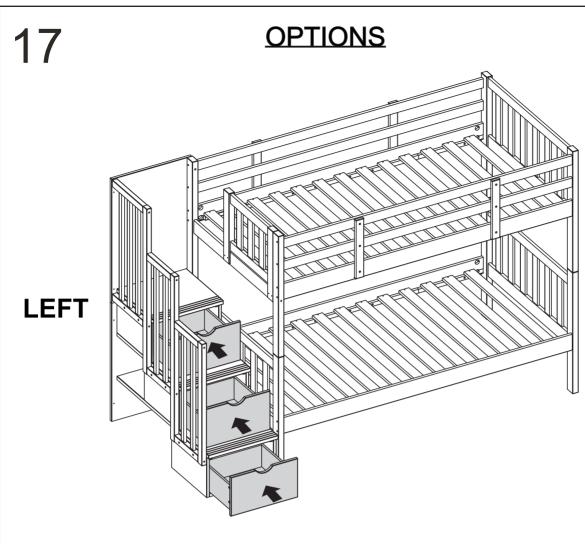



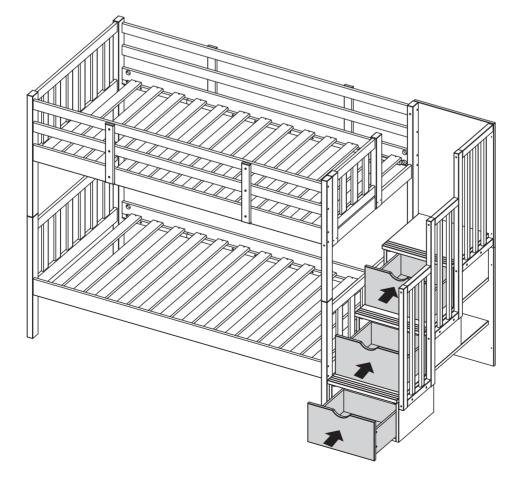

RIGHT