


Fort Worth, Texas 76140

ASSEMBLY INSTRUCTIONS


1350 TWIN CABANA LOFT BED

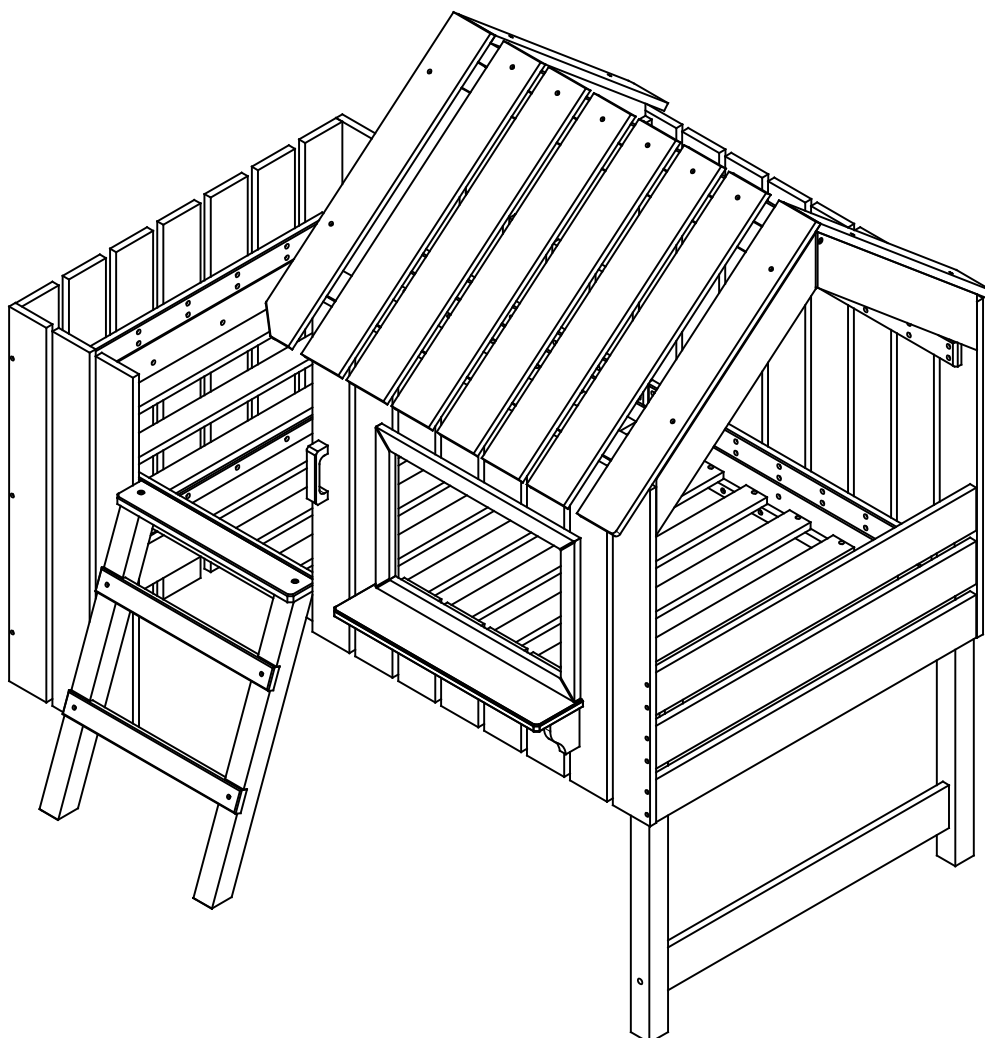



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

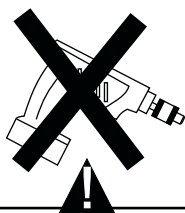


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

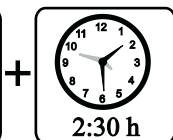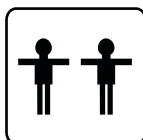

Tools Required



(Not included)




(Not included)











IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

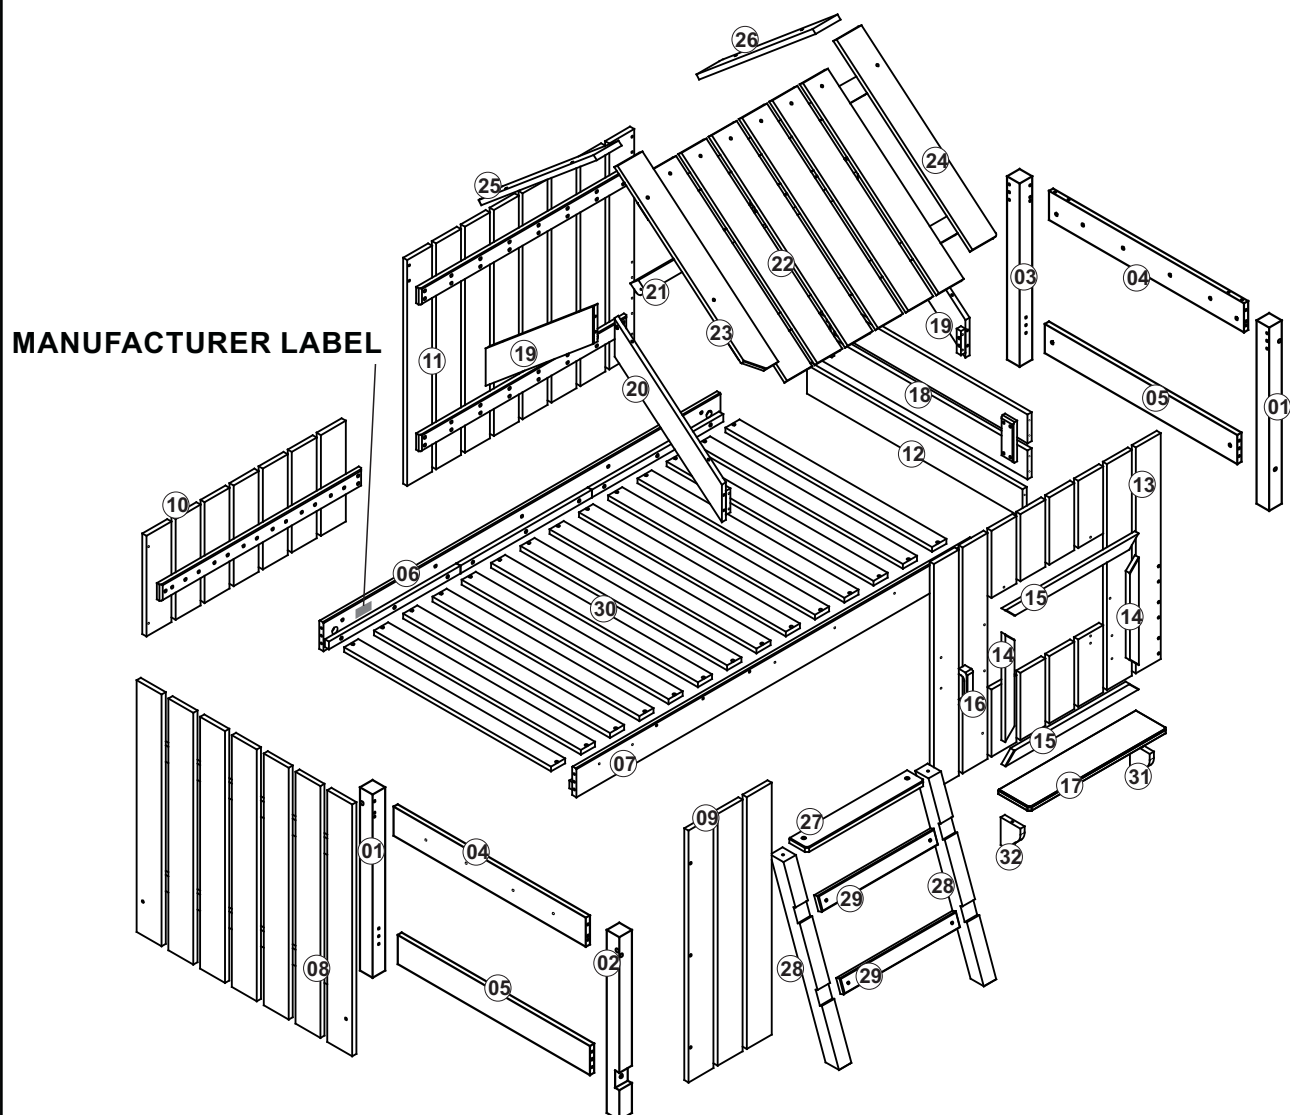
Part List - 1350 TWIN CABANA LOFT BED




Identifying the Hardware—Identify the hardware using the illustrations below.

A	 Ø 8x50	28	F		04
B		02	G		01
C	 Ø 3,5X16	08	H	 Ø 7X60 Cab 13	07
D		08	I	 Ø 4X35	110
E	 Ø 1/4X100 Cab 13	12	J	 Ø 8x30	18



01


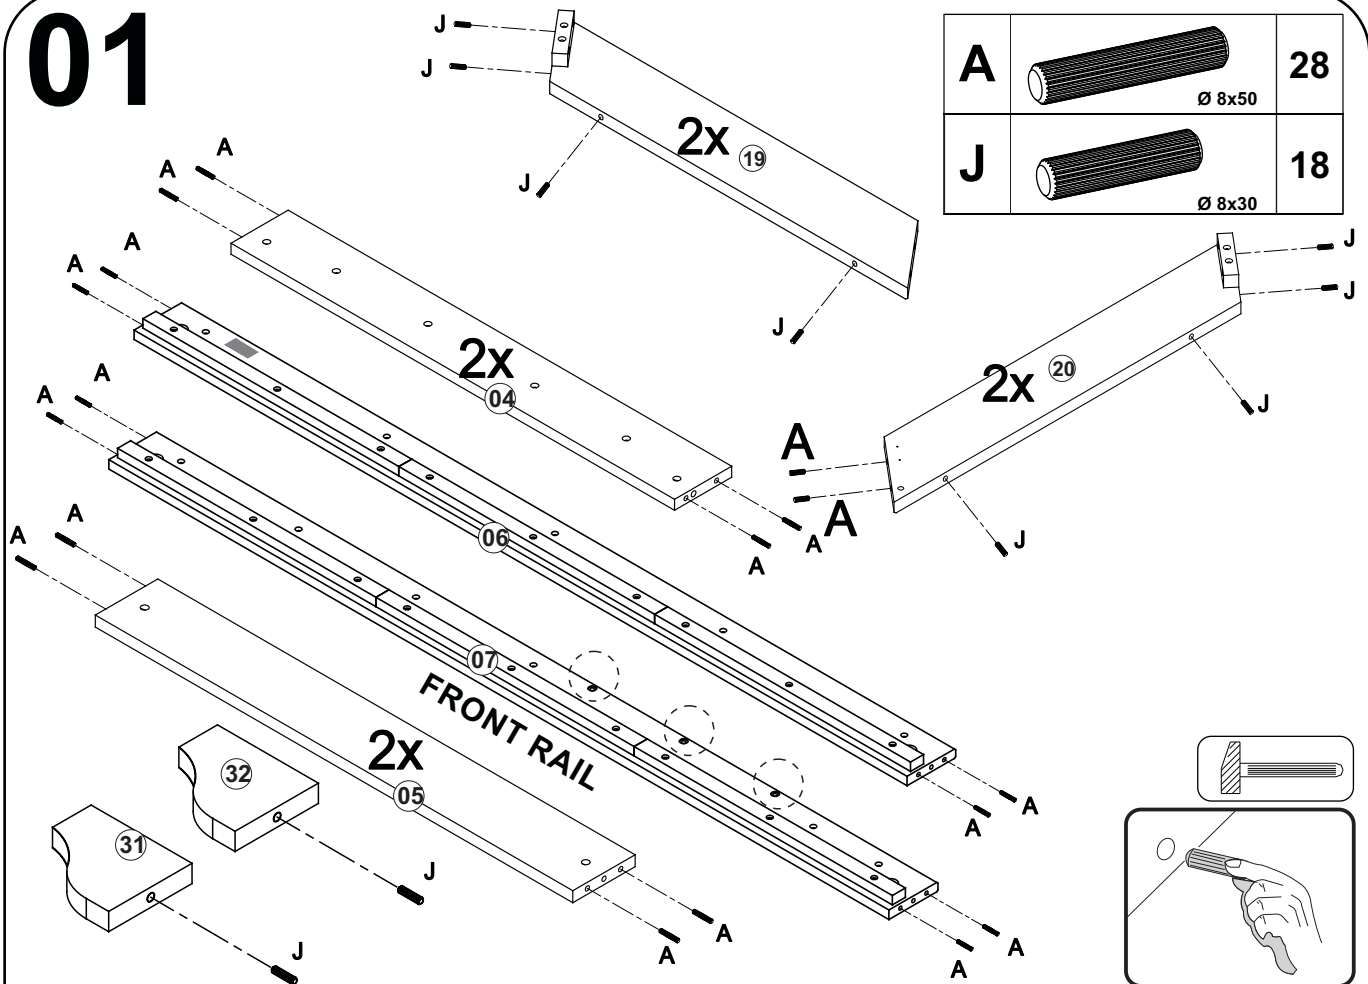


02

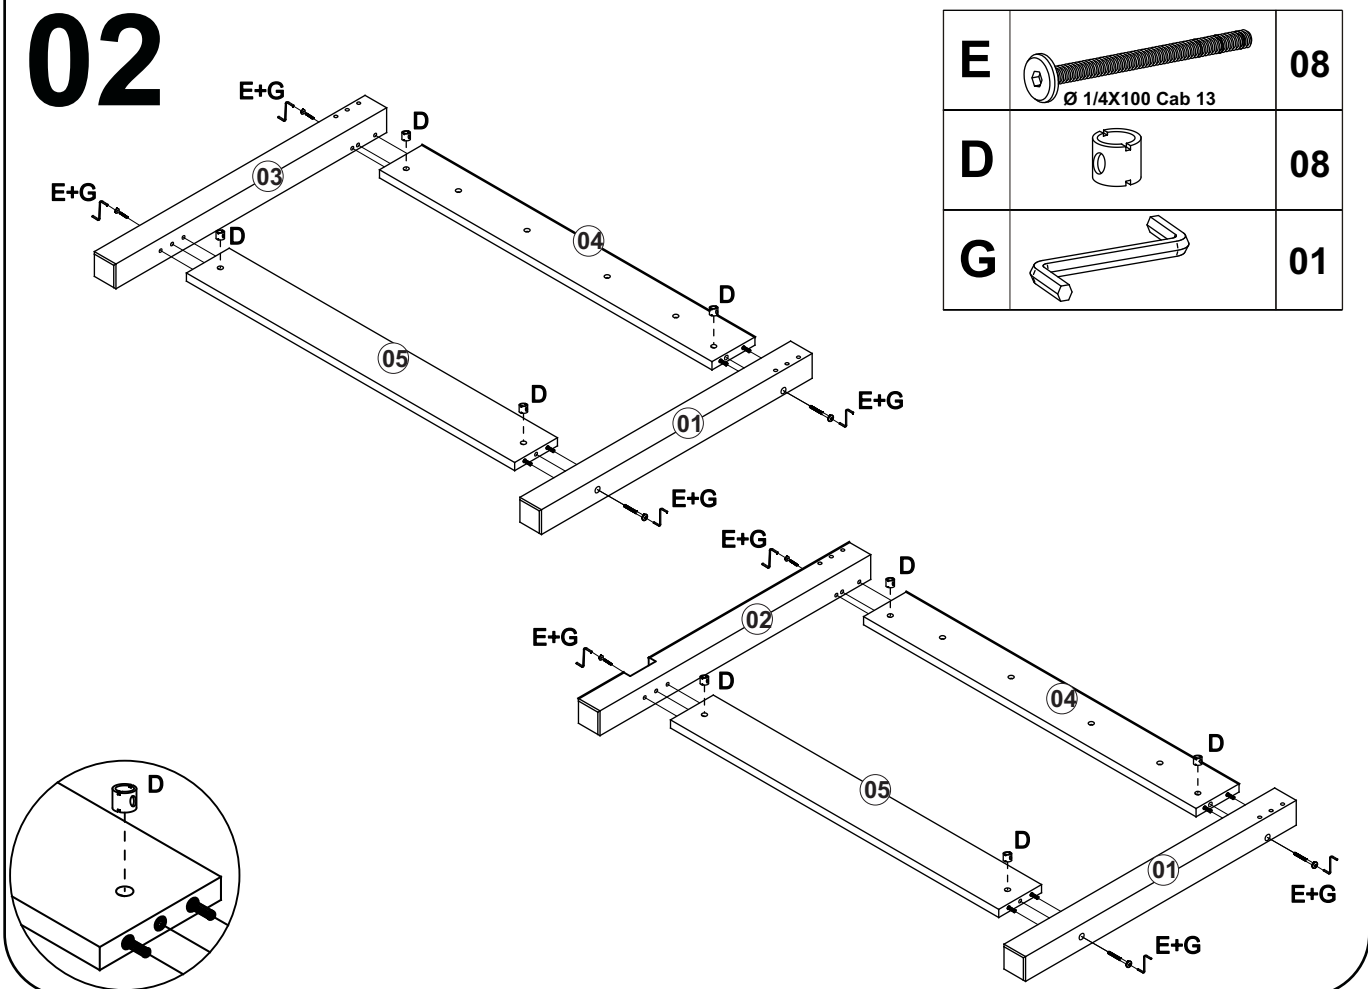




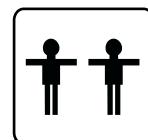
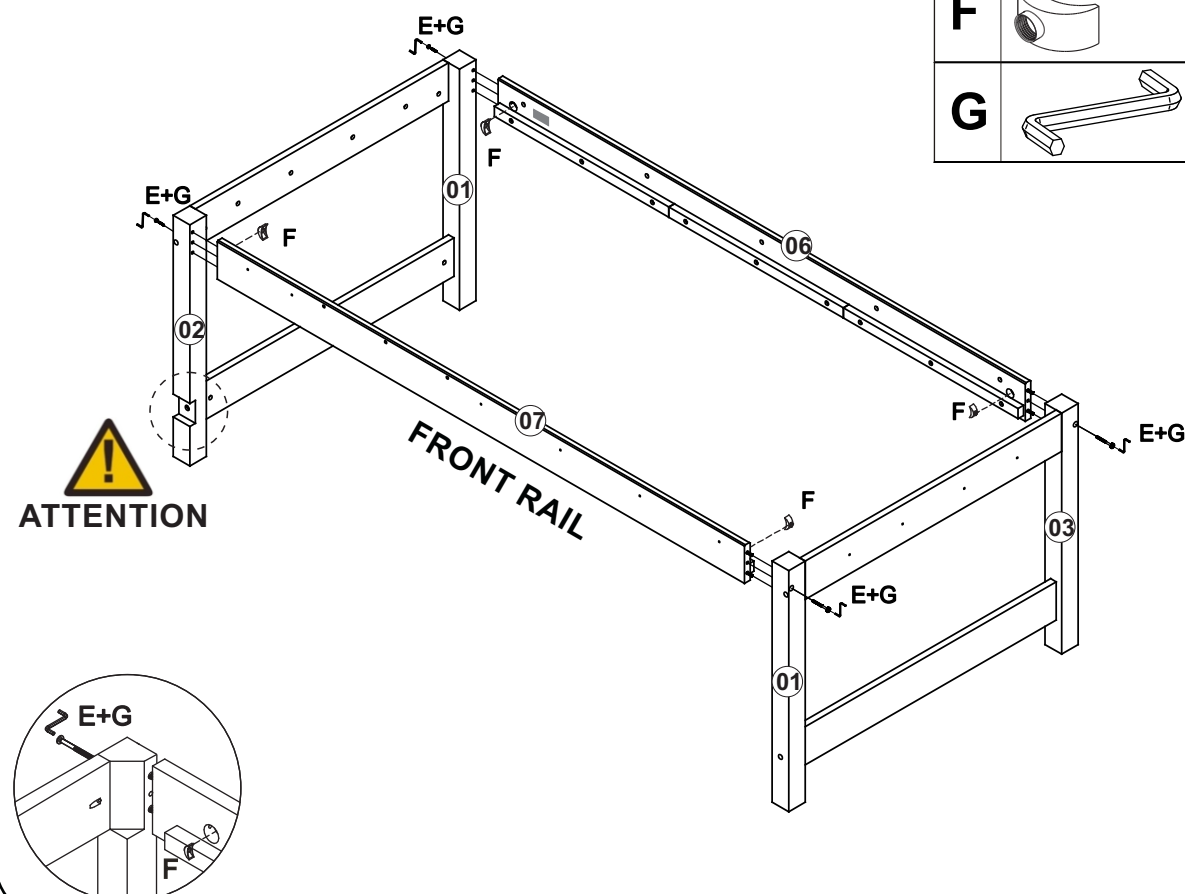
03

B		02
C	 Ø 3X16	08

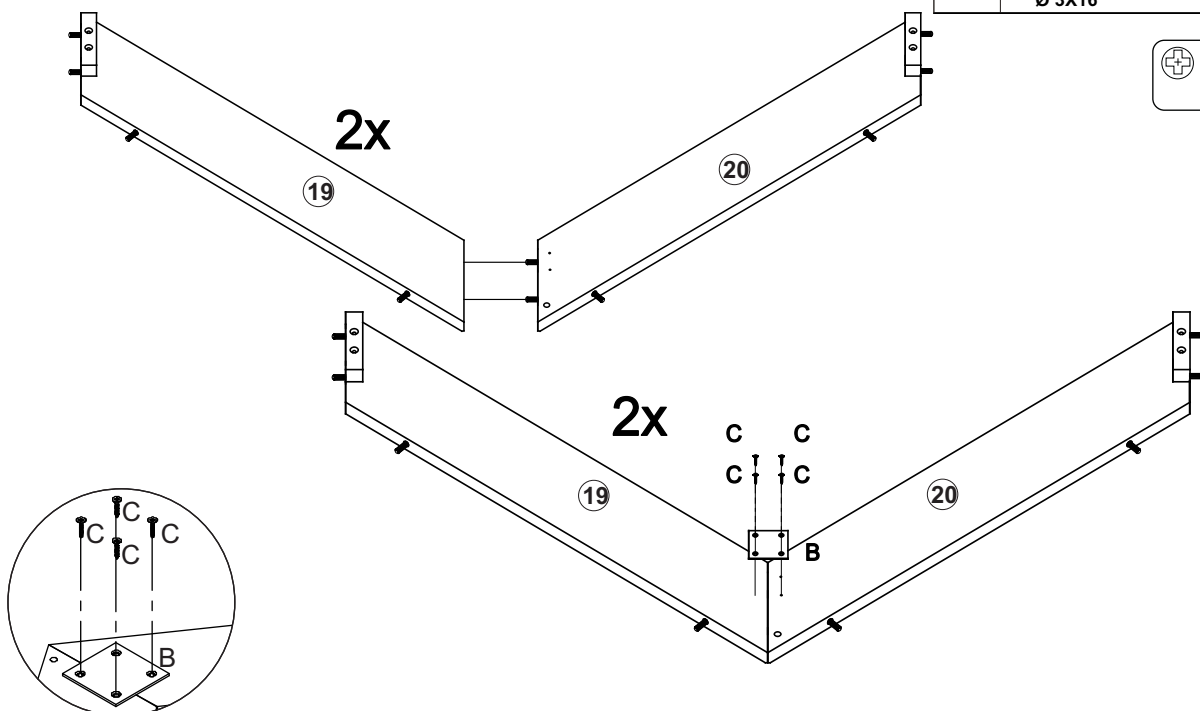



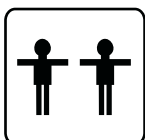
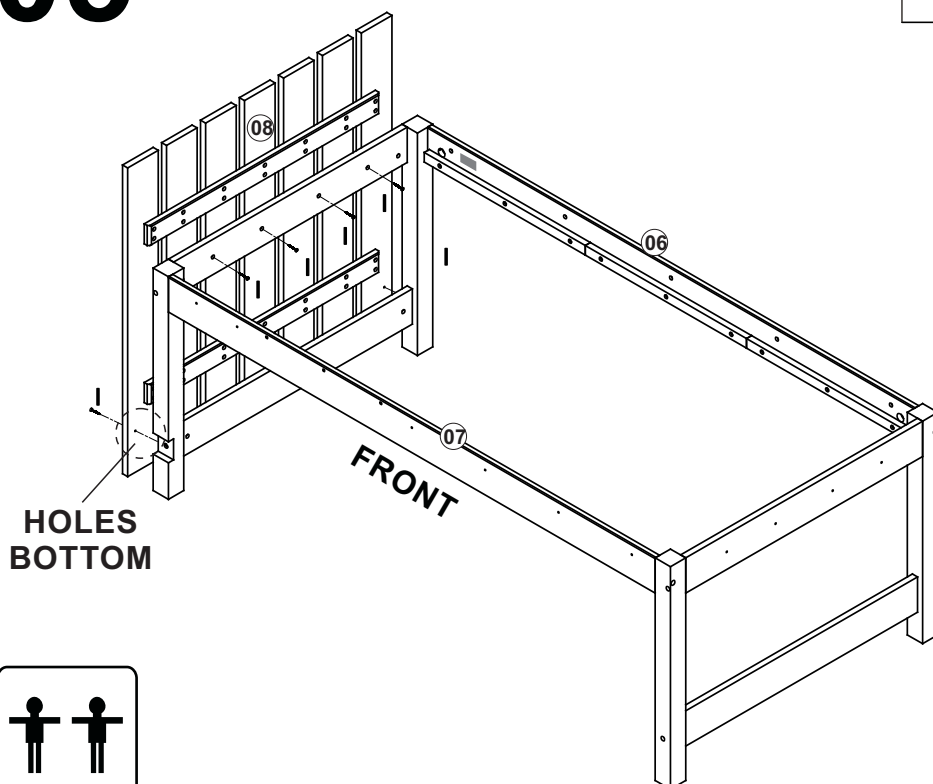
04

E	 Ø 1/4X100 Cab 13	04
F		04
G		01





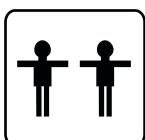
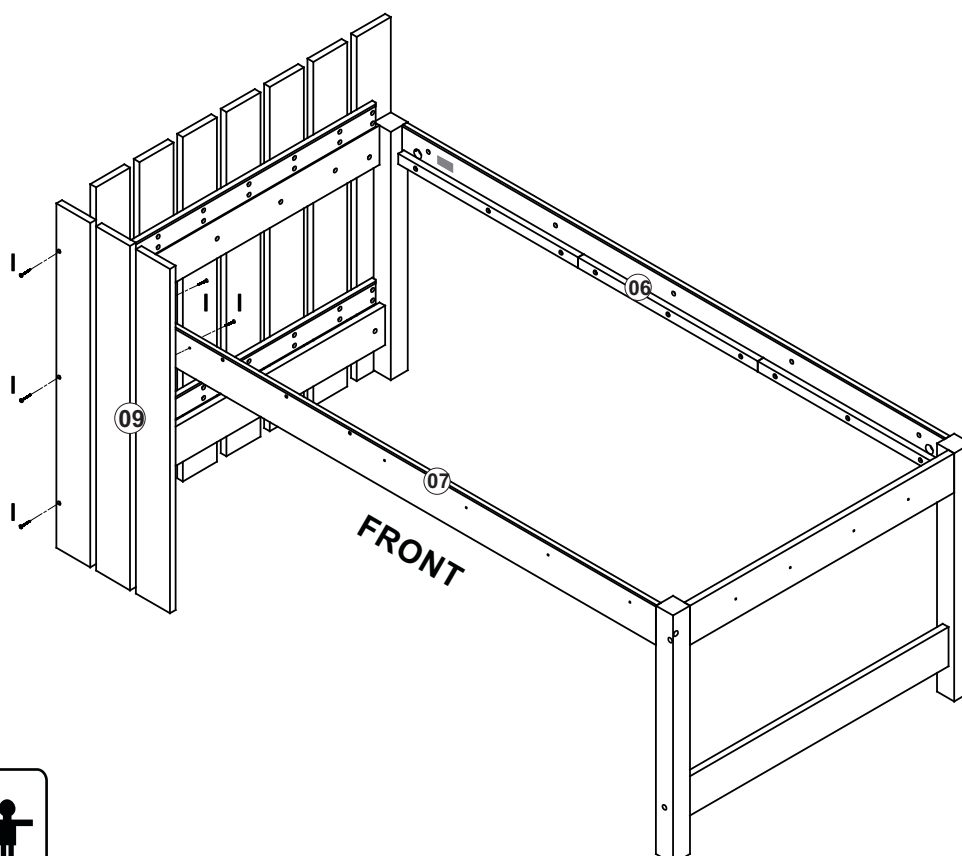
05

I	 Ø 4X35	06
---	---	----







06





I	 Ø 4X35	05
---	---	----




07

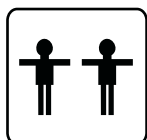

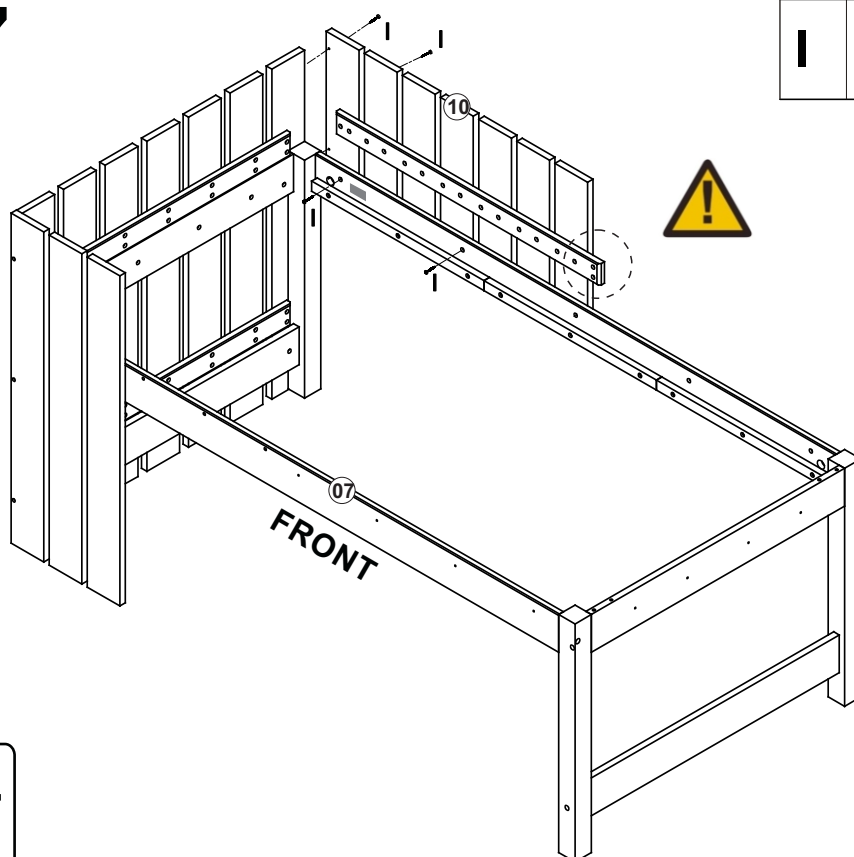


08

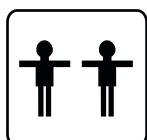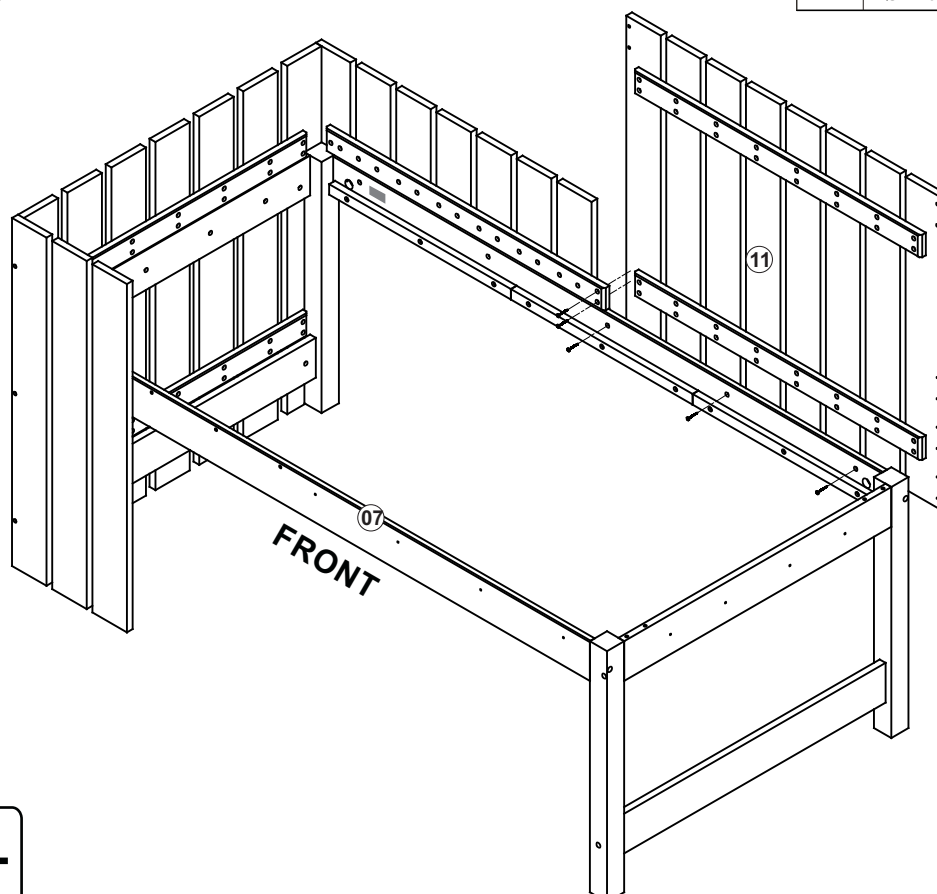





09

I	 Ø 4X35	06
---	---	----

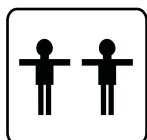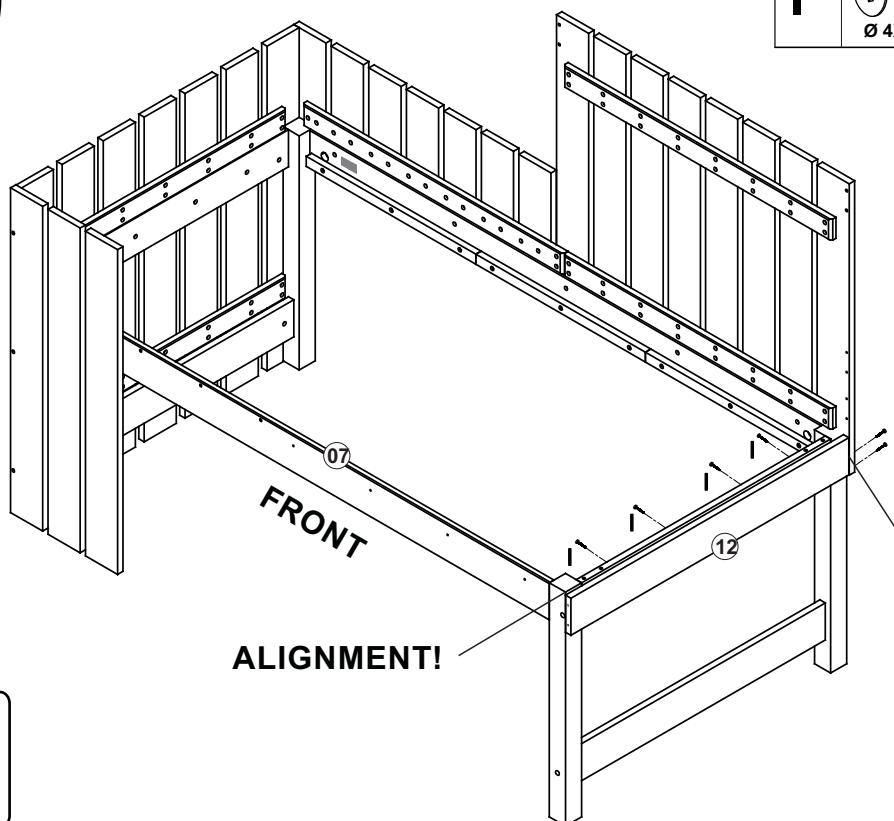


10

I	 Ø 4X35	08
---	---	----


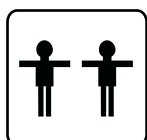
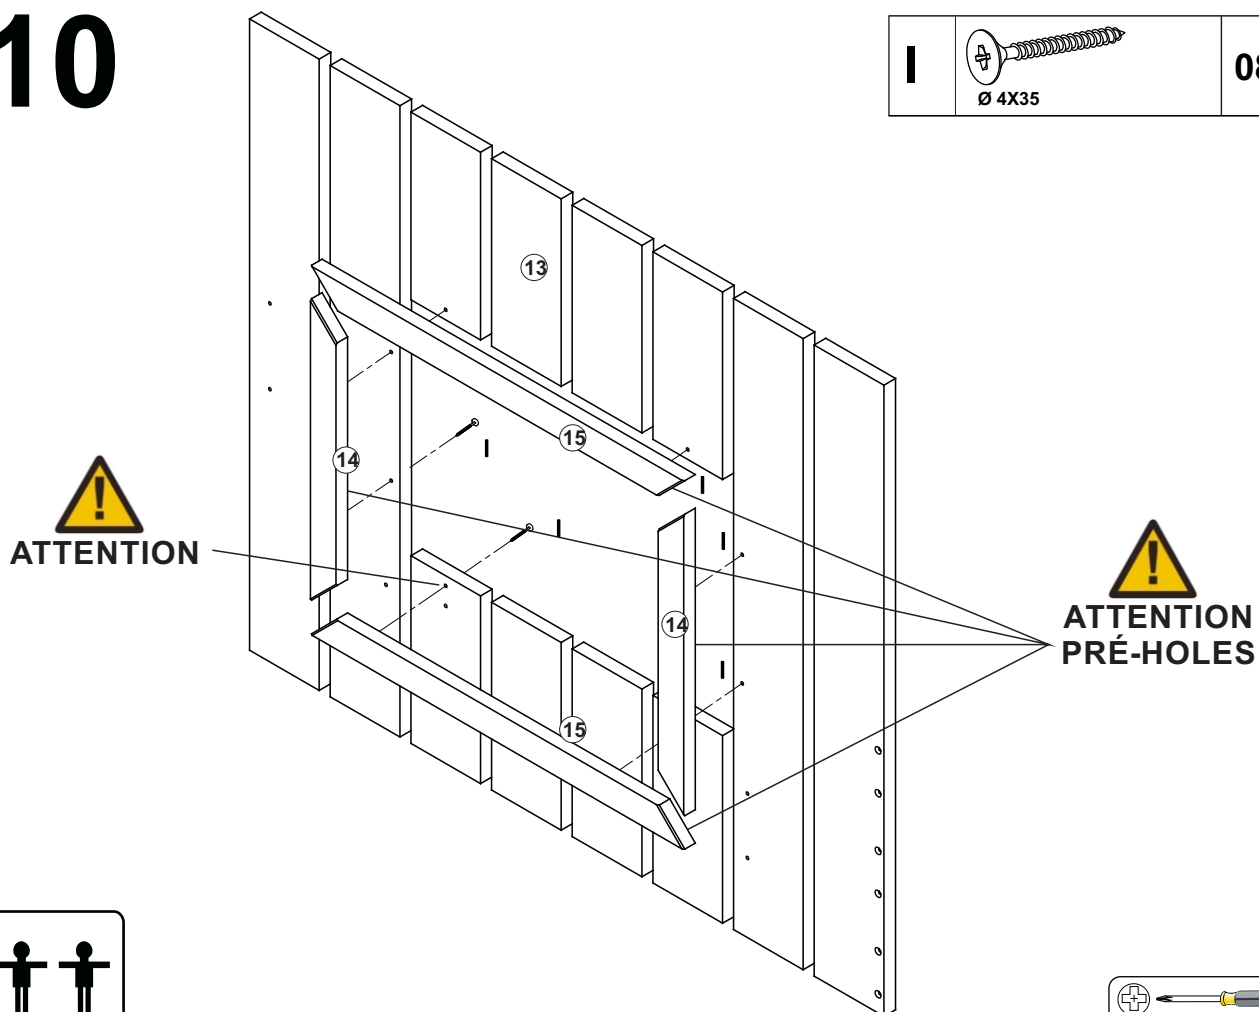


11



**ATTENTION
PRÉ-HOLES**





08

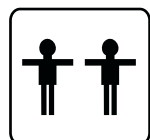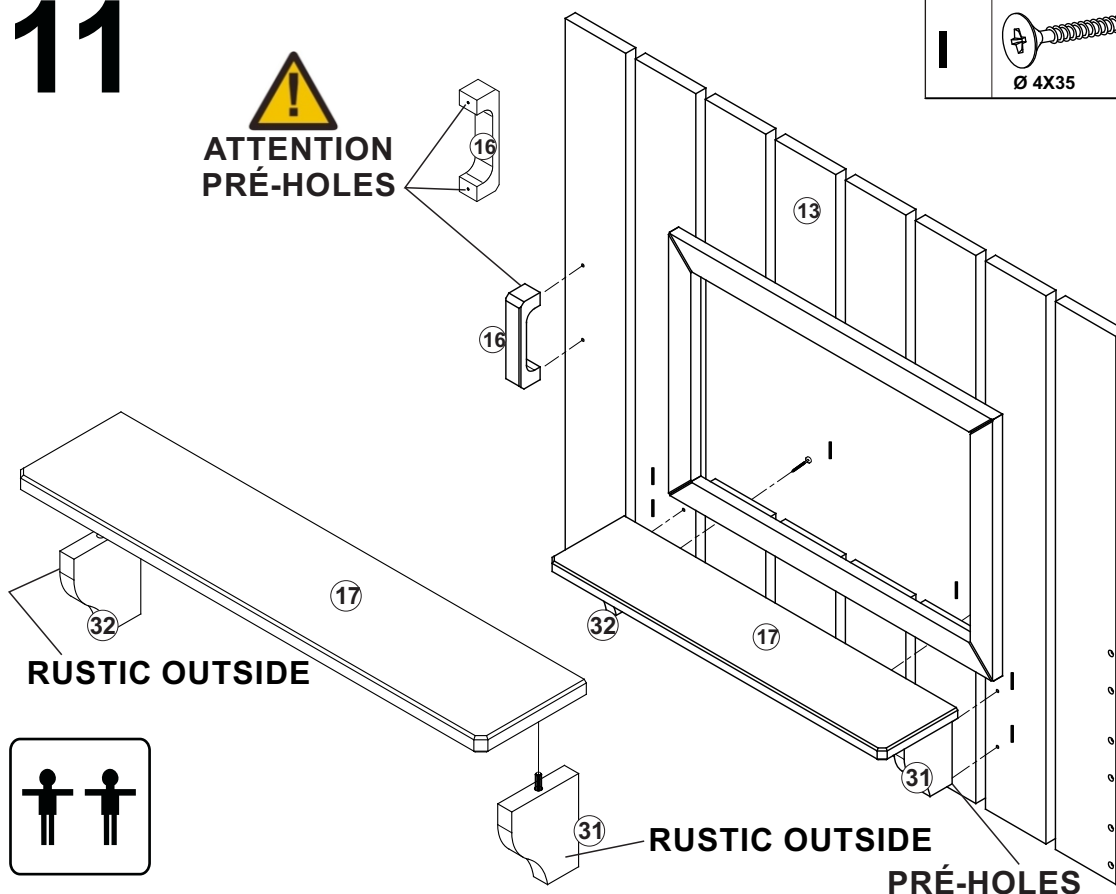



12




06


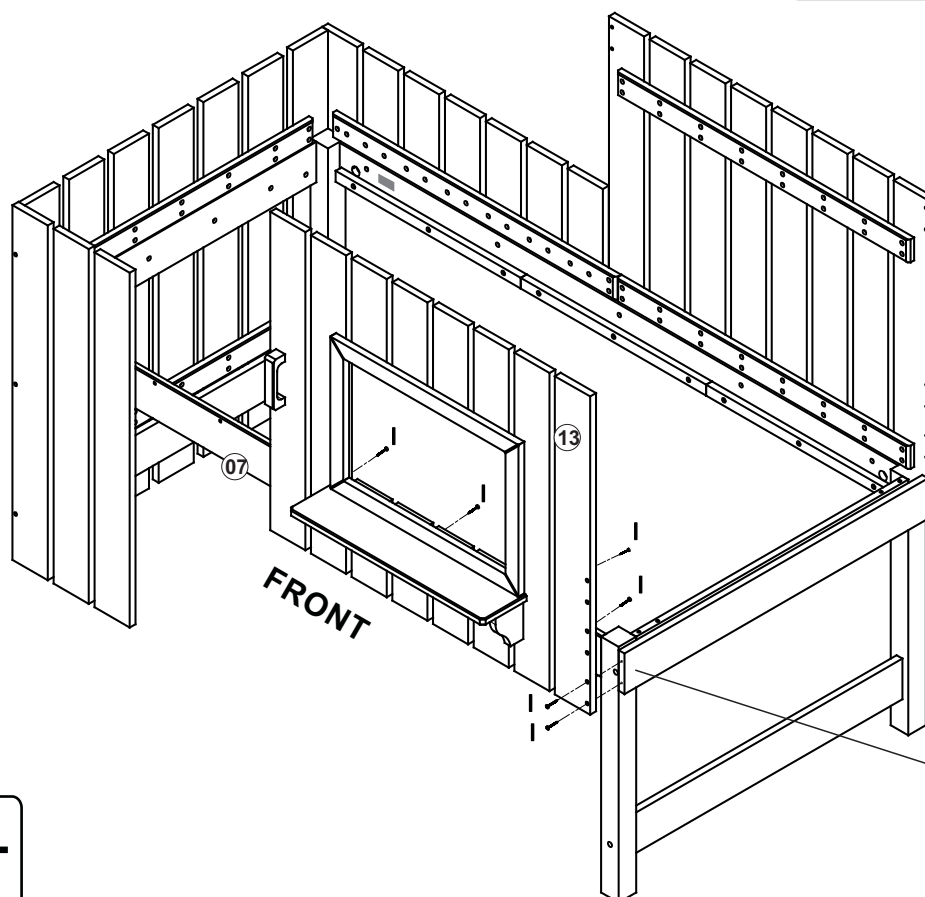



**ATTENTION
PRÉ-HOLES**


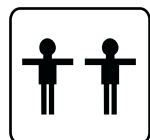


13


I	 Ø 4X35	08
---	---	----

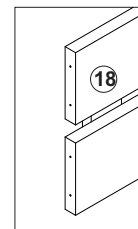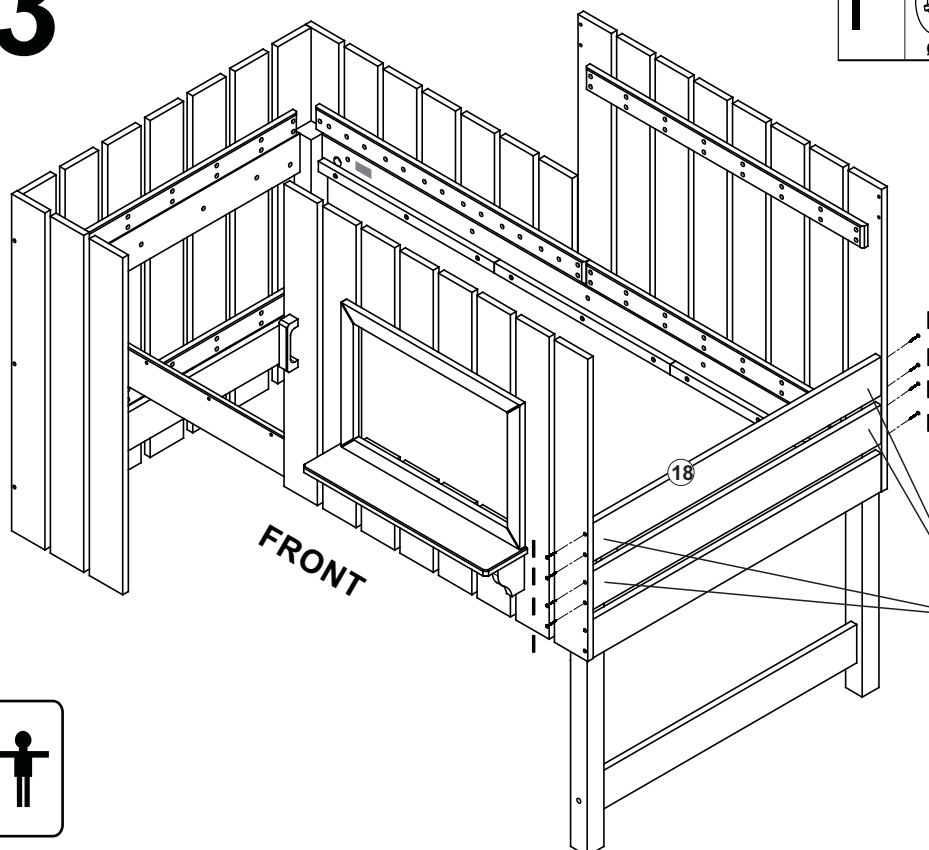



**ATTENTION
PRÉ-HOLES**

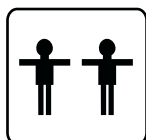



14

I	 Ø 4X35	08
---	---	----

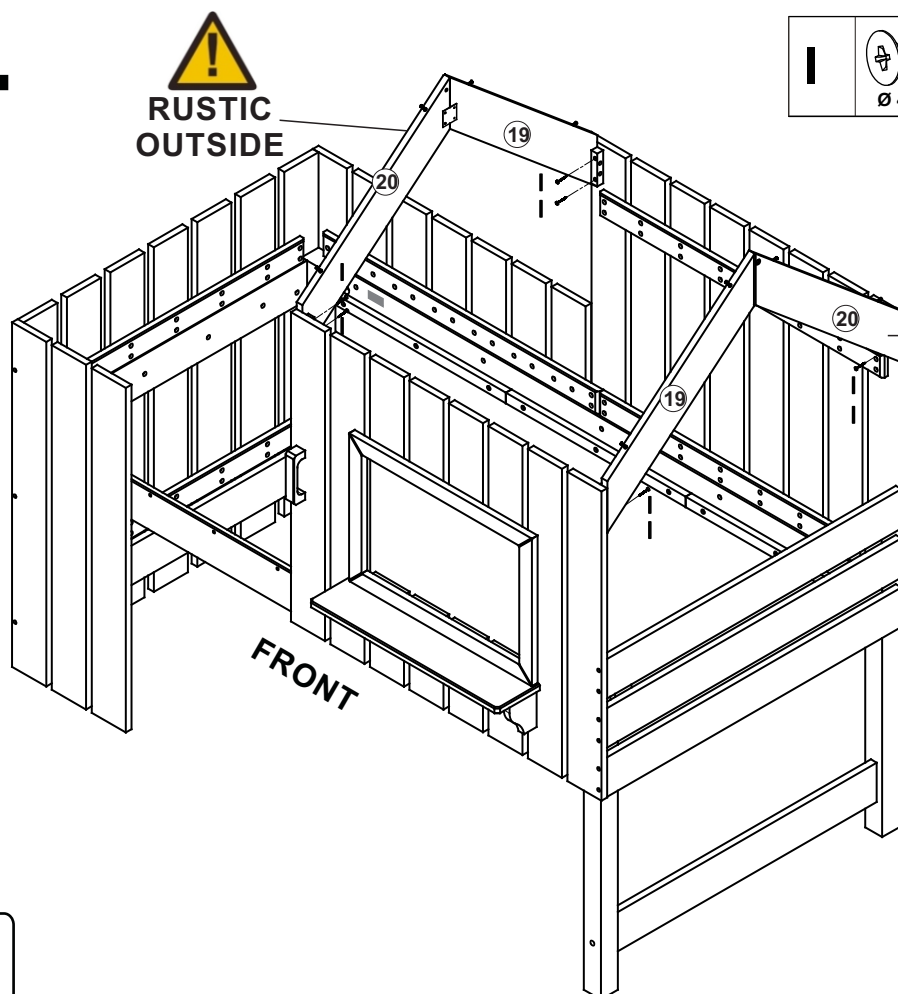



**RUSTIC
OUTSIDE**


**RUSTIC
OUTSIDE**

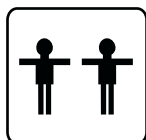


15

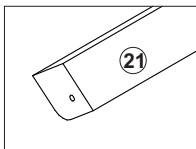

G+H


21

G






01

H



02

Ø 7X60 Cab 13

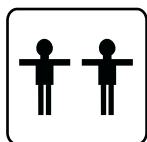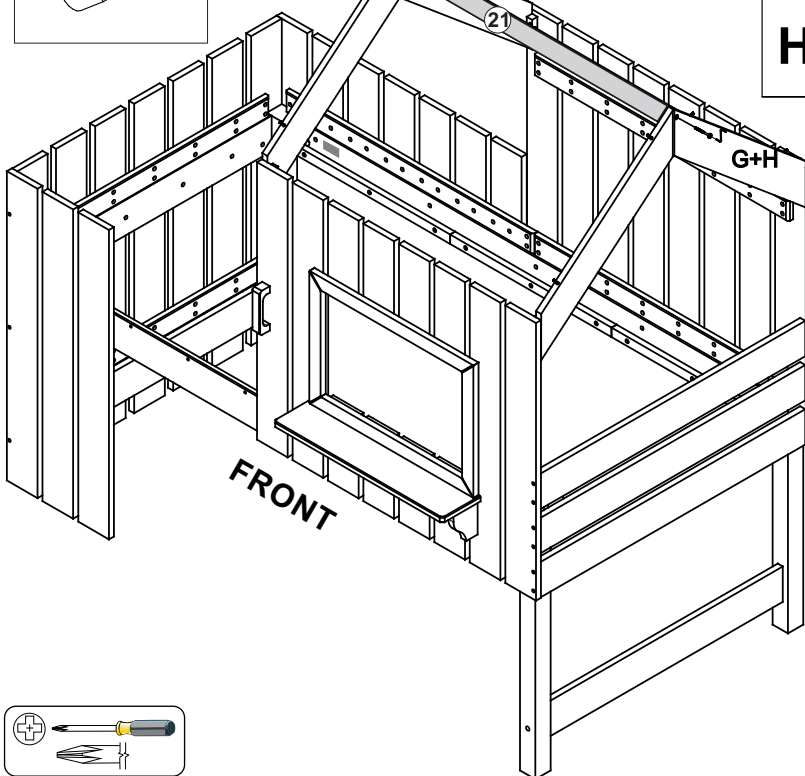


16




ATTENTION
HOLES TOP

I




06





Ø 4X35

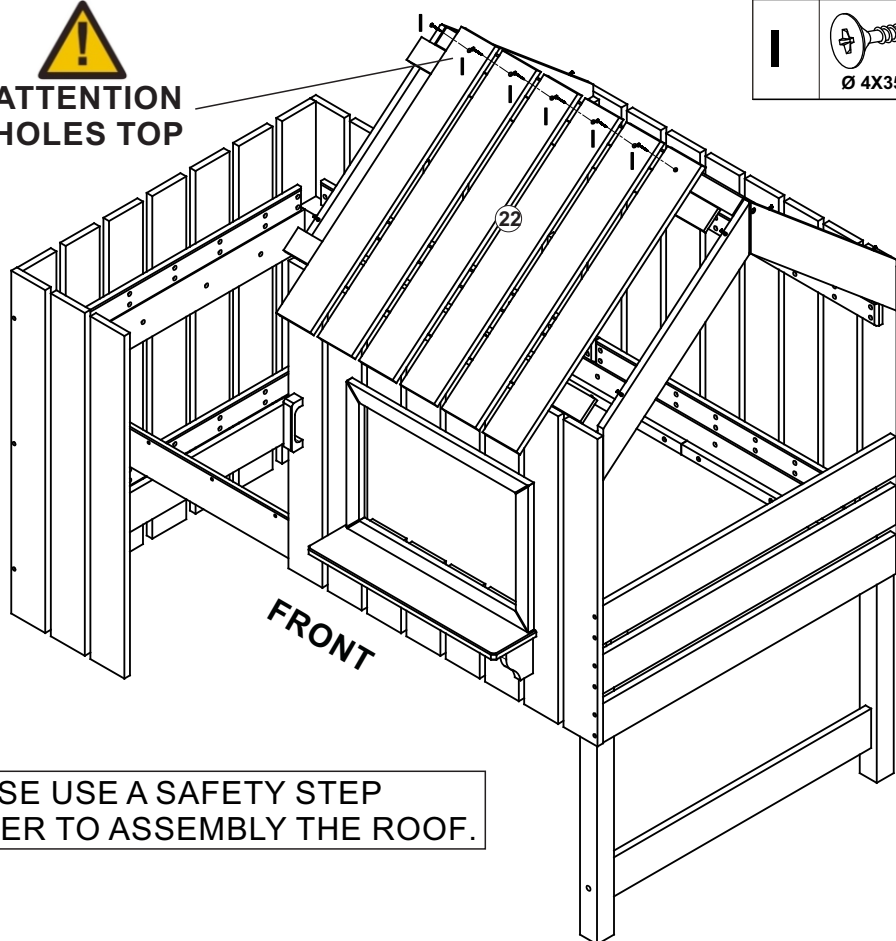





PLEASE USE A SAFETY STEP
LADDER TO ASSEMBLY THE ROOF.




17

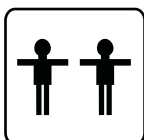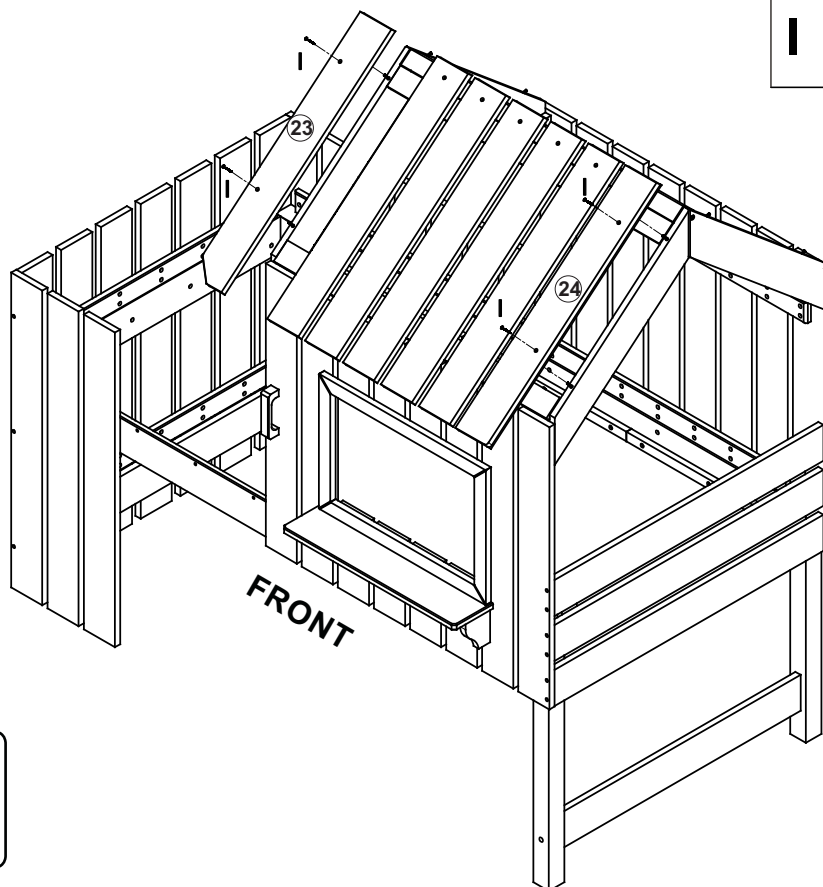



18

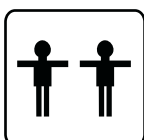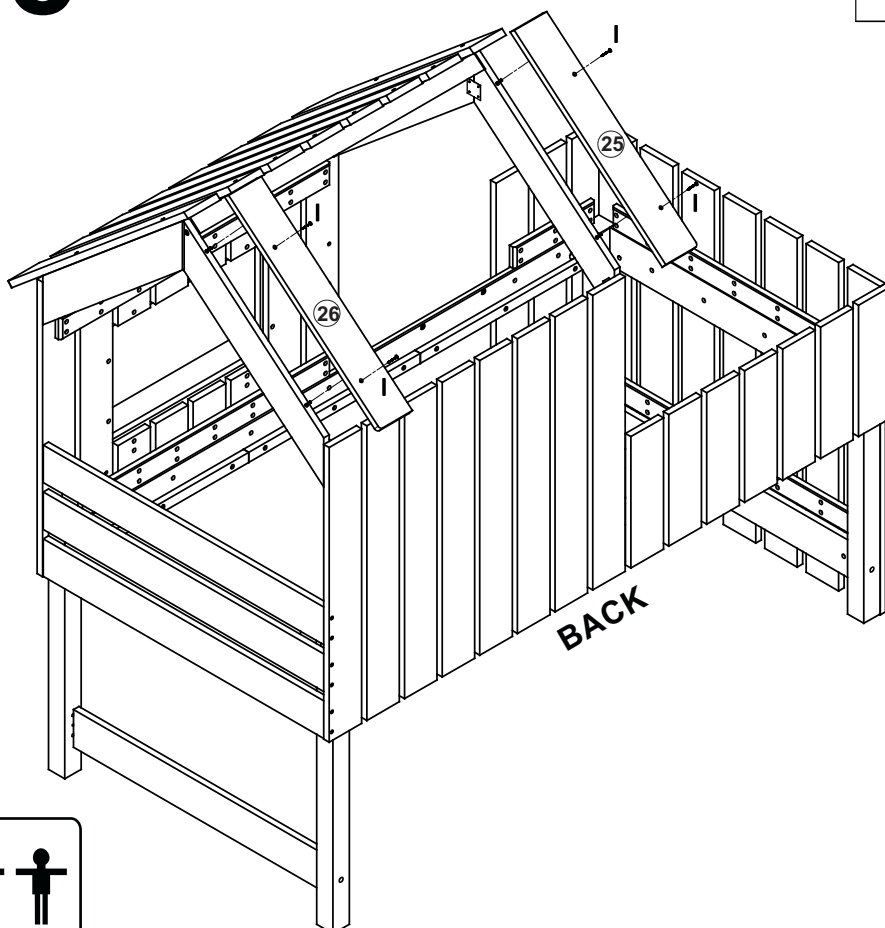




19

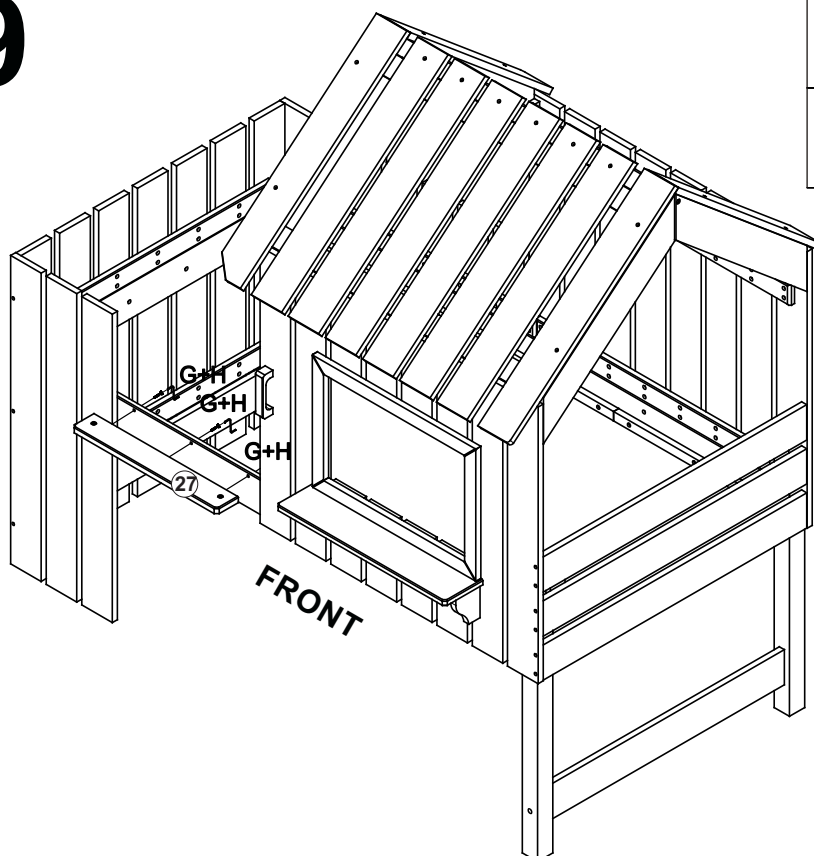


G		01
H	 Ø 7X60 Cab 13	03



20

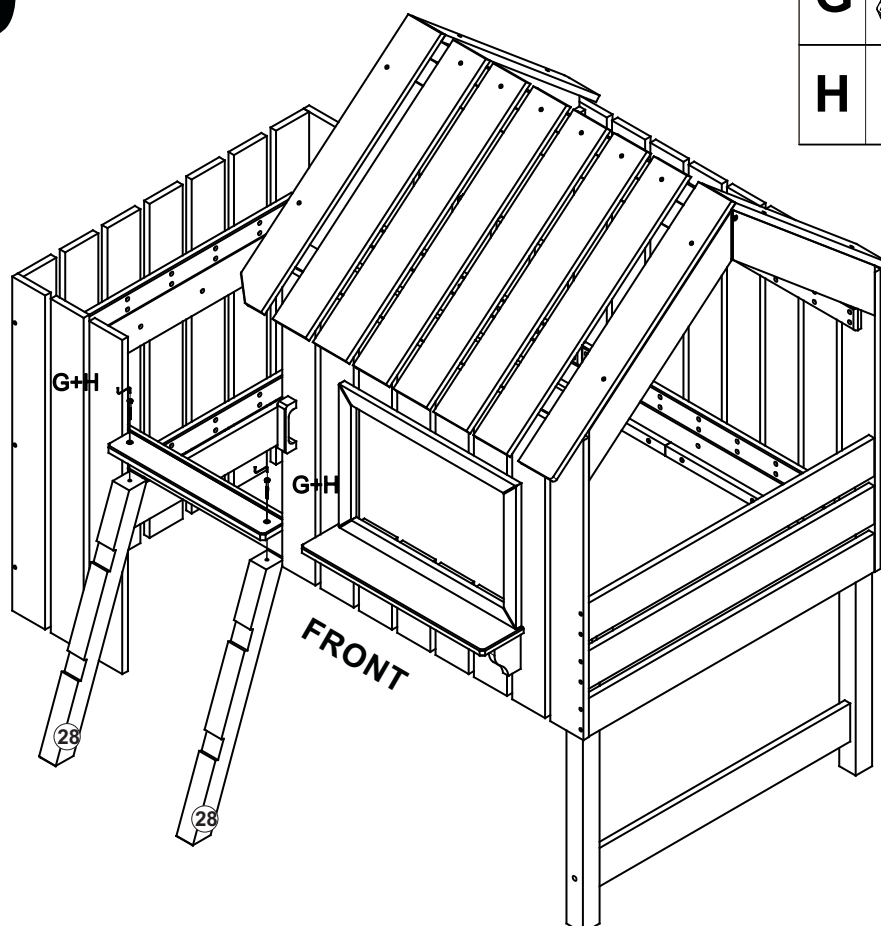


G		01
H	 Ø 7X60 Cab 13	02

21

I	 Ø 4X35	04
---	---	----

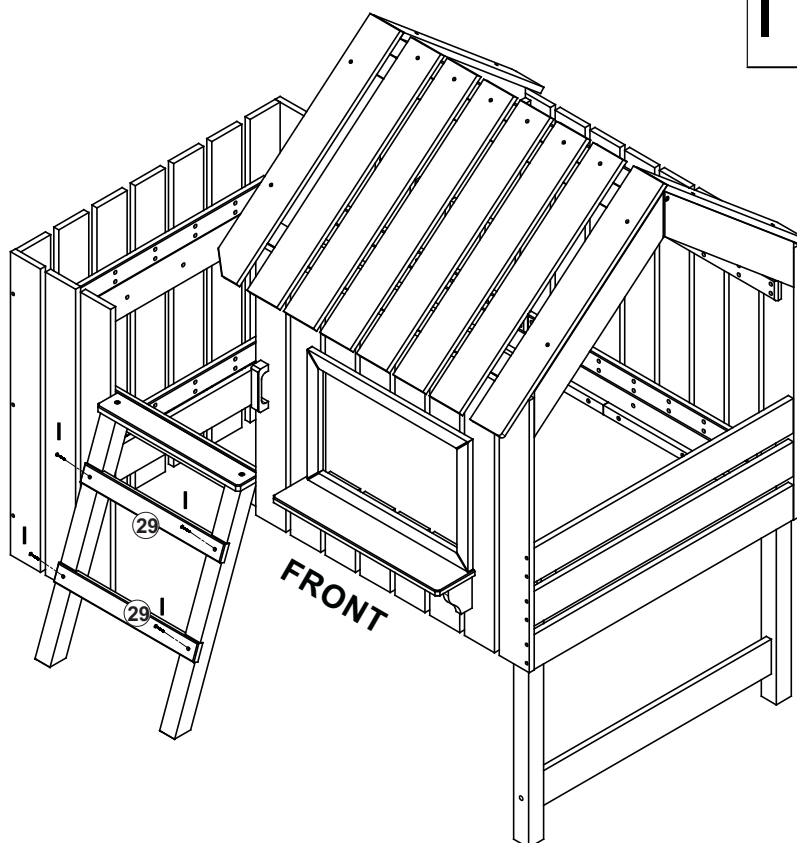

22

I	 Ø 4X35	28
---	---	----

