



Model: TM102 BEAUMONT TWIN TWIN BUNK

SAFETY WARNINGS

1. Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 inches (127mm) below the upper edge of guardrails.
4. Do not allow children under 6 years of age to use the upper bunk
5. Prohibit more than one person on the upper bunk
6. Periodically, check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight
7. Do not allow horseplay on or under the bed and prohibit jumping on the bed
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a nightlight may provide added safety precaution for a child using the upper bunk.
11. Always use guardrail on both long sides of the upper bunk. If bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
12. The use of water or sleep flotation mattresses is prohibited.
13. Keep these instructions for future reference.

STRANGULATION HAZARD

Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.

SIZE OF MATTRESS AND FOUNDATION

Use only mattress which is 74" - 75" long and 37 1/2" - 38 1/2" wide on twin upper bunk

Use only mattress which is 74" - 75" long and 37 1/2" - 38 1/2" wide on twin lower bunk

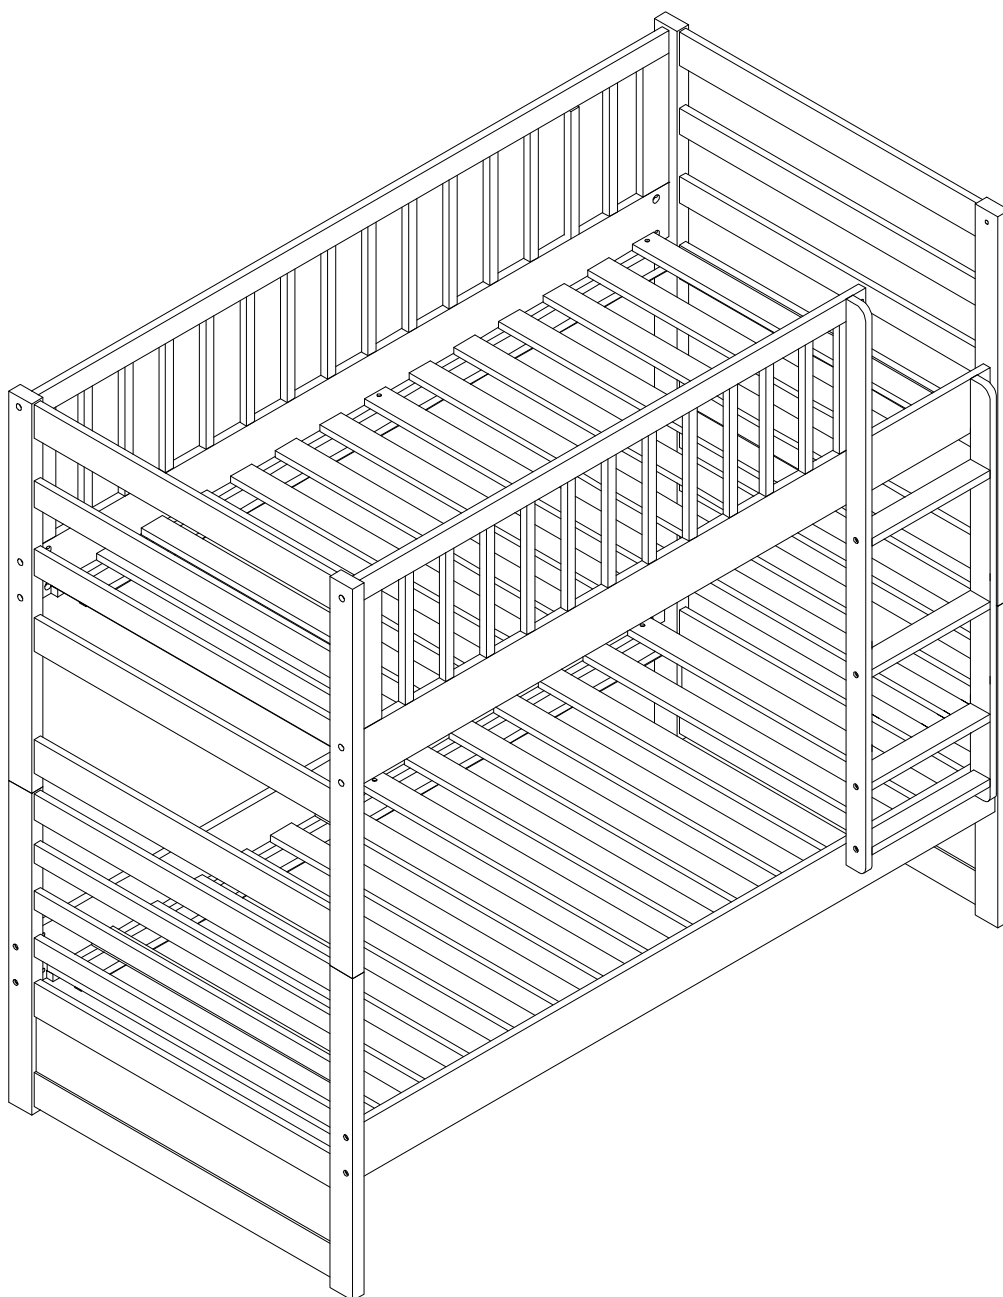
Ensure thickness of mattress and foundation combined does not exceed 8" and mattress is at least 5" below upper edge of guardrails.

Replacement parts, maybe obtained from any Donco dealer or directly from us at the below address.

6801 Snowden Road Fort
Worth, Texas 76140

ASSEMBLY INSTRUCTION


TM102 BEAUMONT TWIN TWIN BUNK BED



ASSEMBLY INSTRUCTION

TM102 BEAUMONT TWIN TWIN BUNK BED










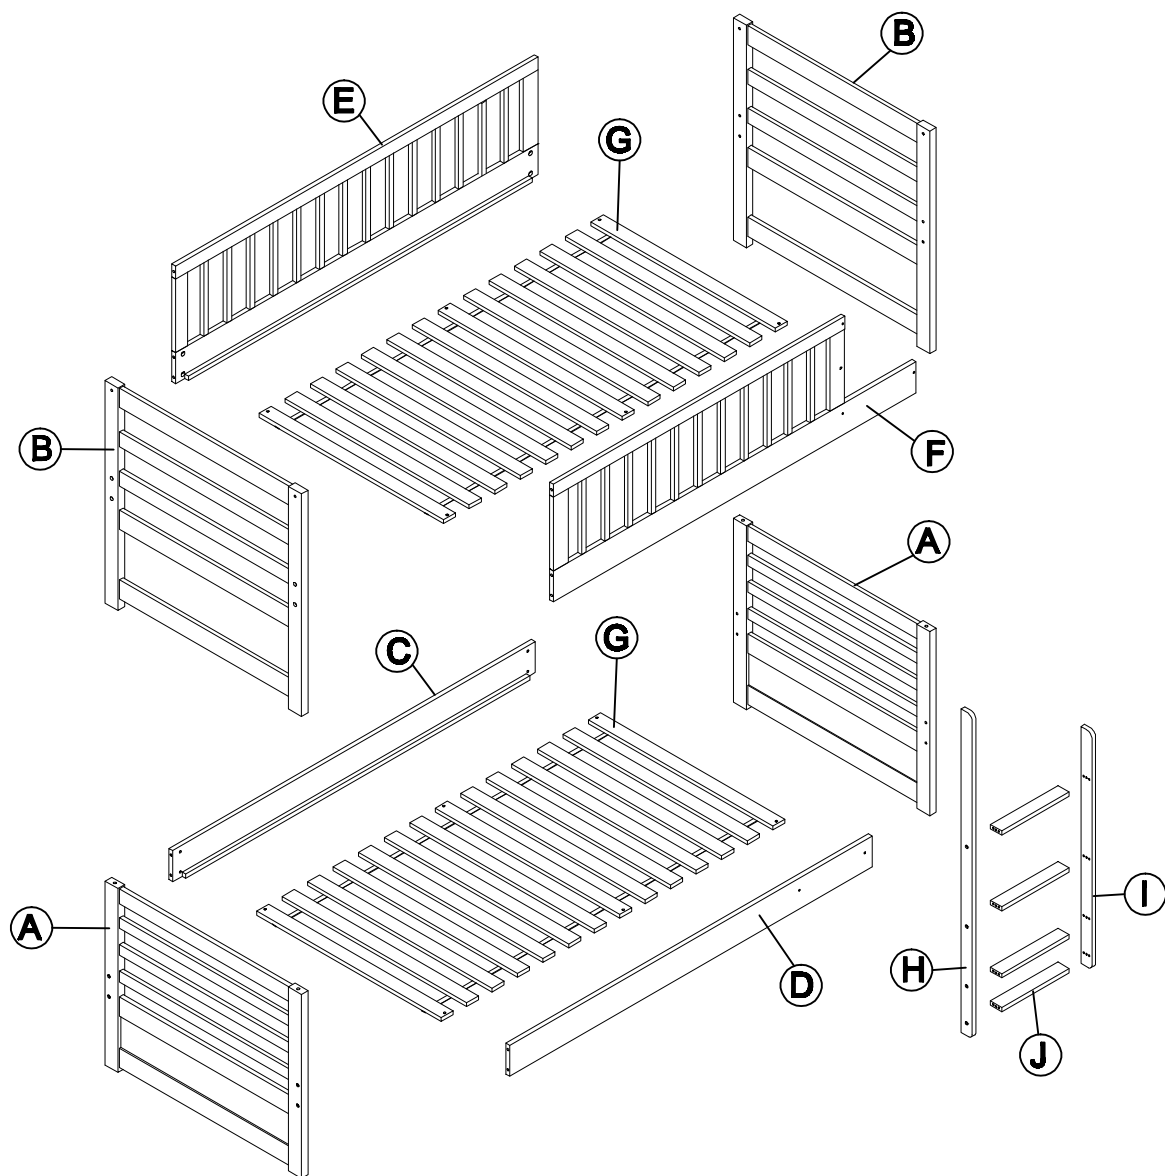
Details View



ASSEMBLY INSTRUCTION

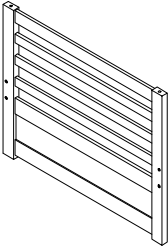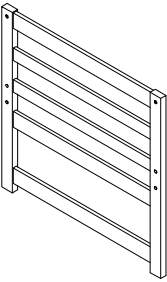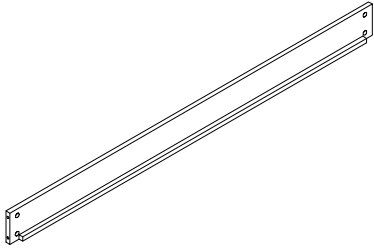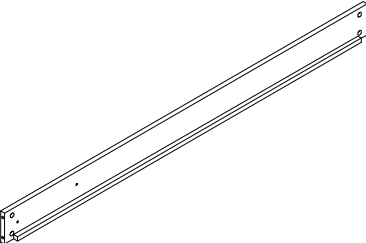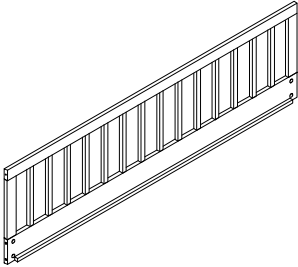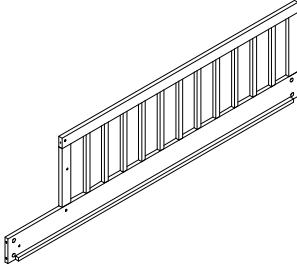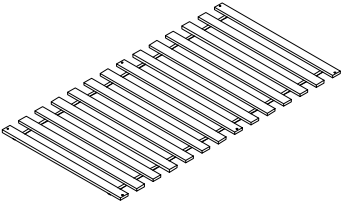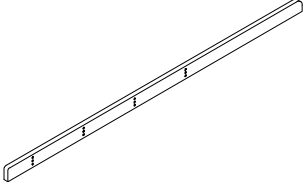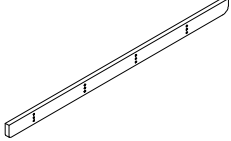TM102 BEAUMONT TWIN TWIN BUNK BED

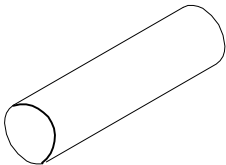
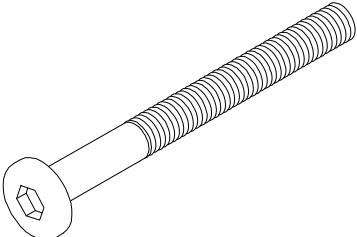

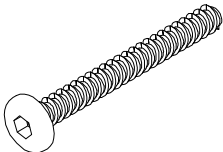
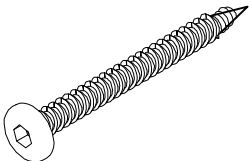
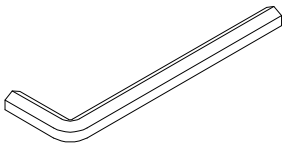
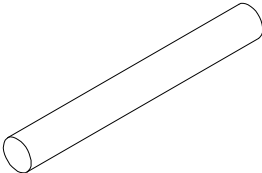

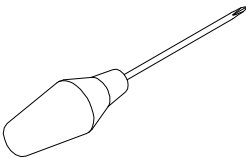
Part list

A  <p>Lower Headboard & Foot board (2pcs)</p>	B  <p>Upper Headboard & Foot board (2pcs)</p>	C  <p>Lower Back Side rails (1pc)</p>
D  <p>Lower Front Side rails (1pc)</p>	E  <p>Back guard rail (1pc)</p>	F  <p>Front guard rail (1pc)</p>
G  <p>Slats (2pcs)</p>	H  <p>Left Ladder Post (1pc)</p>	I  <p>Right Ladder Post (1pc)</p>
J  <p>Ladder steps (4pcs)</p>		

ASSEMBLY INSTRUCTION

TM102 BEAUMONT TWIN TWIN BUNK BED

Hardware list


<p>1</p>  <p>Wood dowel Ø8 x 40 (16pcs)</p>	<p>2</p>  <p>Allen Bolt 1/4" x 75 (16pcs)</p>	<p>3</p>  <p>Half moon 1/4" (16pcs)</p>
<p>4</p>  <p>Allen Bolt 1/4" x 35 (6pcs)</p>	<p>5</p>  <p>Allen Bolt Screw 1/4" x 50 (11pcs)</p>	<p>6</p>  <p>Allen key (1pc)</p>
<p>7</p>  <p>Metal Dowel 12 x100 (4pcs)</p>	<p>8</p>  <p>Screw (12pcs)</p>	 <p>Screwdriver.</p>

ASSEMBLY INSTRUCTION

TM102 BEAUMONT TWIN TWIN BUNK BED


STEP 1:

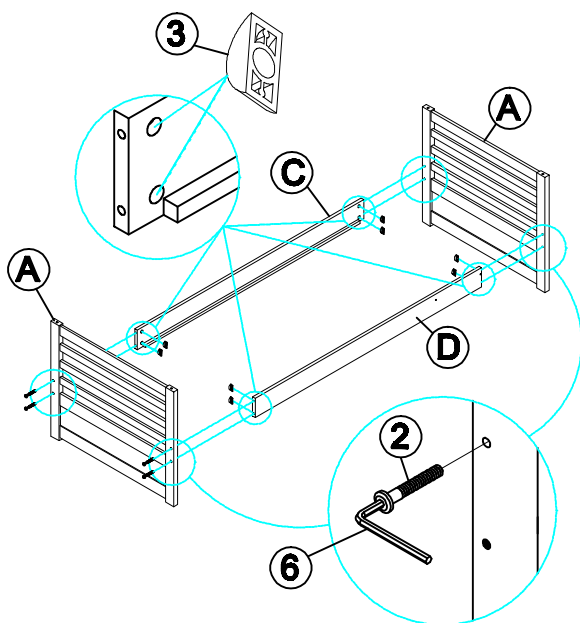Insert Half moon (3) into Lower Back and Front side rails (C,D). Attach lower Headboard & Footboard (A) into Lower Back and Front side rails (C,D) with Allen Bolts (2). Tighten Allen Bolts (2) with allen key (6).




STEP 2:

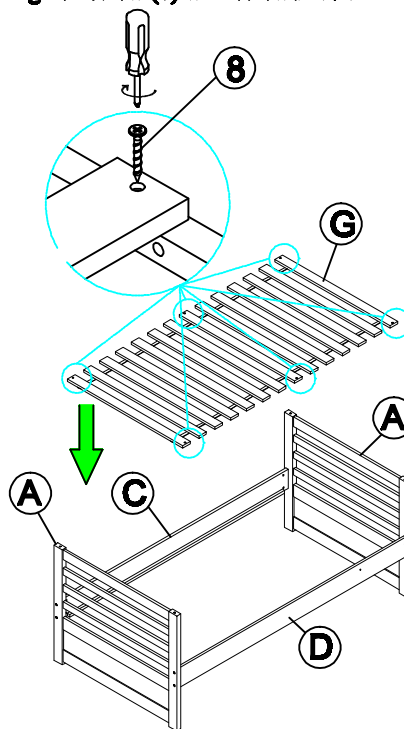Attach slat (G) into Lower Back and Front side rails (C,D) with screw (8). Tighten screw (8) with screwdriver.




STEP 3:

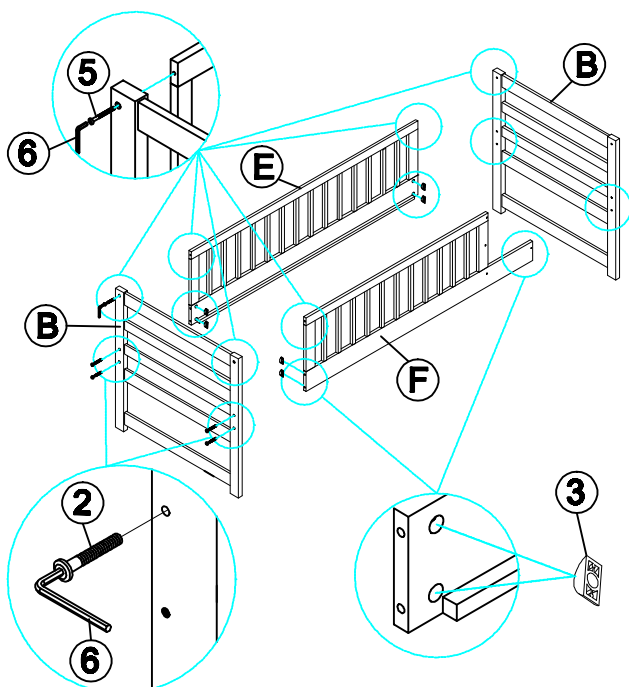Insert Half moon (3) into Back and Front Guard rails (E,F). Attach Upper Headboard & Footboard (B) into Back and Front Guard rail (E,F) with Allen Bolts (2) and Allen Bolts screw (5). Tighten Allen Bolts (2) and Allen Bolts screw (5) with allen key (6).



STEP 4:

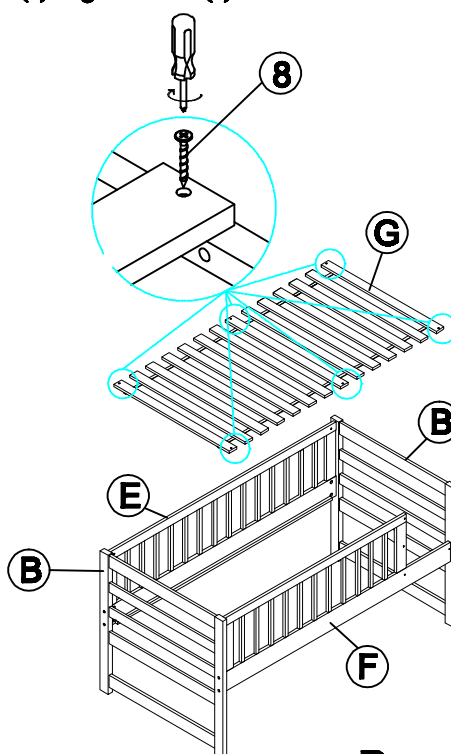Attach slat (G) into Back and Front Guard rails (E,F) with screw (8). Tighten screw (8) with screwdriver.




ASSEMBLY INSTRUCTION

TM102 BEAUMONT TWIN TWIN BUNK BED


STEP 5:

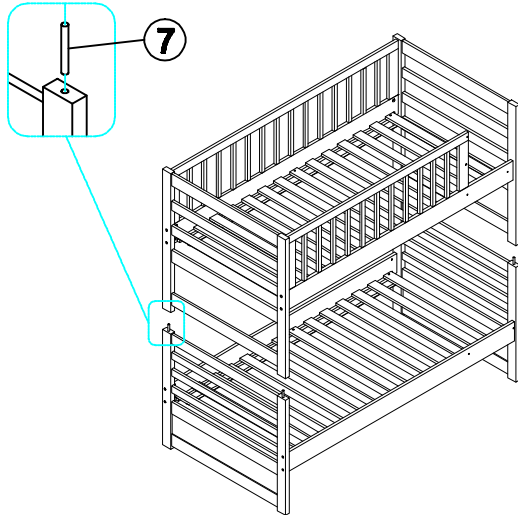Connect Upper bunk to bottom bunk by Metal dowel (7)



STEP 6:

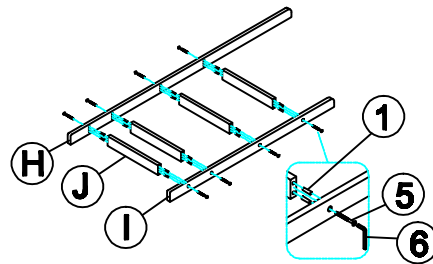Insert wood dowel(1) into Ladder steps (J). Attach Left and right Ladder post (H,I) into Ladder steps (J) with Allen Bolts screw (5). Tighten Allen Bolts screw (5) with allen key (6).



STEP 7:

Attach Ladder into bunk bed with Allen Bolts (4). Tighten Allen Bolts (4) with allen key (6).

