


Fort Worth, Texas 76140

## ASSEMBLY INSTRUCTIONS


### 2017 - TWIN SHACK LOW LOFT

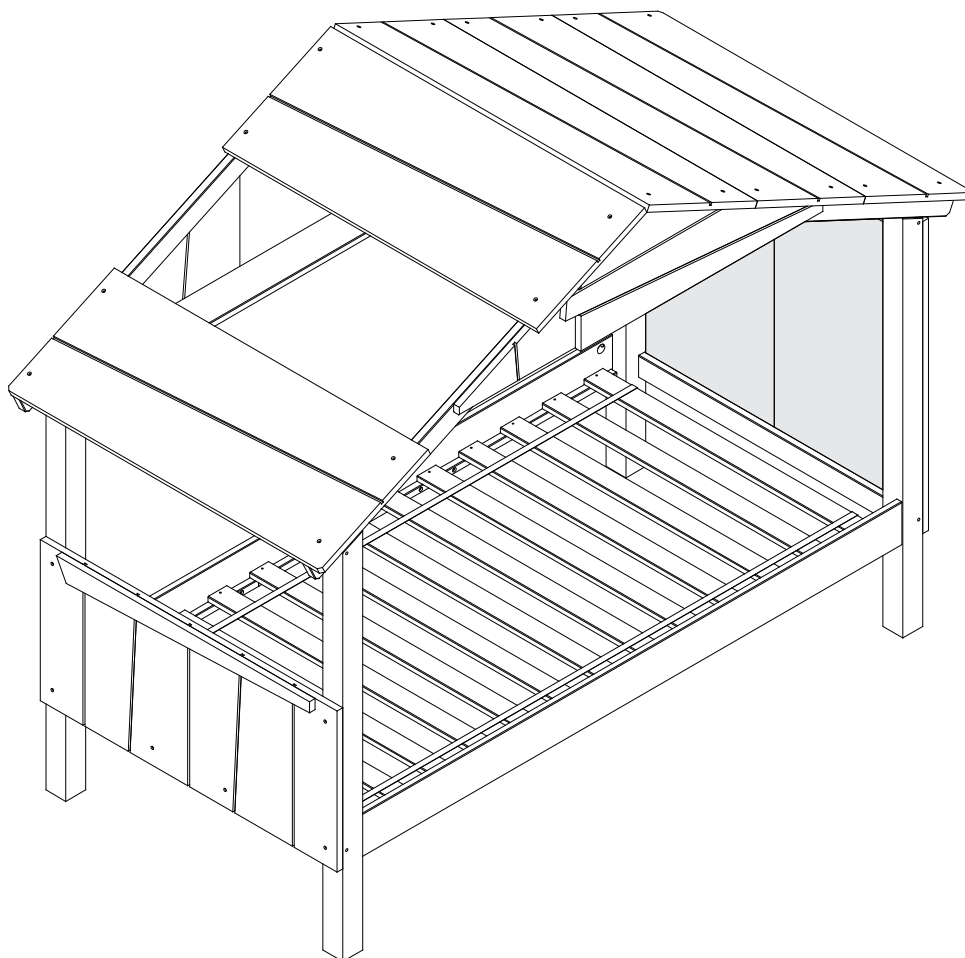



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

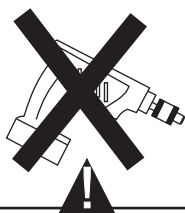


\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.

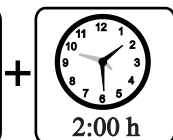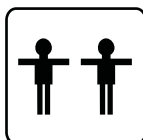

#### Tools Required



(Not included)



(Not included)

#### IMPORTANT:


**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

## Part List - 2017 - TWIN SHACK LOW LOFT



RUSTIC  
OUTSIDE

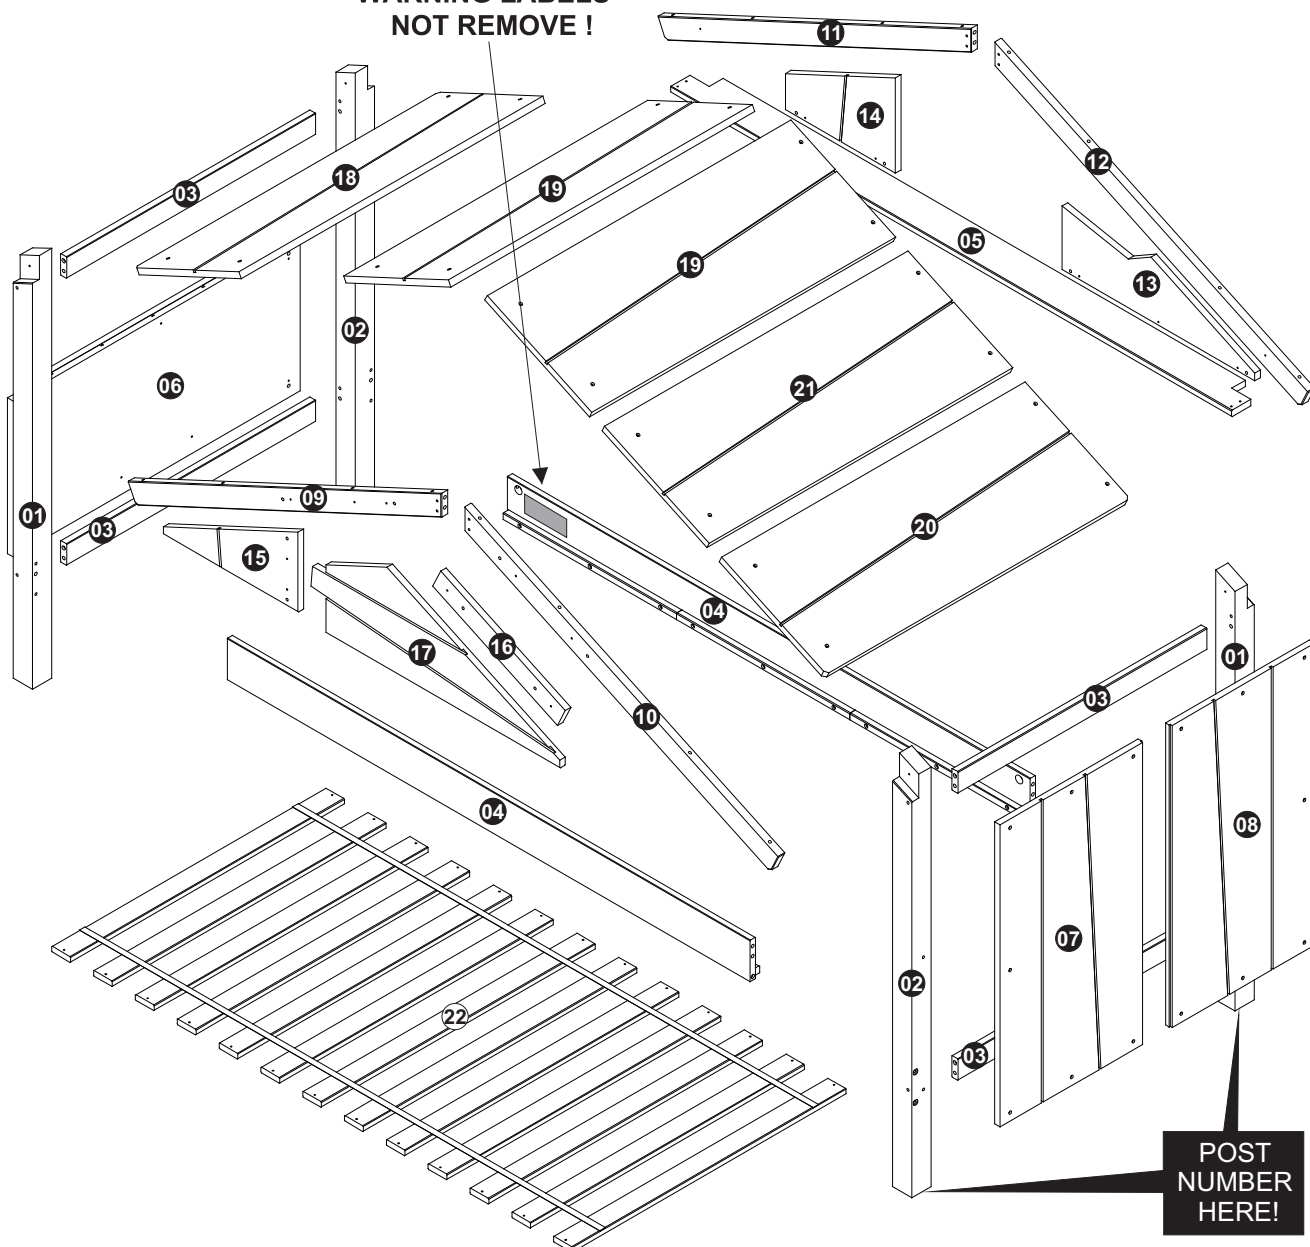












WARNING LABELS  
NOT REMOVE !





### Caution


Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries.

**Identifying the Hardware**-Identify the hardware using the illustrations below.

|   |   |    |
|---|---|----|
| A | <br>Ø 10x40            | 16 |
| B | <br>Ø 8x30             | 36 |
| C | <br>Ø 4,5X60           | 04 |
| D | <br>Ø 4X35            | 58 |
| E | <br>Ø 1/4X110 Cab 17 | 04 |
| F | <br>Ø 7X100 Cab 17   | 12 |
| G |                      | 04 |
| H |                      | 01 |
| I |                      | 08 |
| J | <br>Ø 4X30           | 26 |
| K |                      | 04 |
| L | <br>Ø 3,5X16         | 08 |
| M |                      | 04 |

# 01

|          |  |           |
|----------|--|-----------|
| <b>A</b> | <br>Ø 10x40 | <b>16</b> |
| <b>B</b> | <br>Ø 8x30  | <b>28</b> |

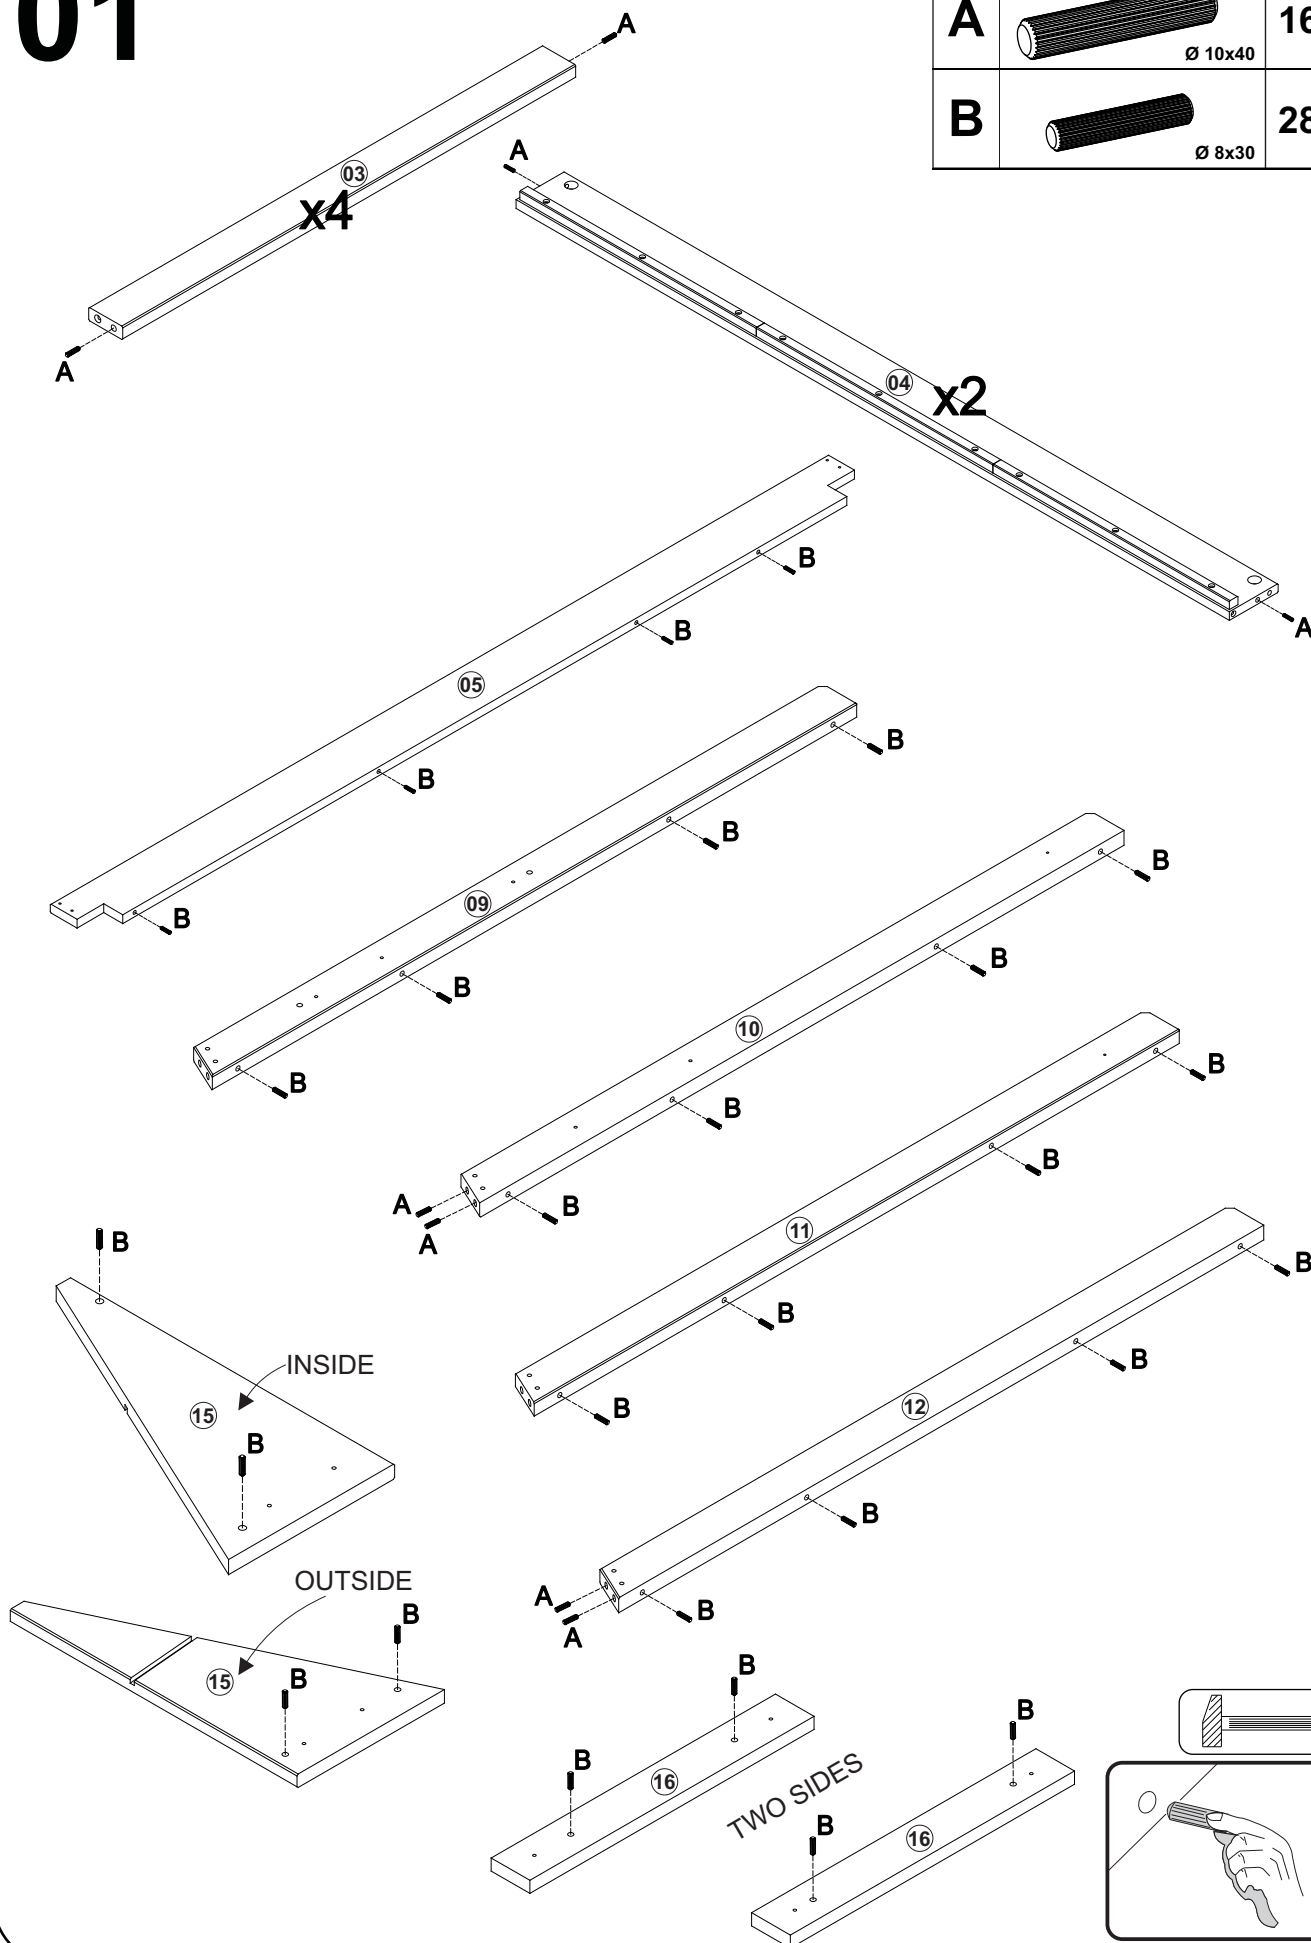


# 02




PLEASE ASSEMBLY THE  
HEADBOARDS ON THE FLOOR

|   |  |    |
|---|--|----|
| F |  | 08 |
| H |  | 01 |

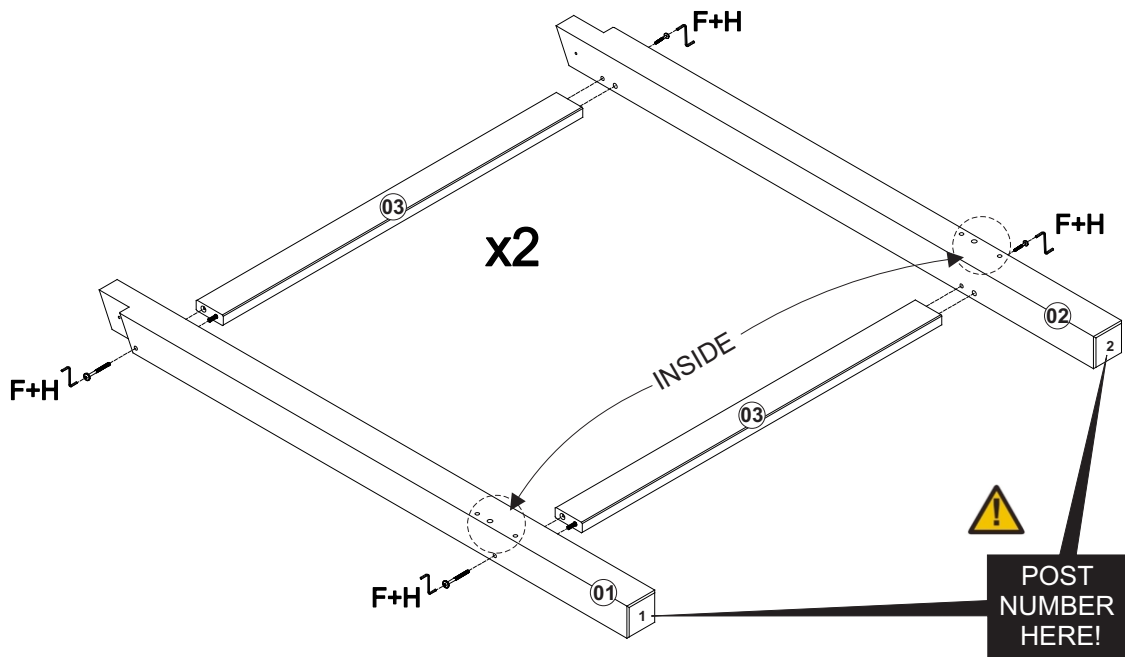


# 03

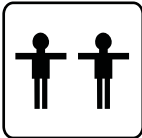

RIGH SIDE





|   |  |    |
|---|--|----|
| E |  | 04 |
| F |  | 04 |
| G |  | 04 |
| H |  | 01 |

LEFT SIDE


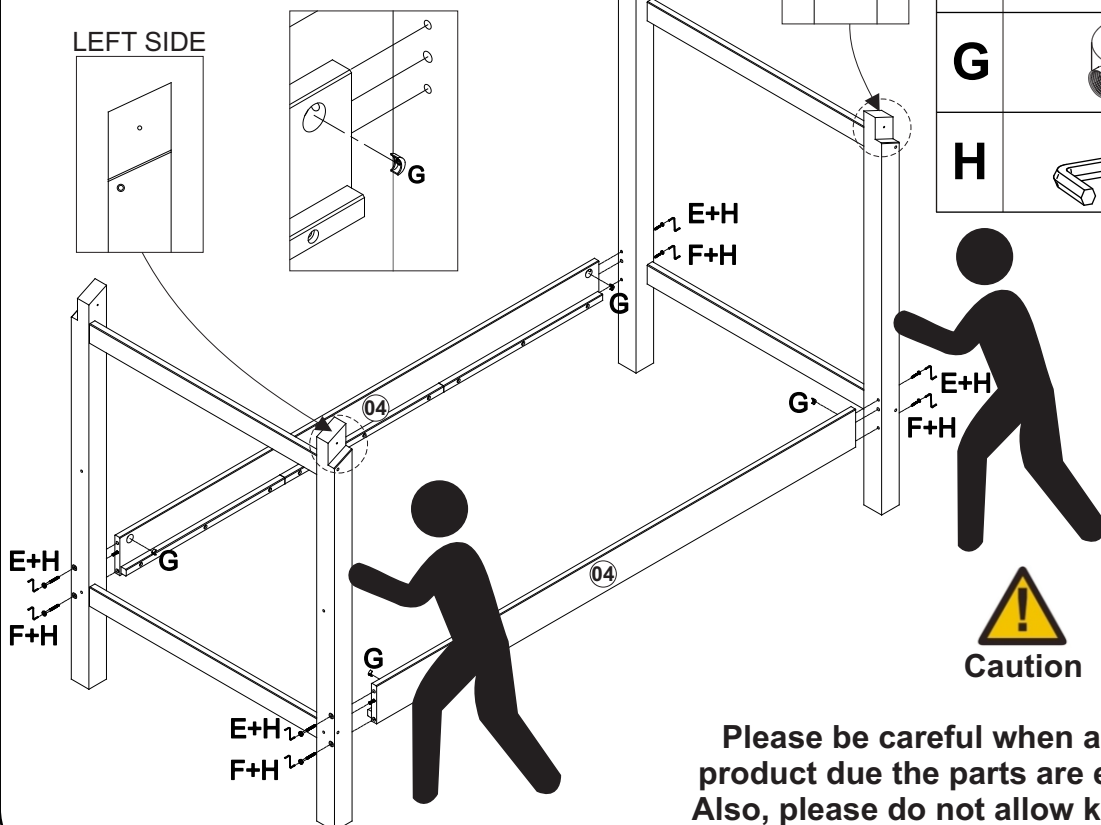


Please be careful when assembling this  
product due the parts are extremely heavy.  
Also, please do not allow kids around when  
assembling this bed to avoid injuries.


# 04

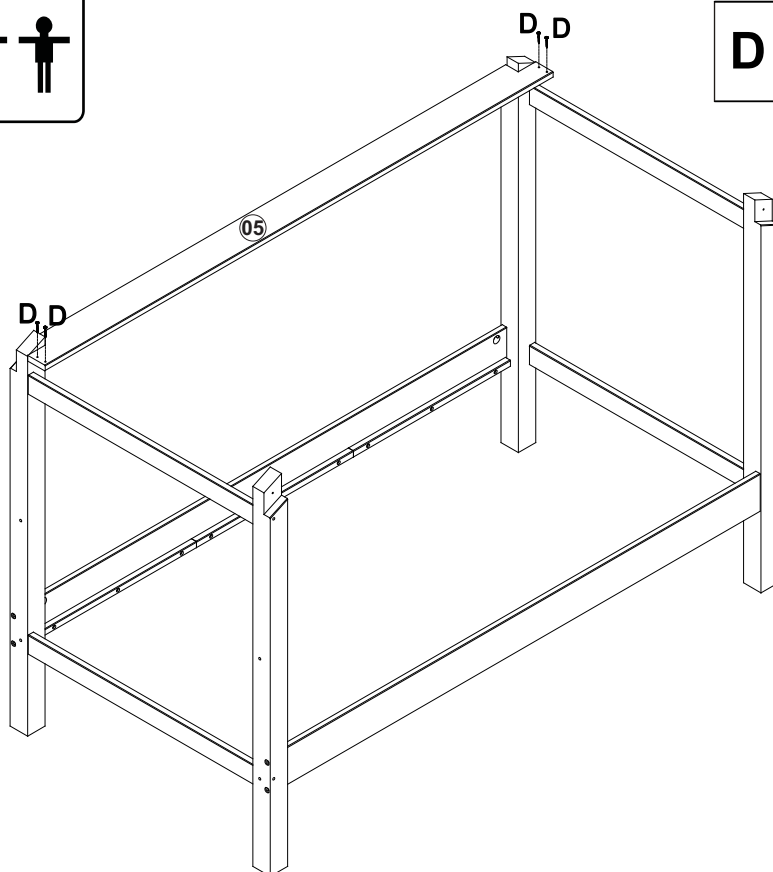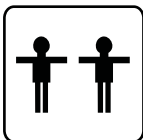


SCREW

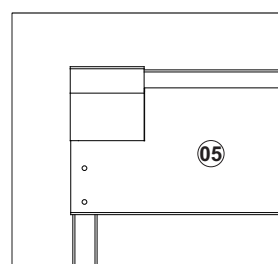
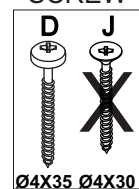




# 05

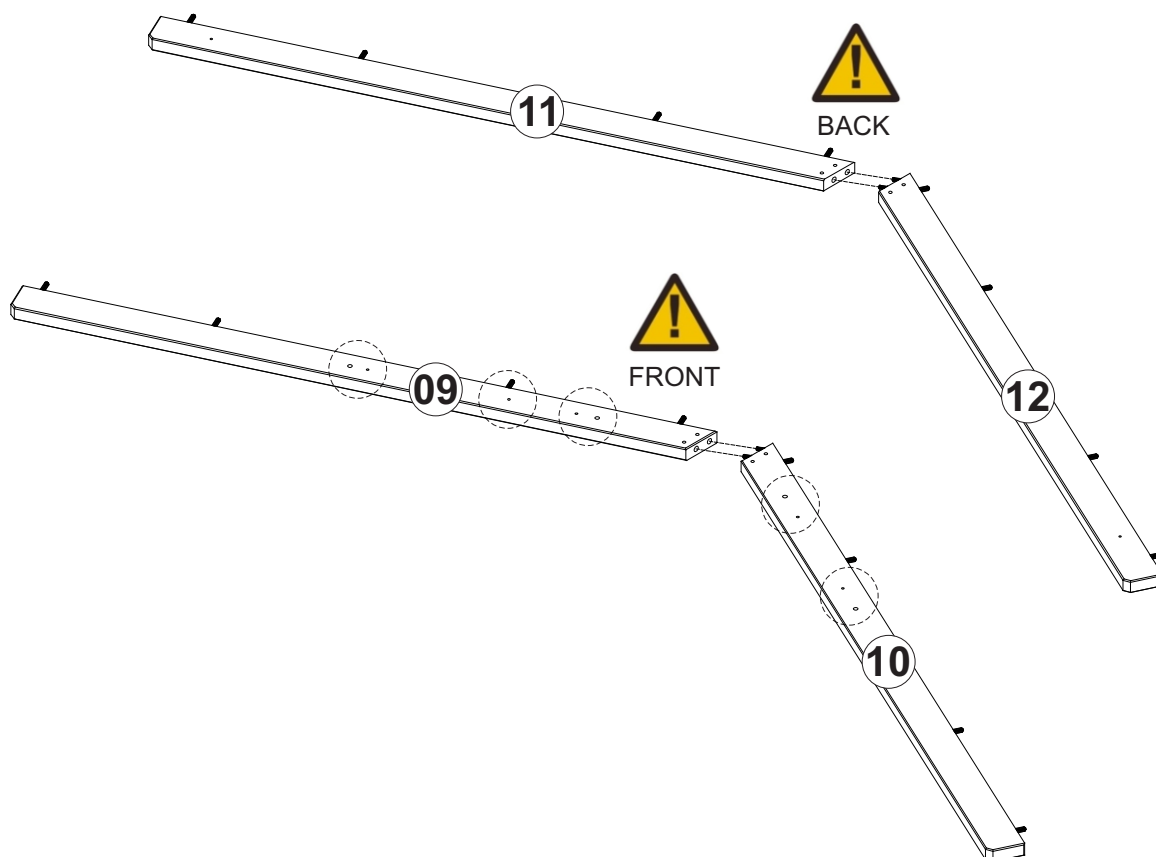


# 06

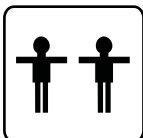


|   |   |    |
|---|---|----|
| I |  | 08 |
| K |  | 04 |

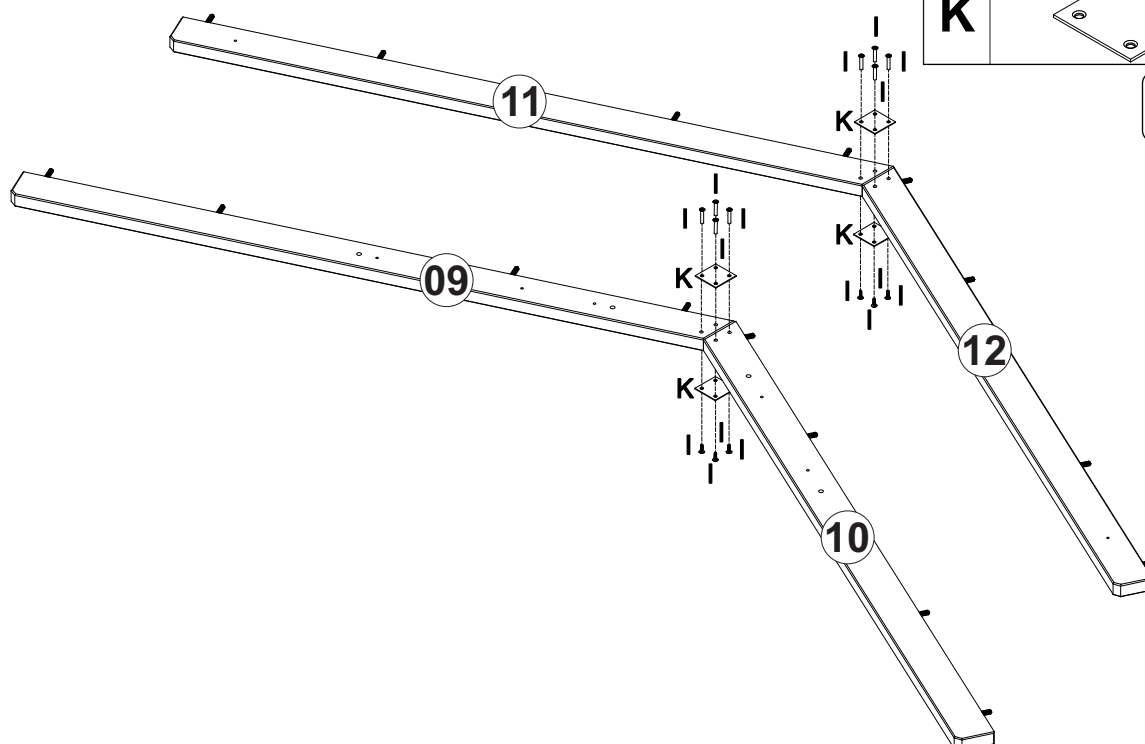



# 07

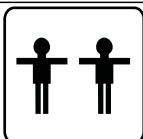

PRE-HOLES

|   |   |    |
|---|---|----|
| C |  | 04 |
|---|---|----|



Ø 4,5X60

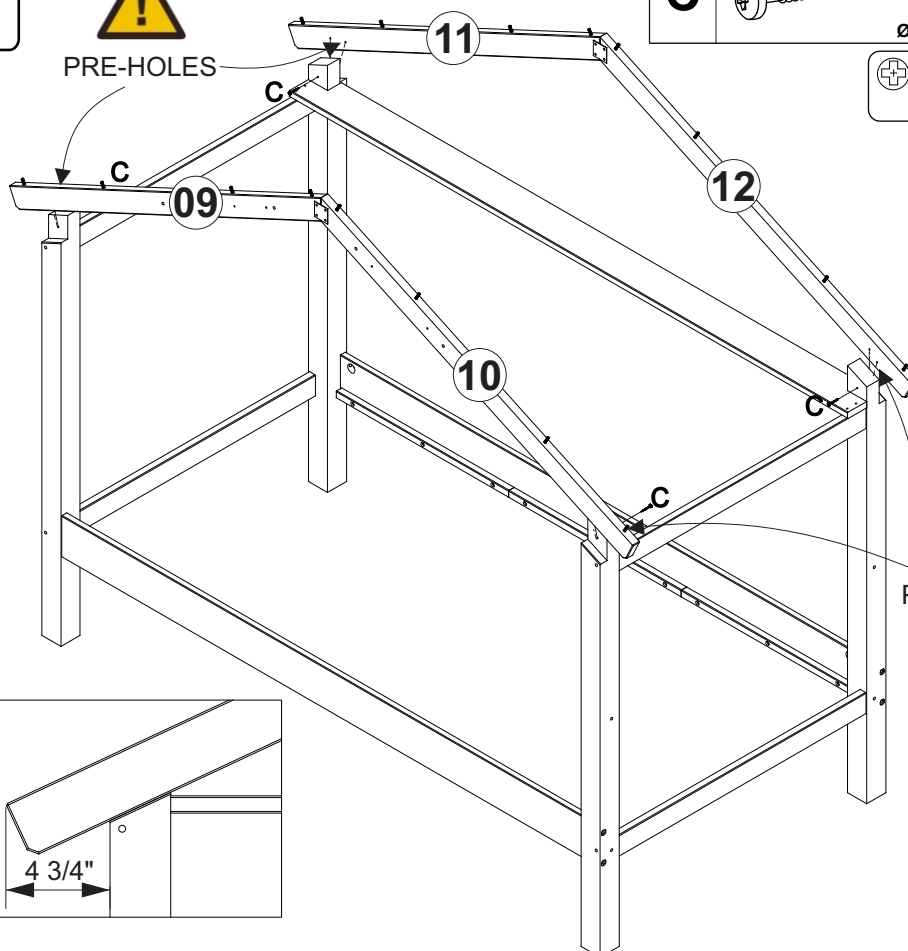



PRE-HOLES





SCREW

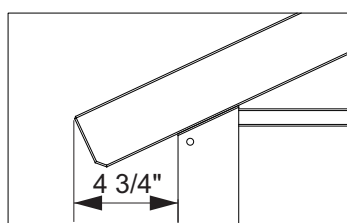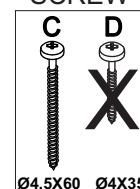


# 08

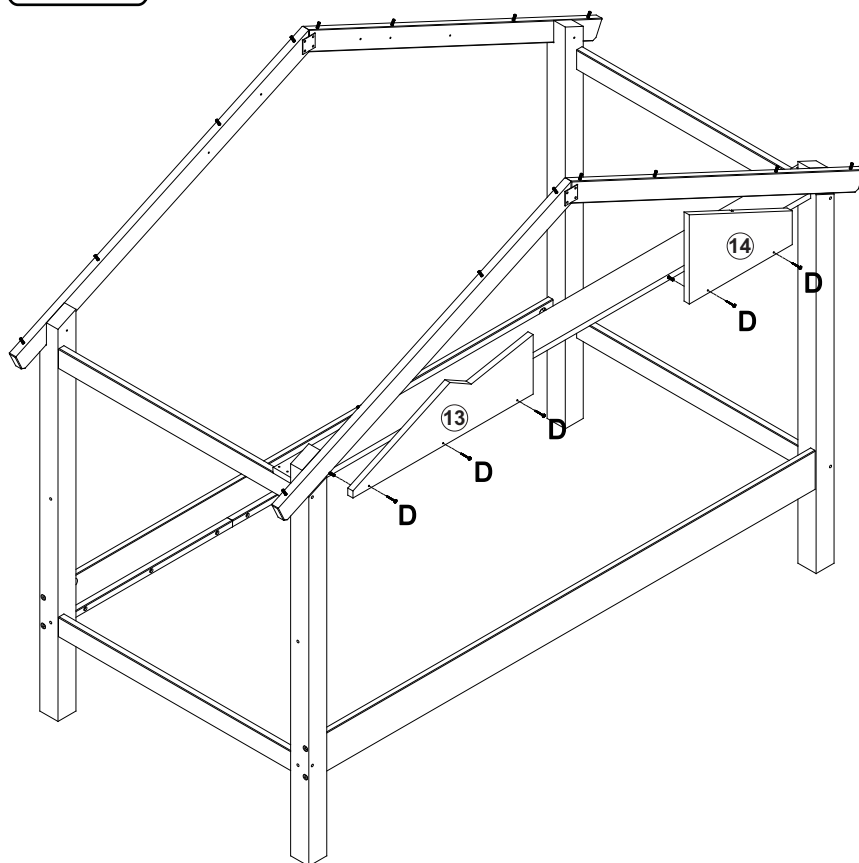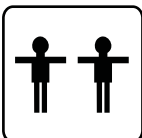



|          |   |           |
|----------|---|-----------|
| <b>D</b> | <br>Ø 4X35 | <b>05</b> |
|----------|---|-----------|







SCREW

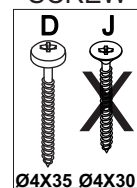

# 09

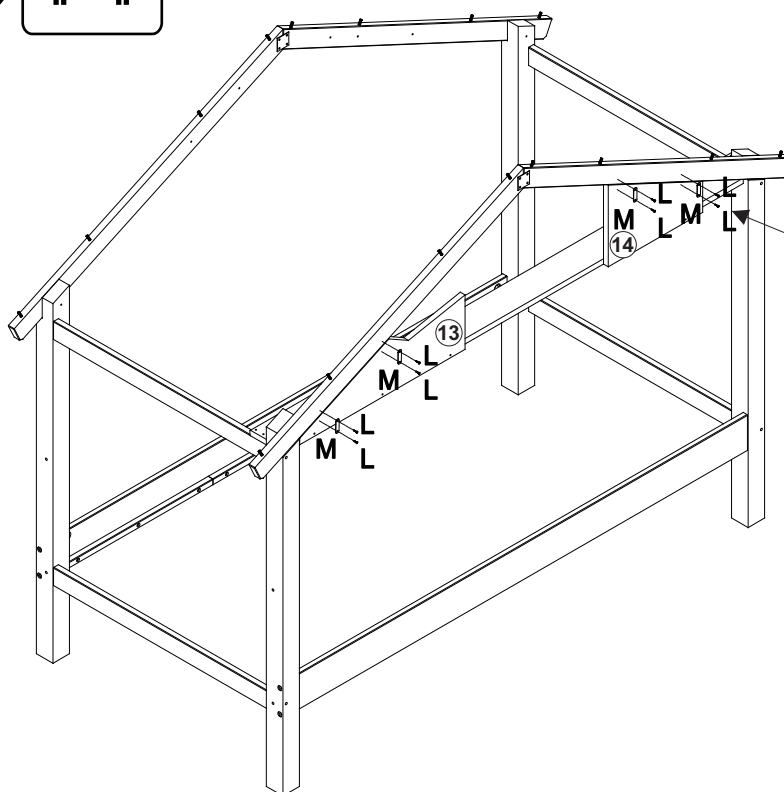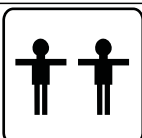


|          |   |           |
|----------|---|-----------|
| <b>L</b> | <br>Ø 3,5X16 | <b>08</b> |
| <b>M</b> |              | <b>04</b> |

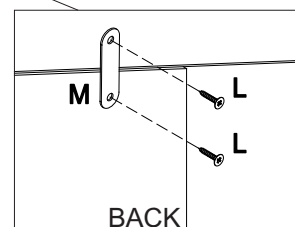





# 10

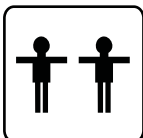

FRONT

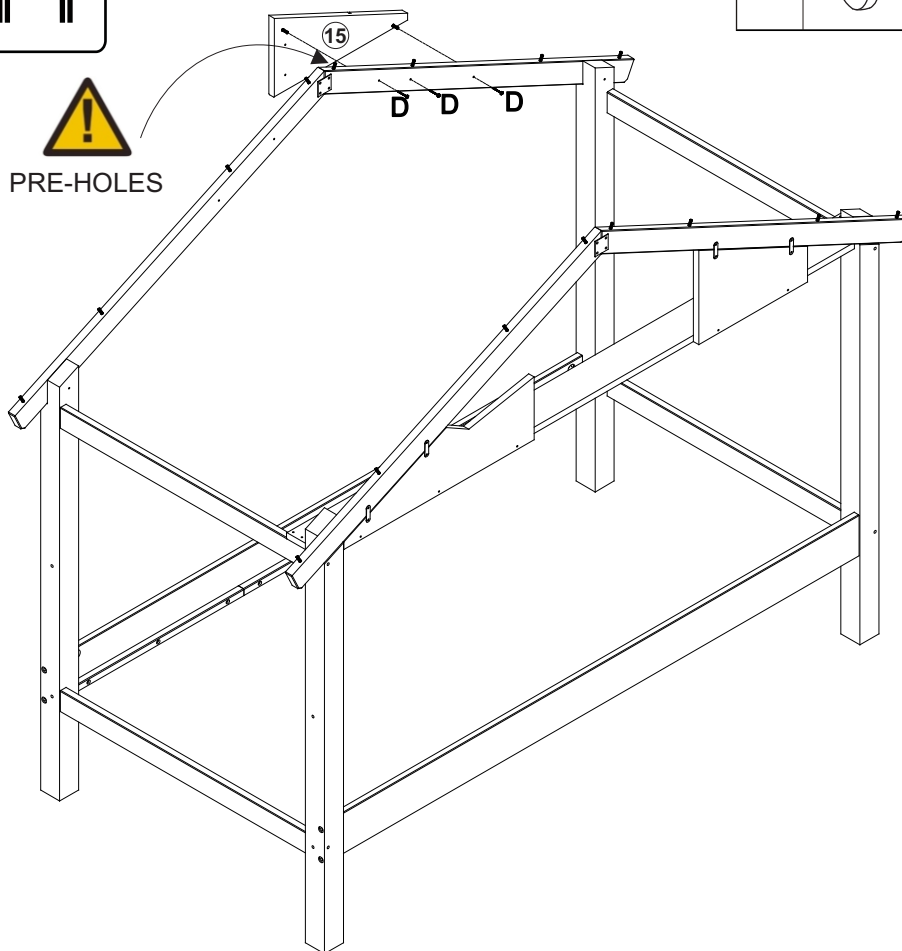


**D**




Ø 4X35


**03**



SCREW

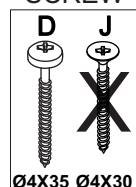

# 11

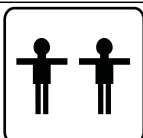


**B**



Ø 8x30



**02**

**D**





Ø 4X35


**02**




SCREW

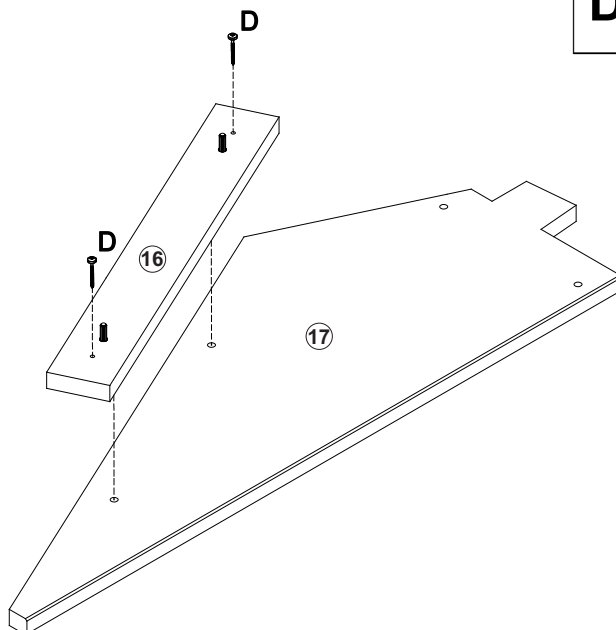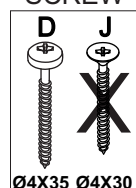


# 12

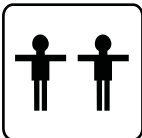

  
PRE-HOLES  
FRONT

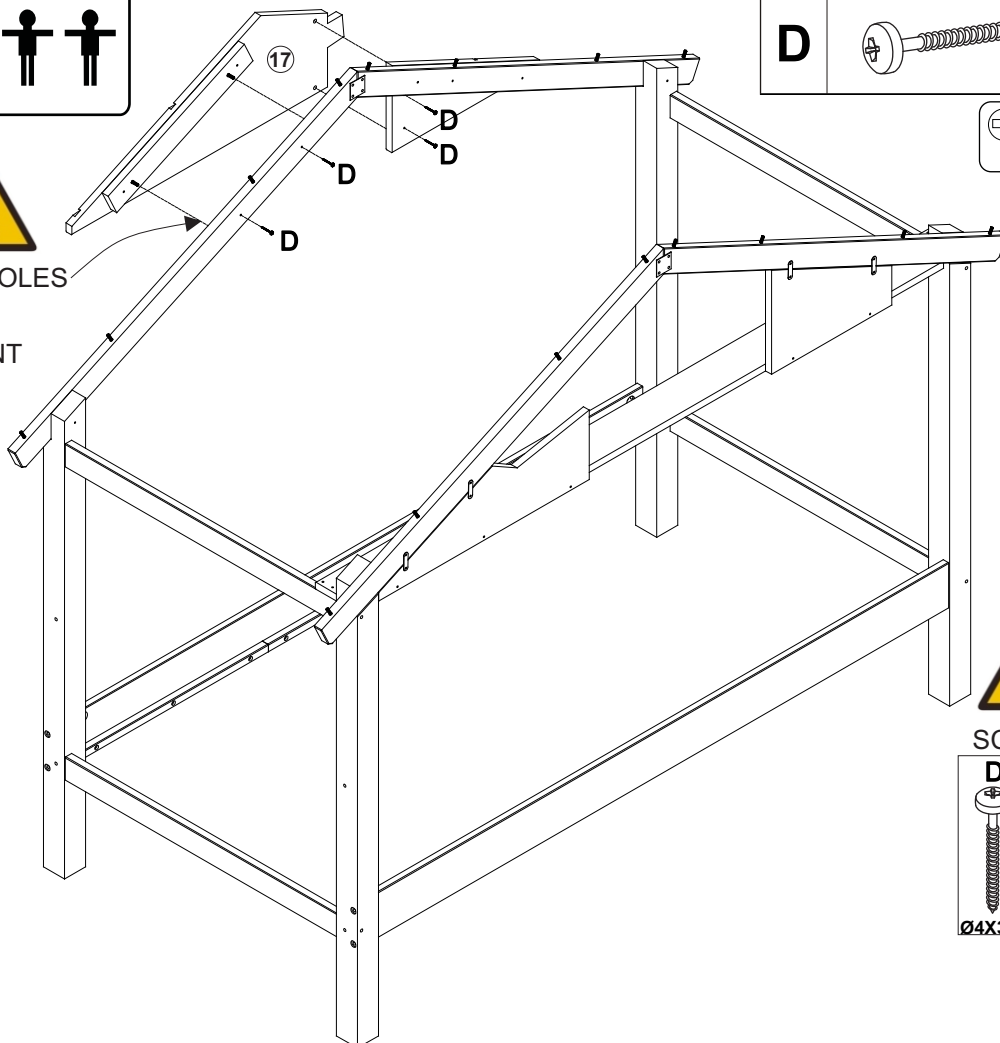


**D**




Ø 4X35


**04**



SCREW


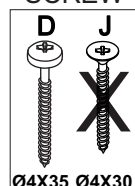


# 13

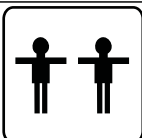


ROOF

+ SPACE FRONT

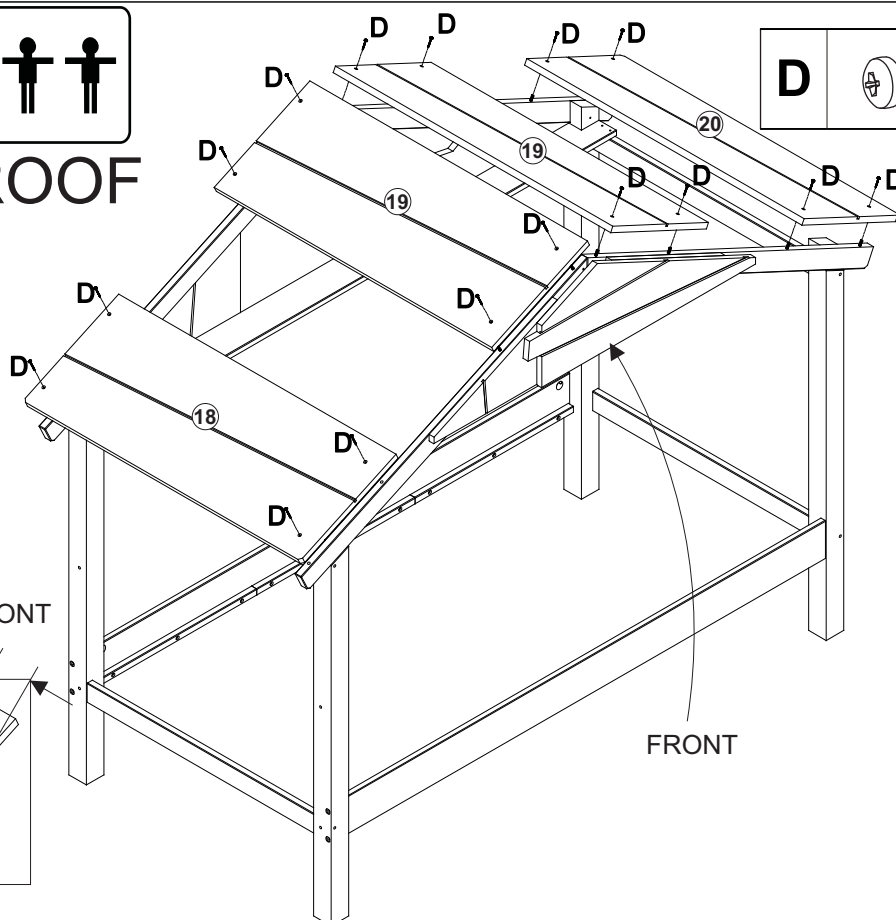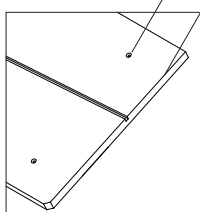


**D**




Ø 4X35






**16**





SCREW

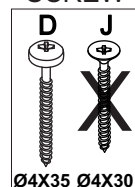


# 14

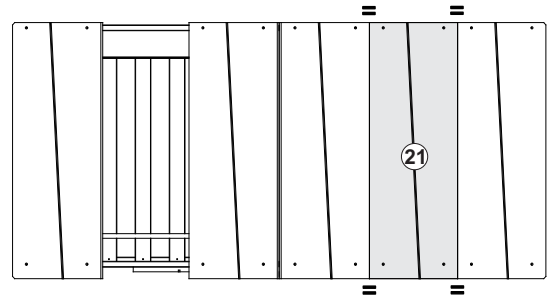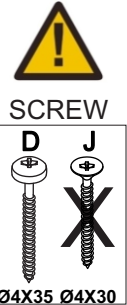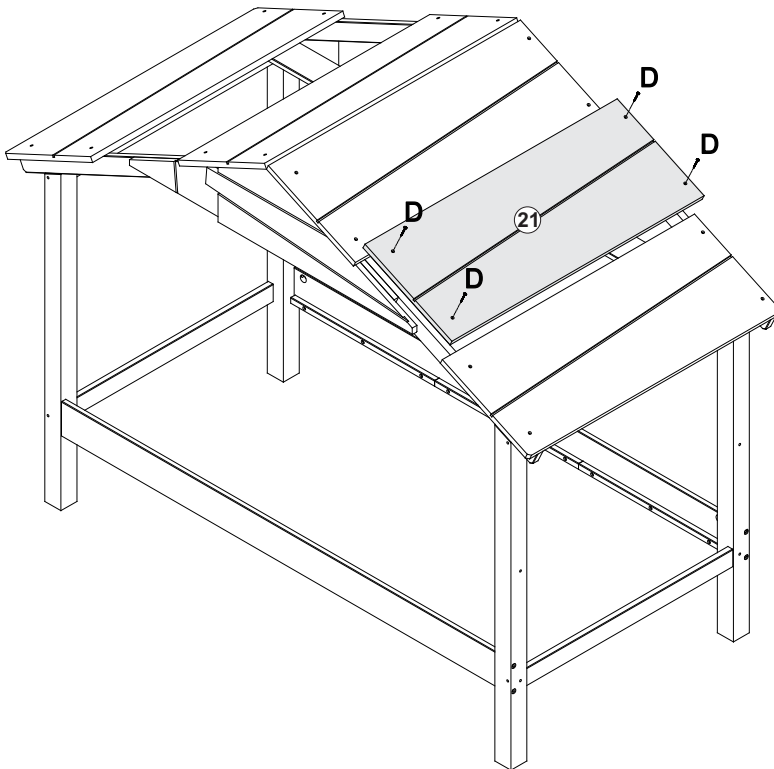

# 15

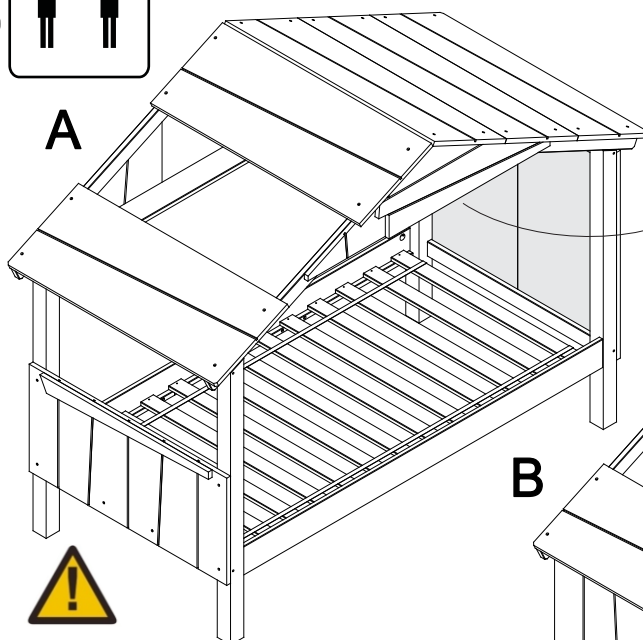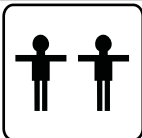


**B**

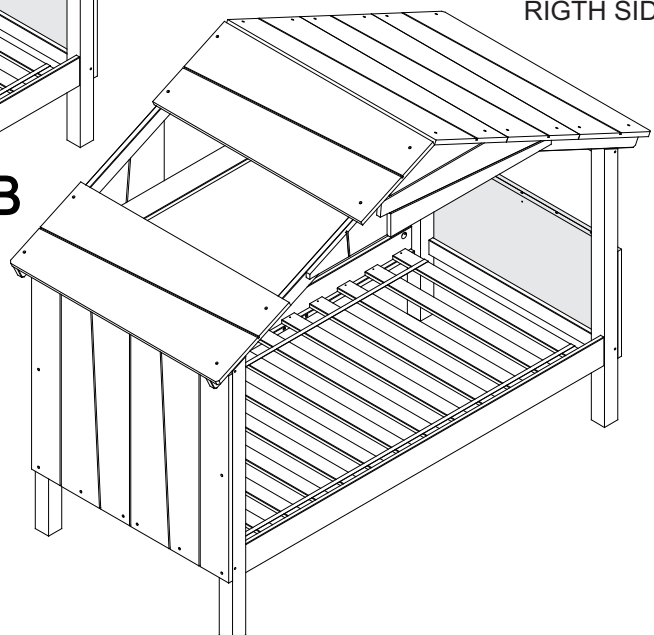





**FRONT**

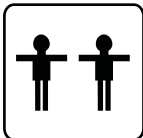


# 16





|          |   |           |
|----------|---|-----------|
| <b>B</b> | <br>Ø 8x30 | <b>04</b> |
| <b>D</b> | <br>Ø 4X35 | <b>06</b> |




SCREW

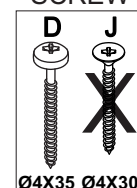


STEP 2

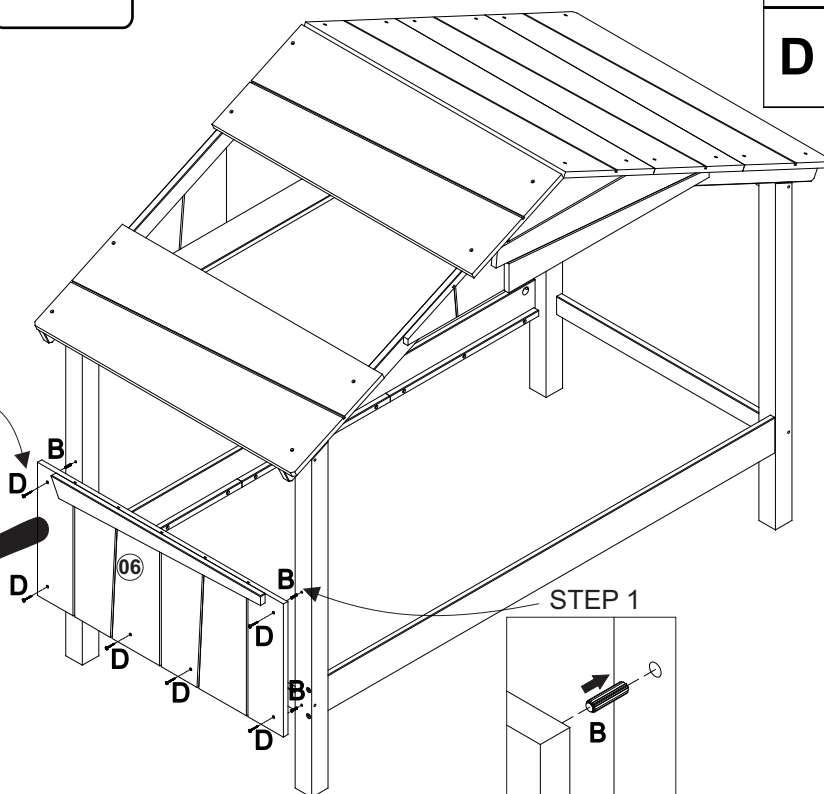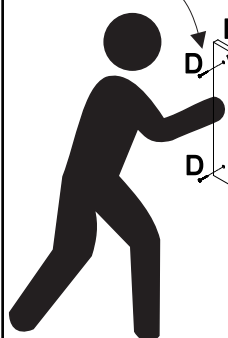

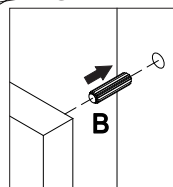



STEP 1

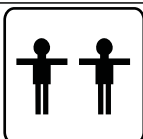

# 17





|          |   |           |
|----------|---|-----------|
| <b>B</b> | <br>Ø 8x30 | <b>04</b> |
| <b>D</b> | <br>Ø 4X35 | <b>14</b> |




ALIGNMENT!


STEP 2

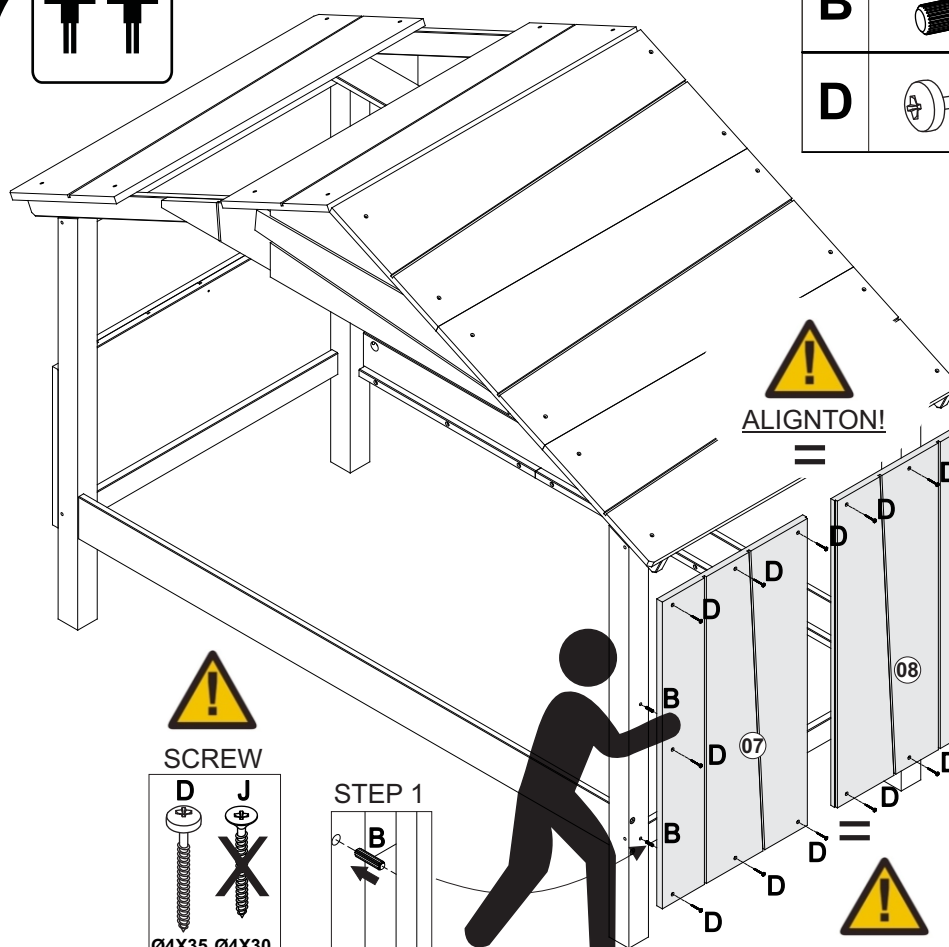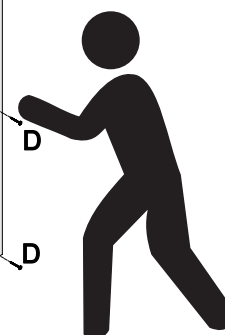

STEP 1




SCREW

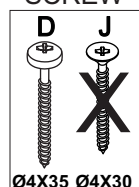

ALIGNMENT!

# 18

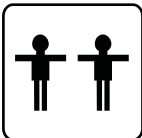



## SLATS

J




Ø 4X30

26

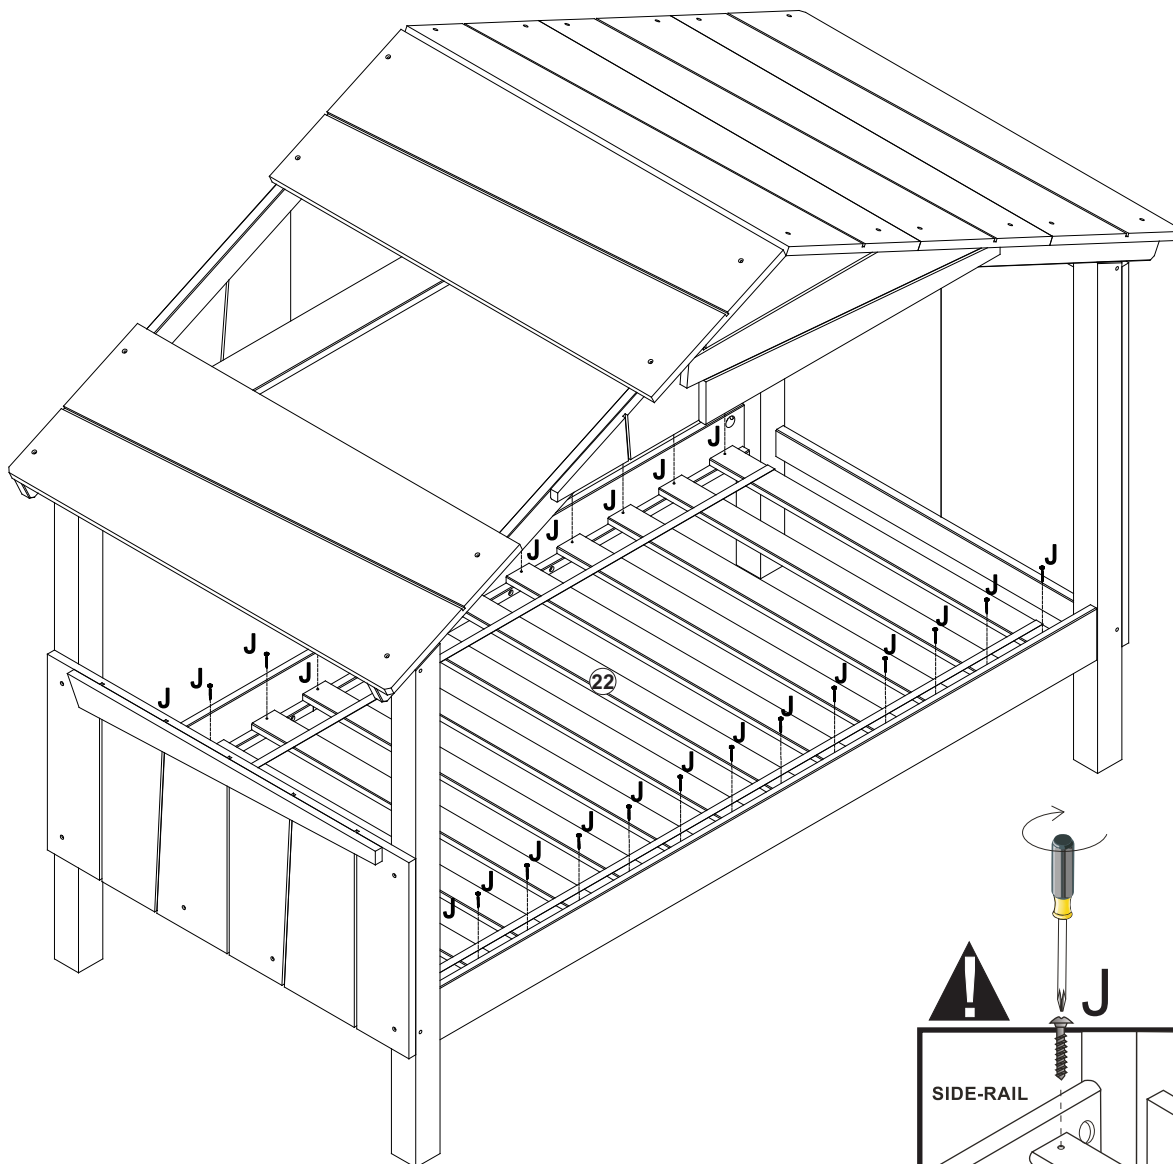



SCREW

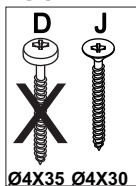

Ø4X35 Ø4X30



"INSTALL SLAT KIT WITH SPACER  
TAPE ON TOP (FACING UP)"

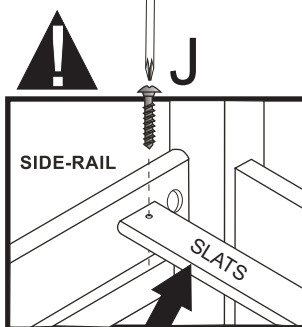

The first slats must be fixed at  
2" from each headboard end.

