




Fort Worth, Texas 76140

ASSEMBLY INSTRUCTIONS

9019 ARTESIAN LOW LOFT BED

REVERSIBLE OPTIONS

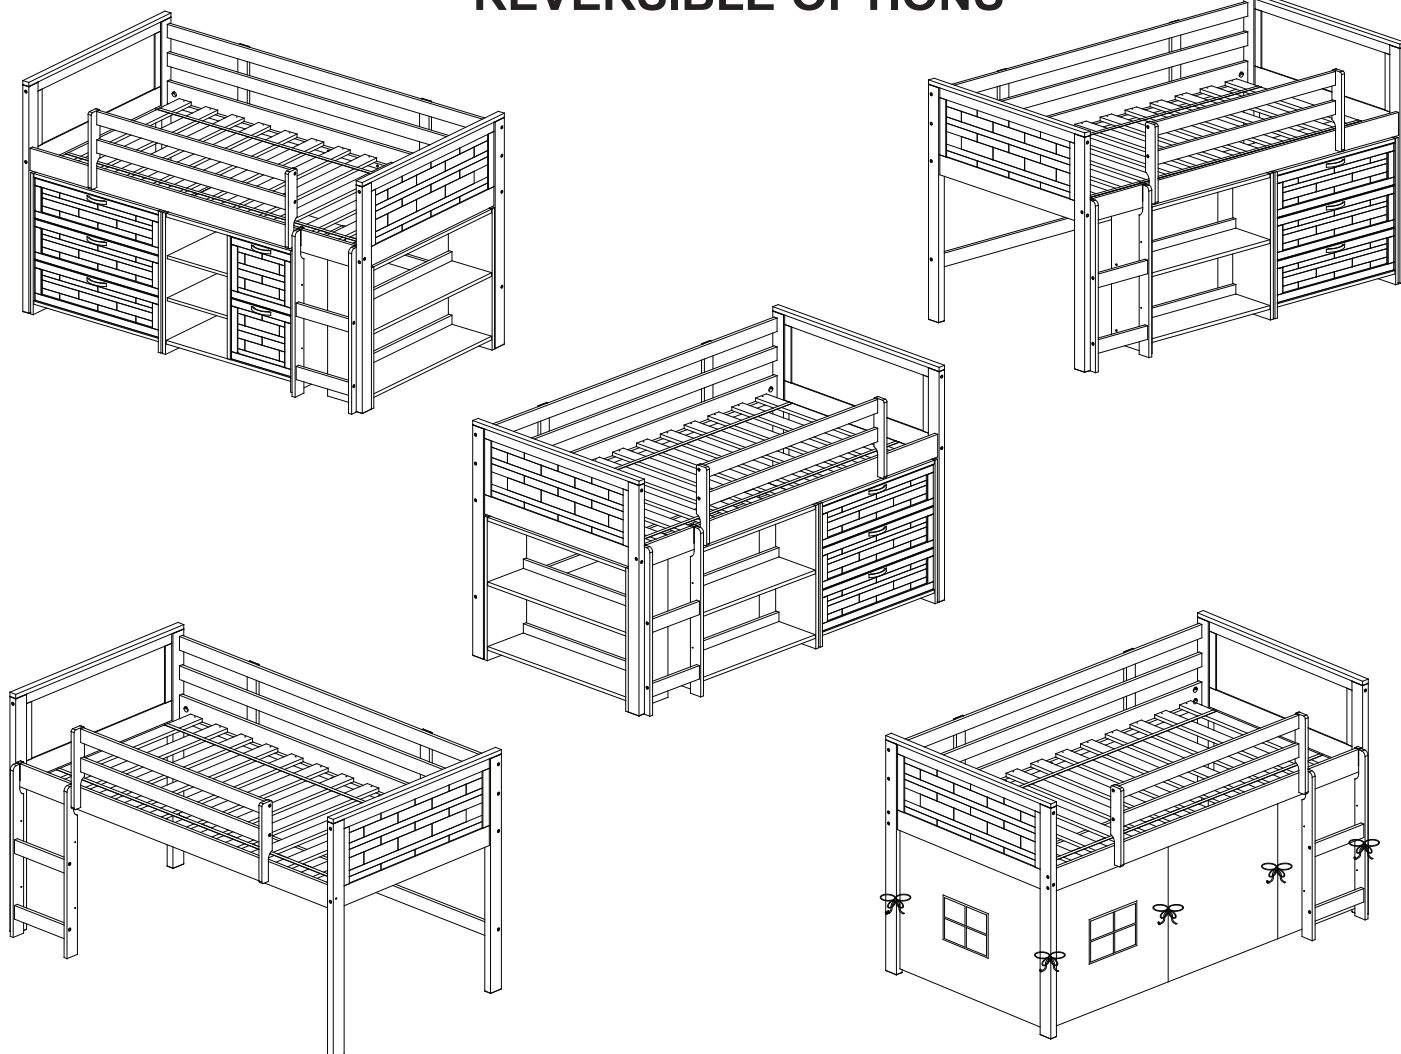

OPTIONAL SETS (THE CASES ARE SOLD SEPARATE)

3 DRAWERS CHEST LOUVER

2 DRAWERS CHEST LOUVER

SMALL BOOKCASE

HEADBOARD BOOKCASE

TENT KIT FABRIC

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"




* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not included)




(Not included)


IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


Part List : 9019 ARTESIAN LOW LOFT BED

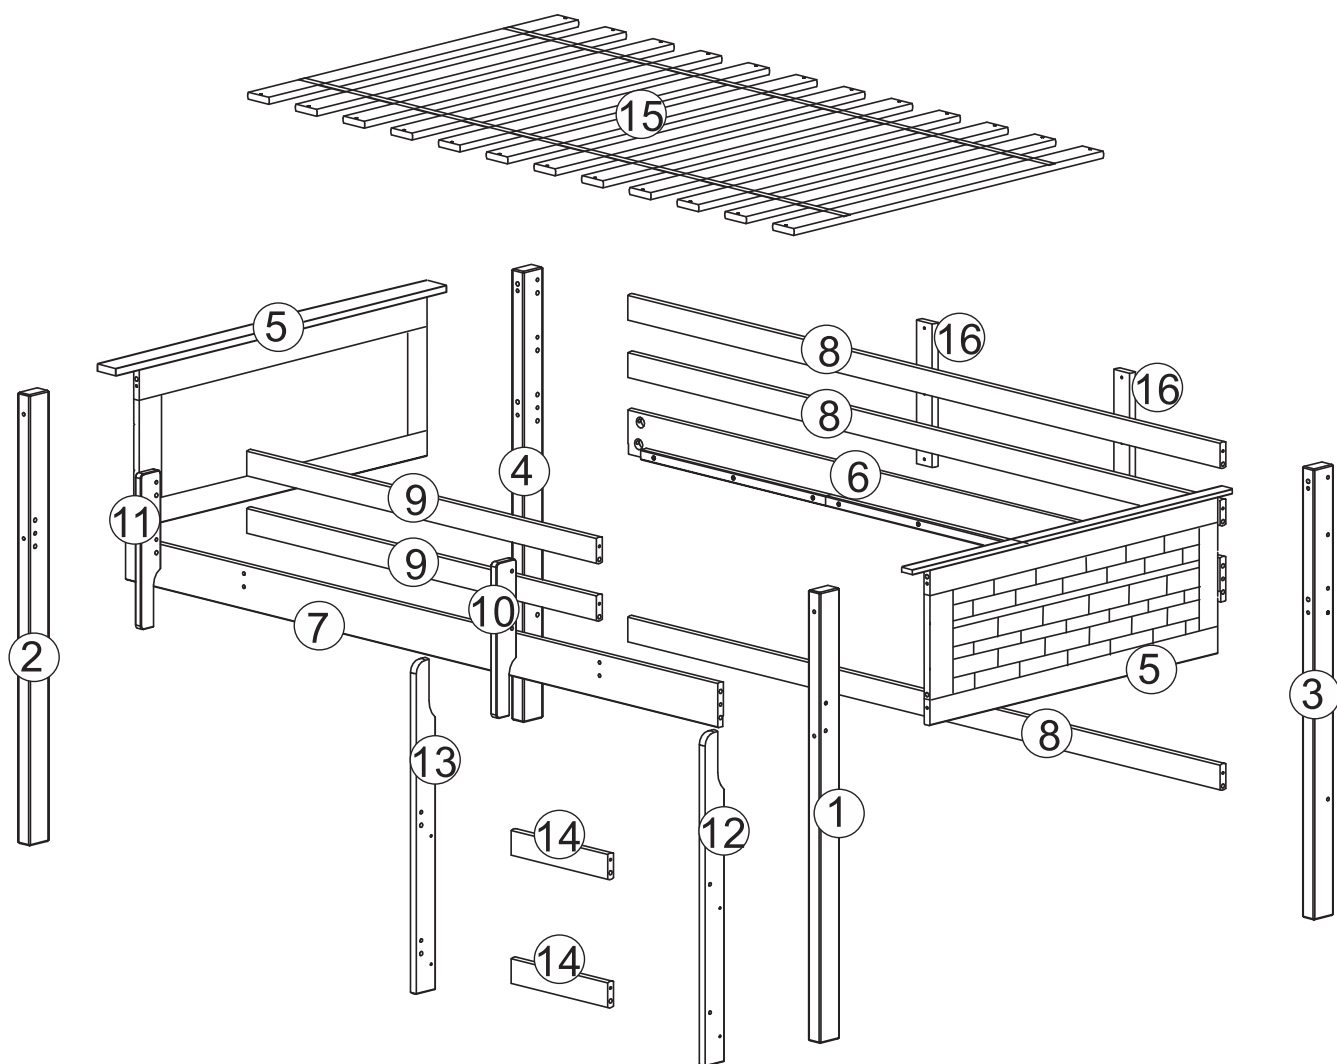


Identifying the Hardware-Identify the hardware using the illustrations below.


A  Qty **08**
1/4 x 80 Screw


B  Qty **08**
1/4" Half Moon


C  Qty **06**
7,0 x 80 Screw


D  Qty **08**
7,0 x 120 Screw

E  Qty **26**
10 x 40 Wood Dowel

F  Qty **12**
7,0 x 50 Screw

G  Qty **30**
4,0 x 30 Screw

H  Qty **02**
4,0 x 40 Screw



I  Qty **06**
3,5 x 16 Screw

J  Qty **02**
Protector

K  Qty **02**
Hook Ladder

L  Qty **01**
Hex Screwdriver

01

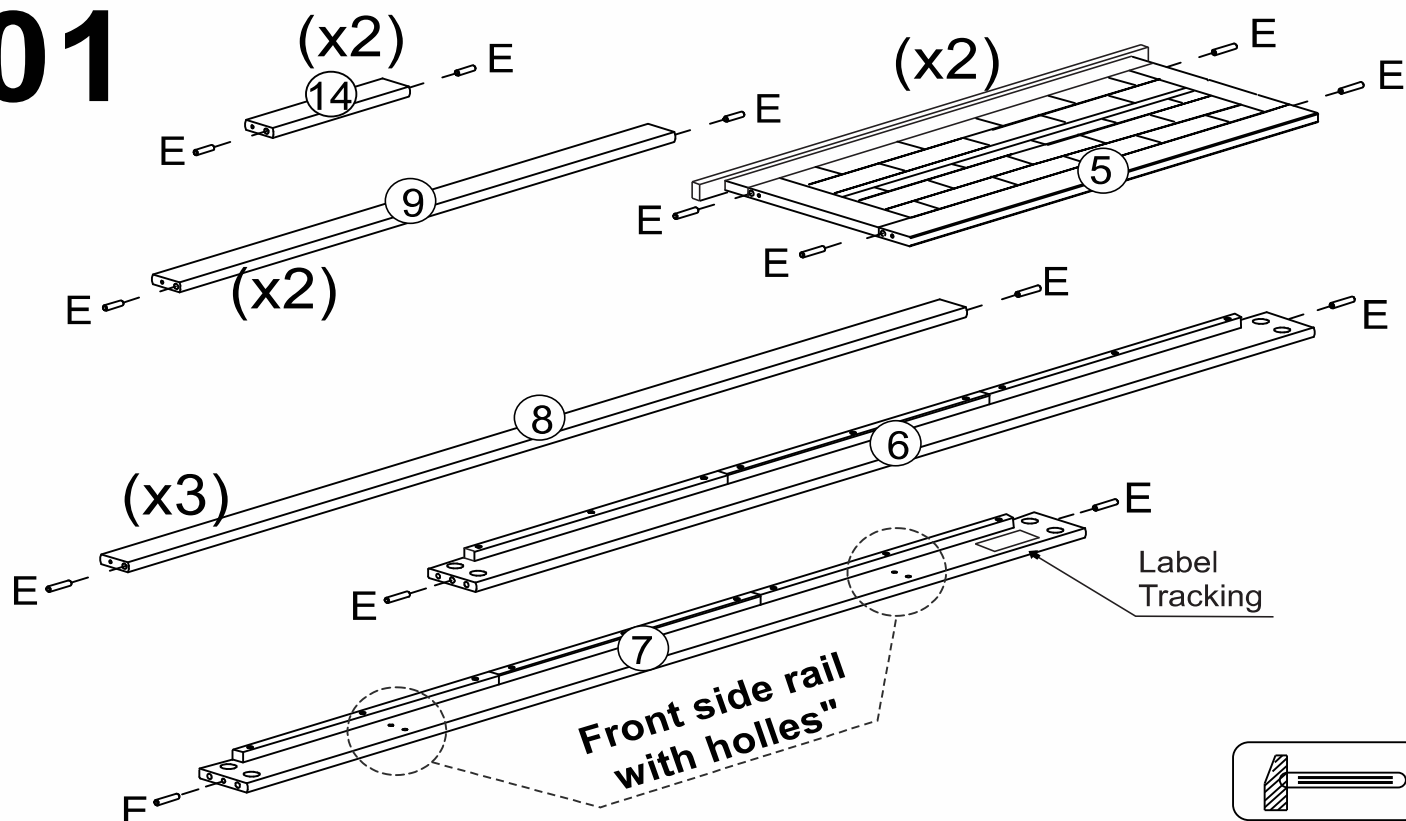


E



10 x 40 Wood Dowel

Qty
26

02

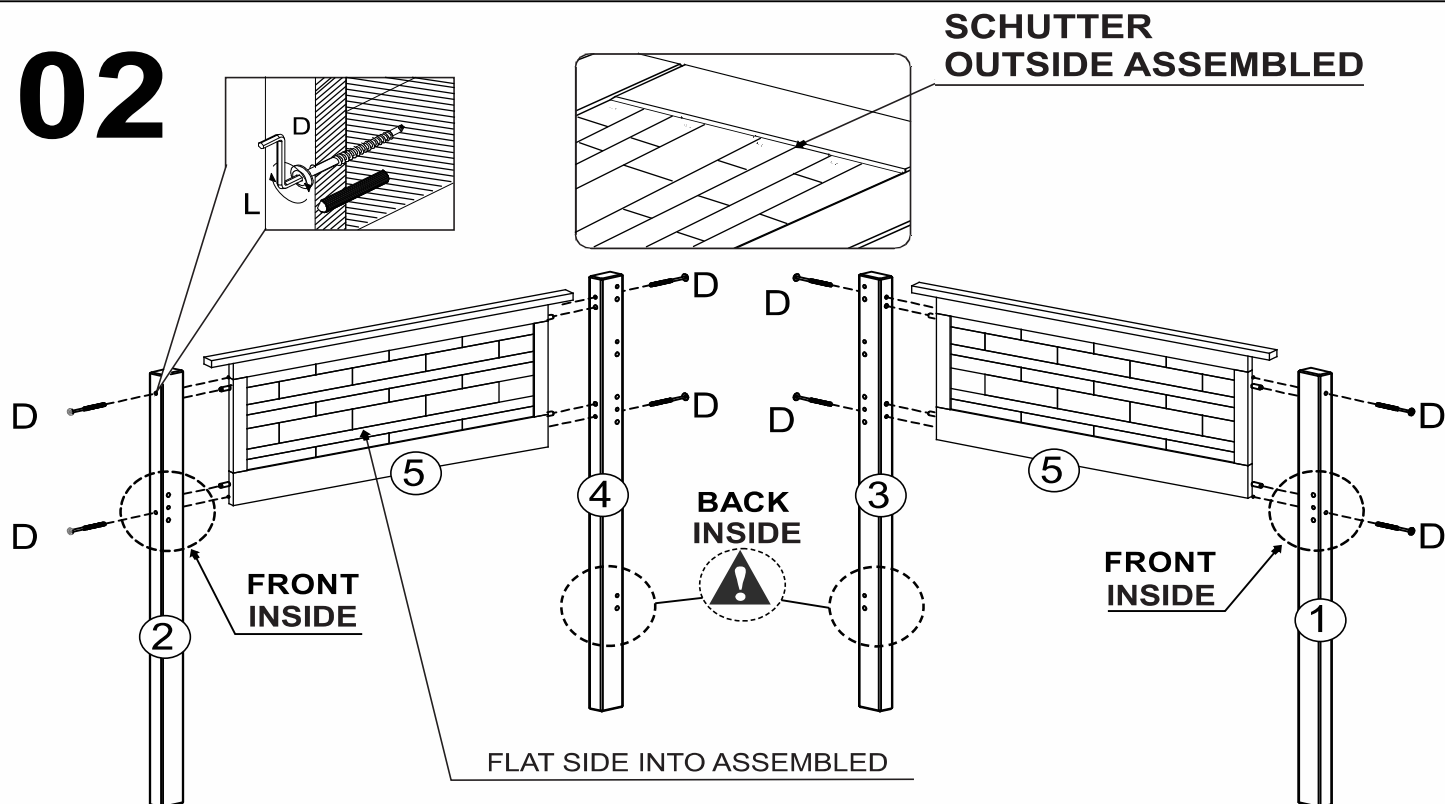

D



7,0 x120 Screw


Qty
08





L

Hex Screwdriver

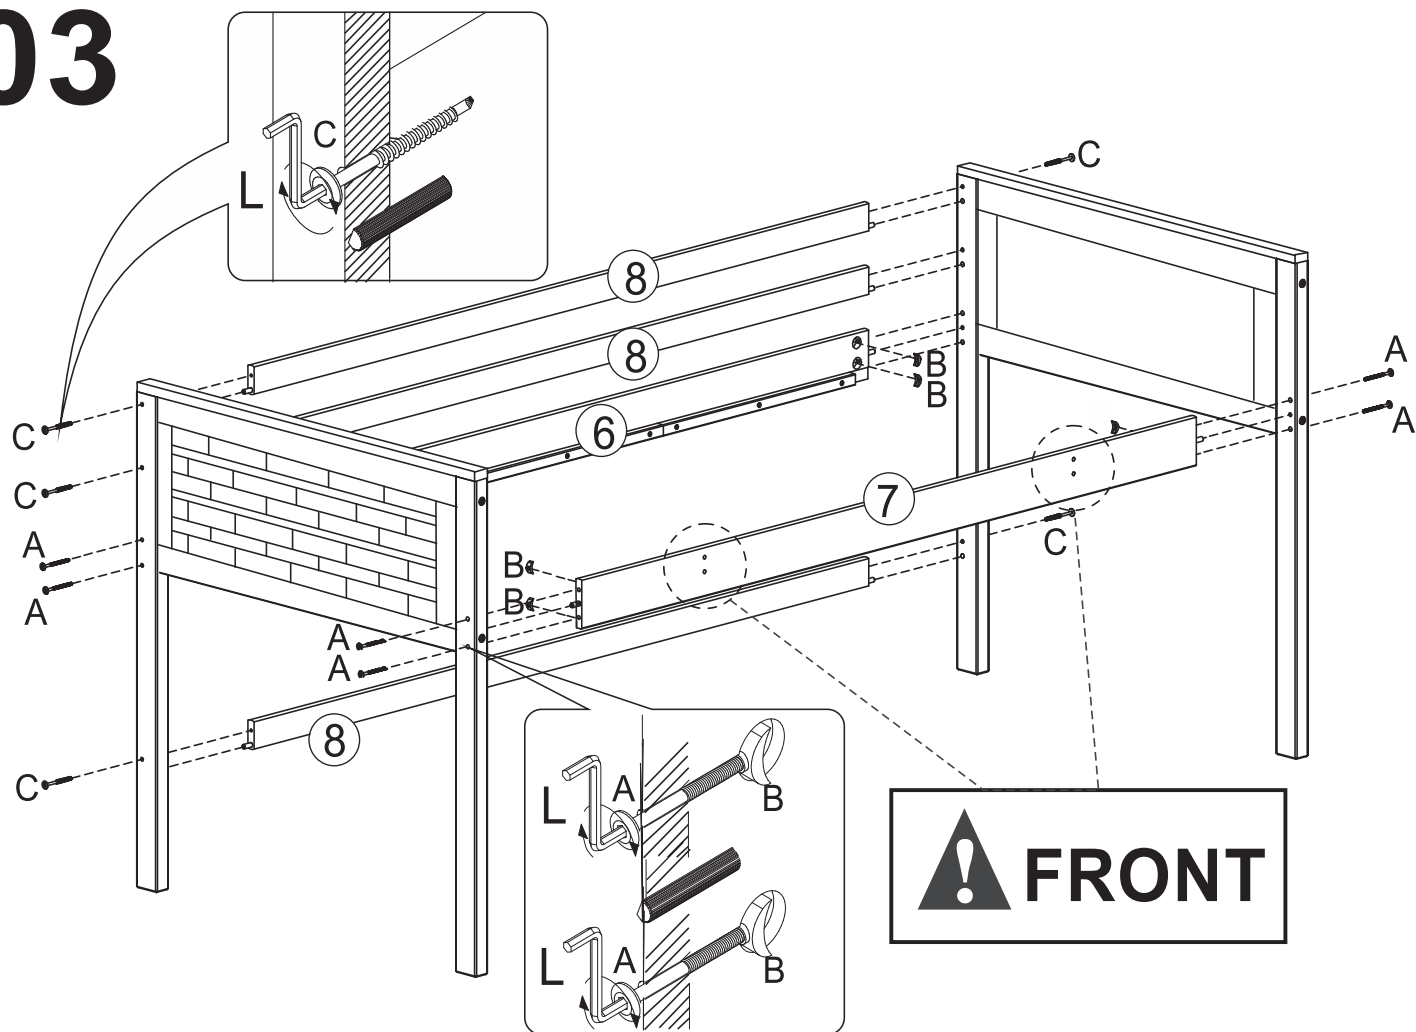
Qty
01

03




- | | | | |
|-----------------|---|-----|-----------|
| A |  | Qty | 08 |
| 1/4 x 80 Screw | | | |
| B |  | Qty | 08 |
| 1/4\" | | | |
| C |  | Qty | 06 |
| 7,0 x 80 Screw | | | |
| L |  | Qty | 01 |
| Hex Screwdriver | | | |


04

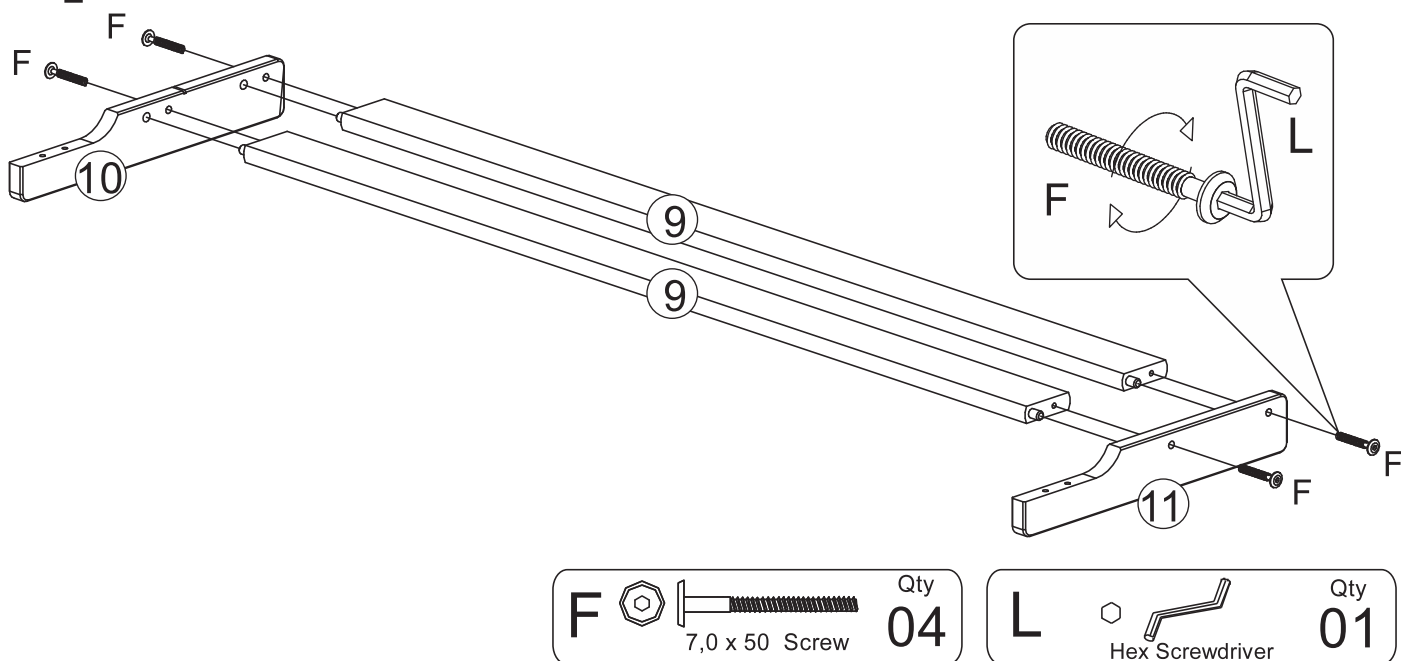

- | | | | |
|-----------------|---|-----|-----------|
| F |  | Qty | 04 |
| 7,0 x 50 Screw | | | |
| L |  | Qty | 01 |
| Hex Screwdriver | | | |


05

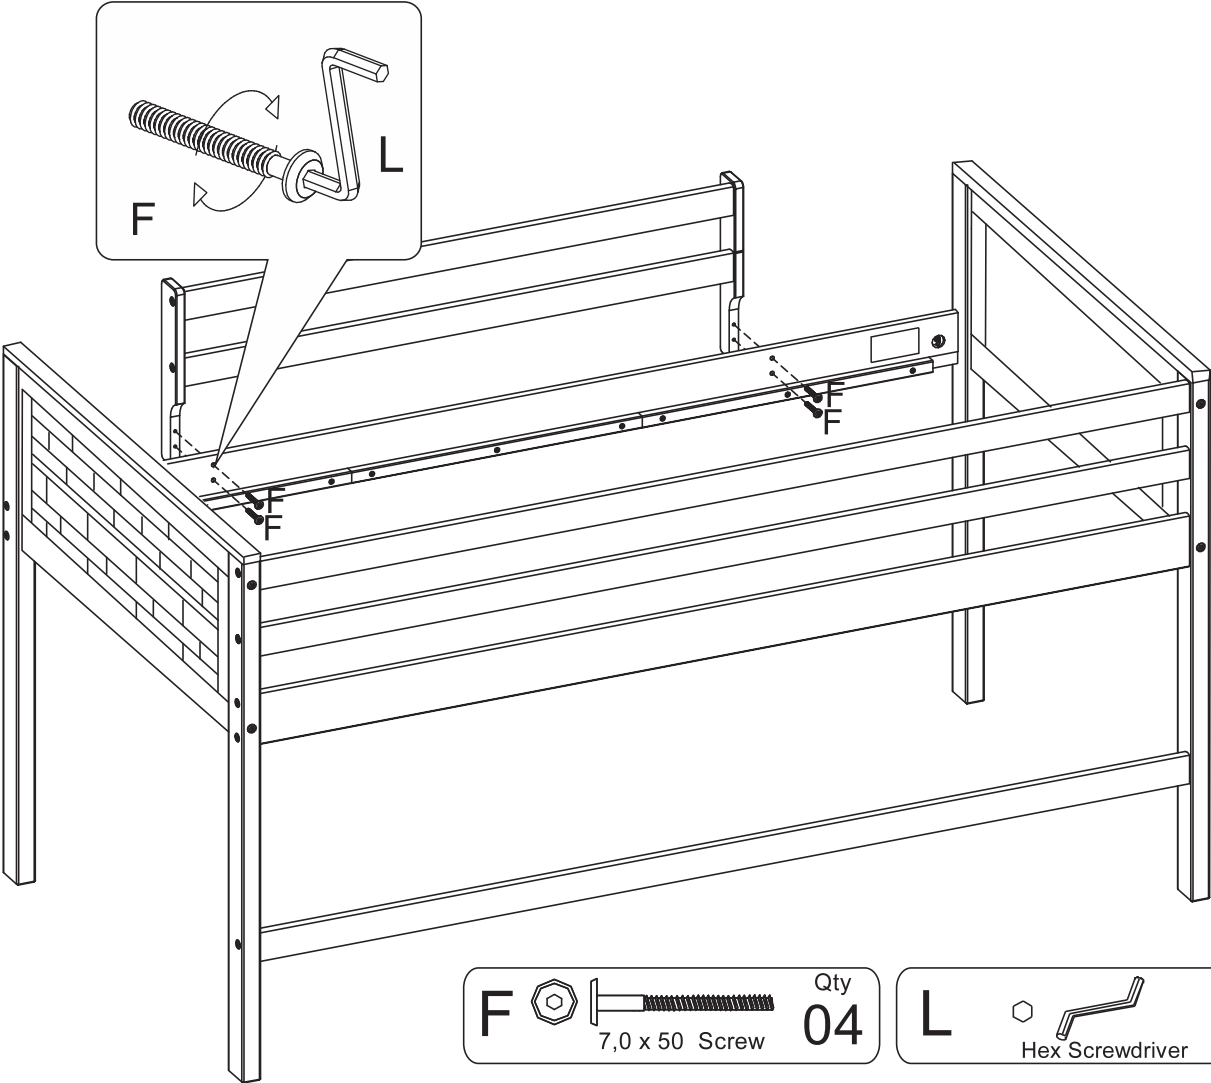



F  7,0 x 50 Screw Qty **04**

L  Hex Screwdriver Qty **01**

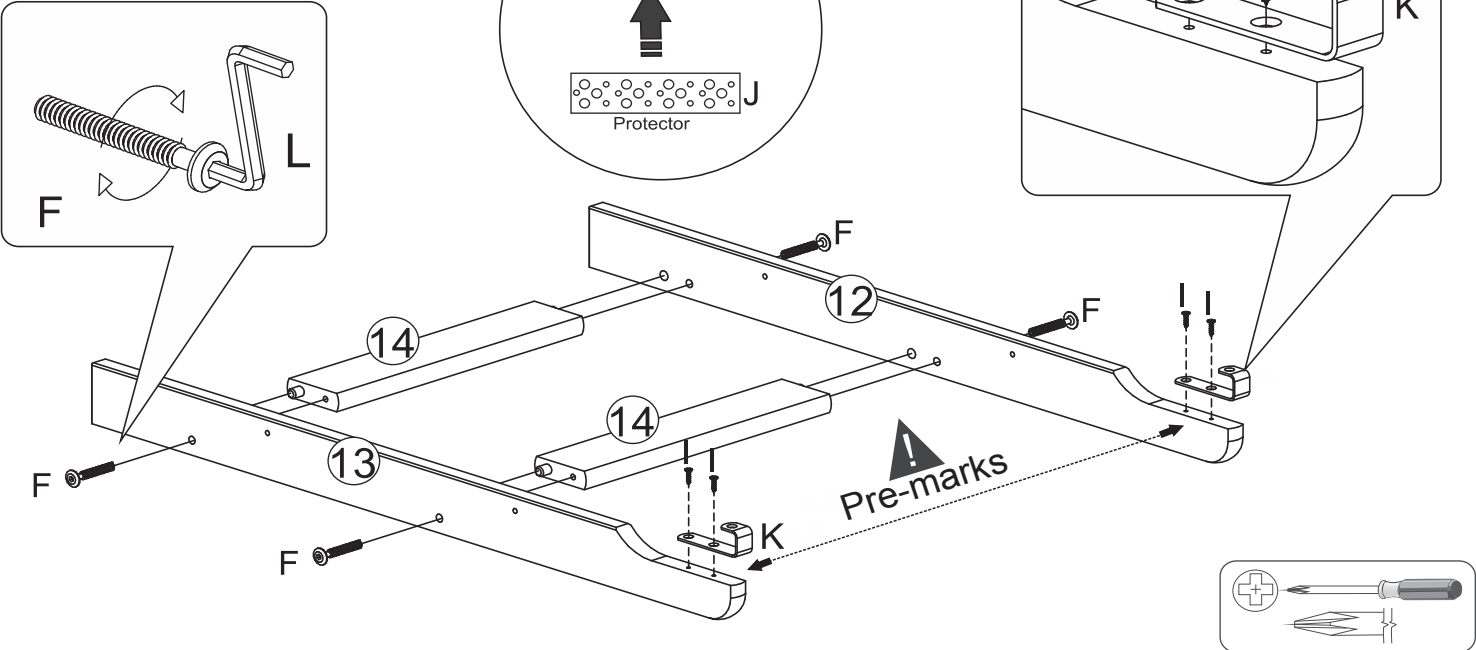
06 LADDER



F  7,0 x 50 Screw Qty **04**


I  3,5 x 16 Screw Qty **04**


J  Protector Qty **02**


K  Hook Ladder Qty **02**


L  Hex Screwdriver Qty **01**

07

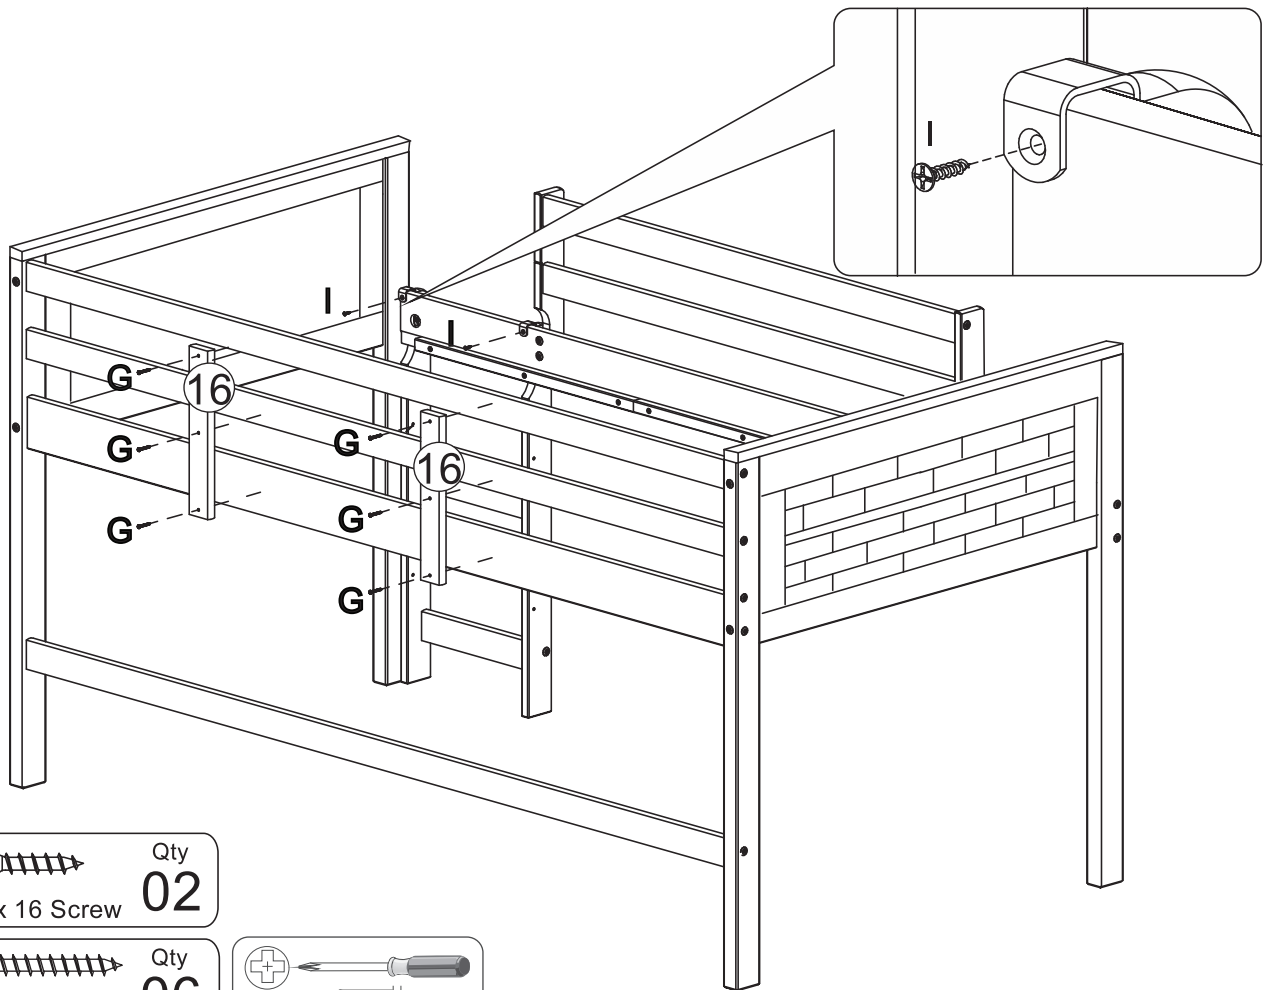


I  Qty 02
3,5 x 16 Screw


G  Qty 06
4,0 x 30 Screw




08

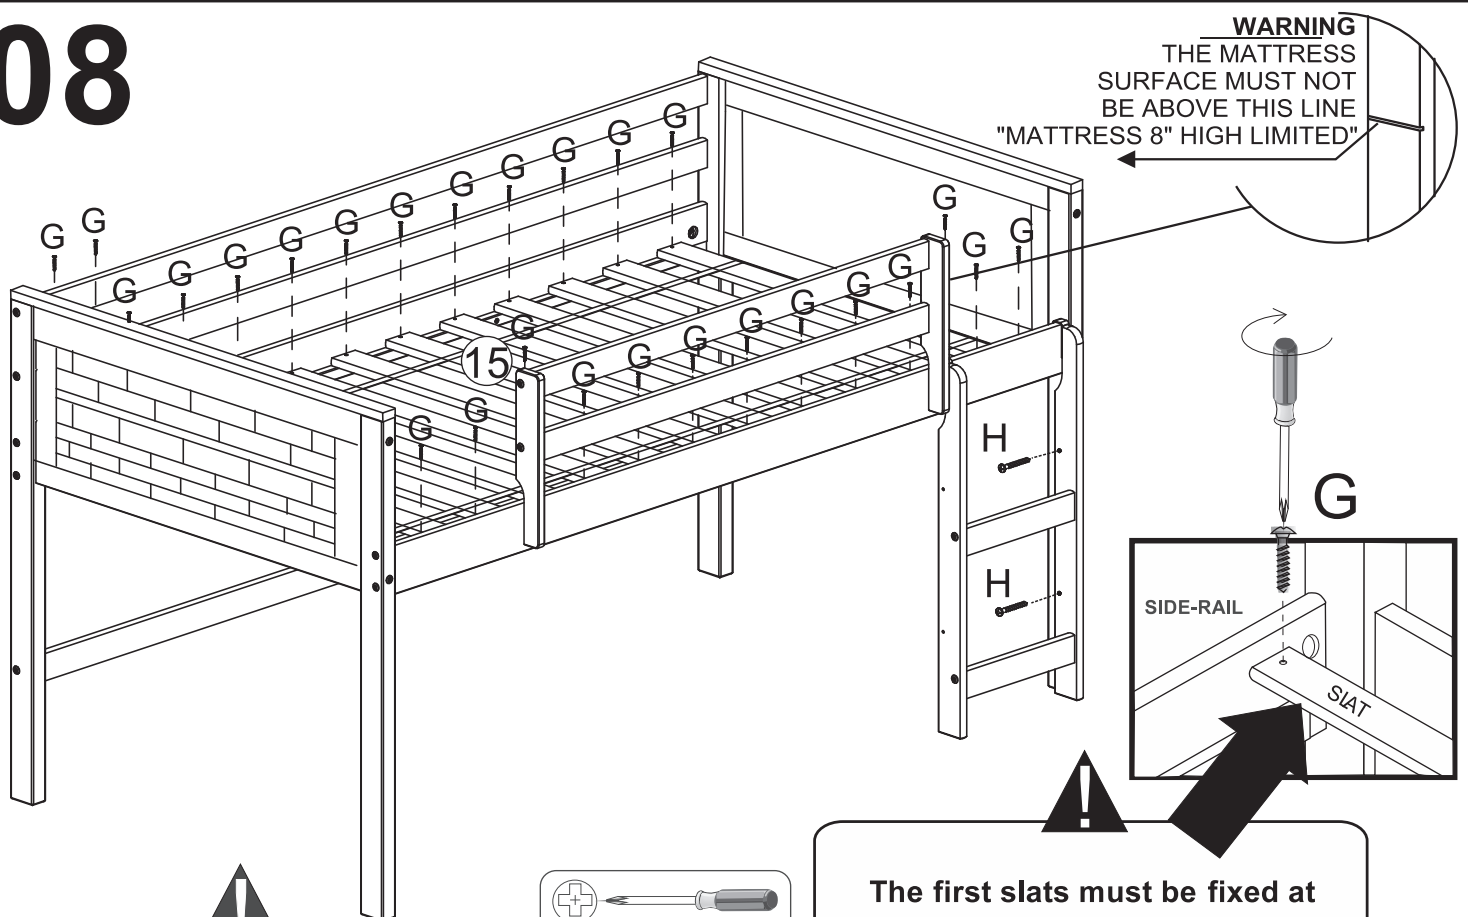


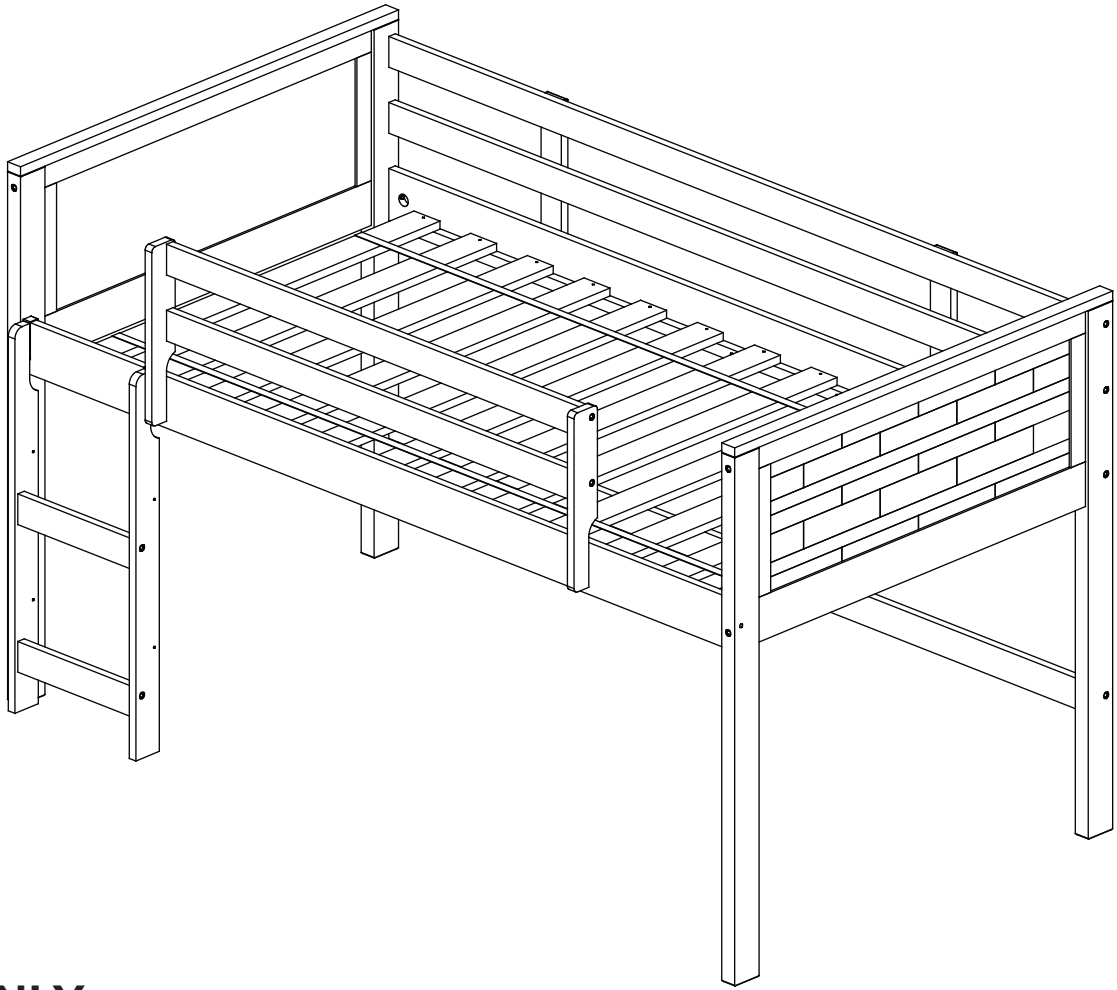
! INSTALL SLAT KIT WITH SPACER TAPE ON TOP (FACING UP)




H  Qty 02
4,0 x 40 Screw

! The first slats must be fixed at 3" from each headboard end.

G  Qty 24
4,0 x 30 Screw




BED ONLY

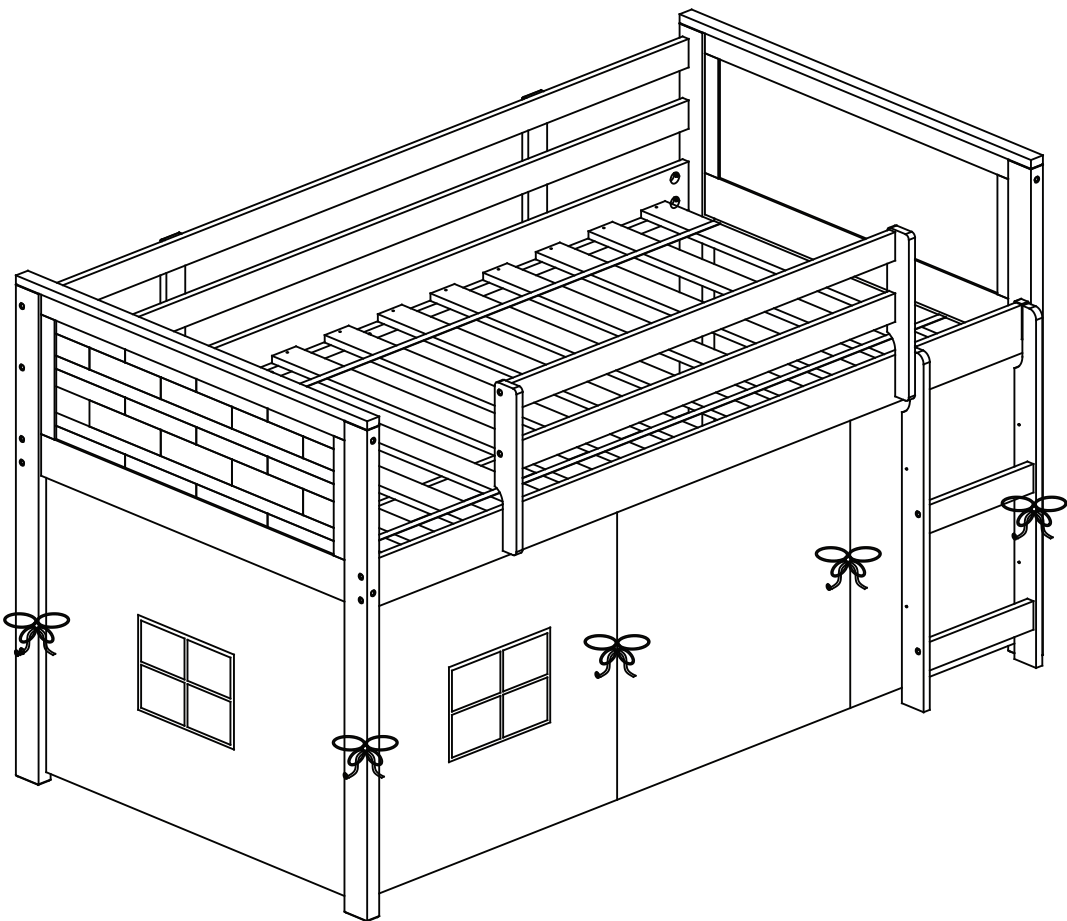


TENT SET FABRIC

OPTION COMPONENTS

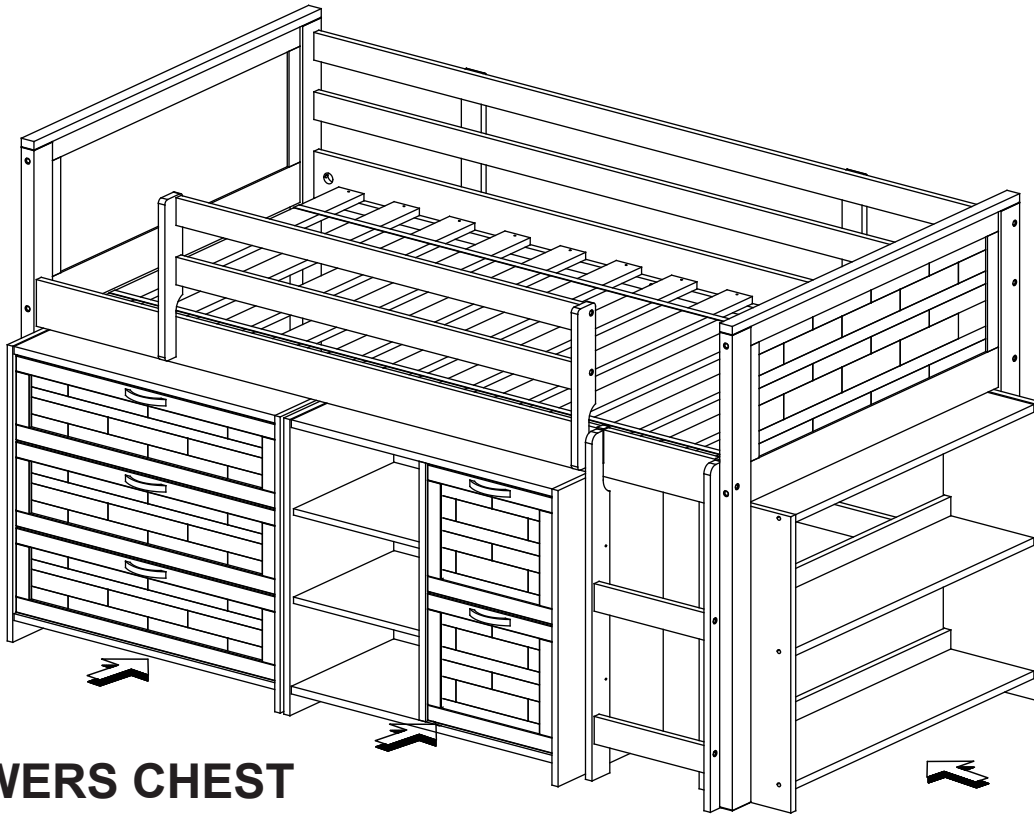


**3 DRAWERS CHEST
2 DRAWERS CHEST
HEADBOARD BOOKCASE**

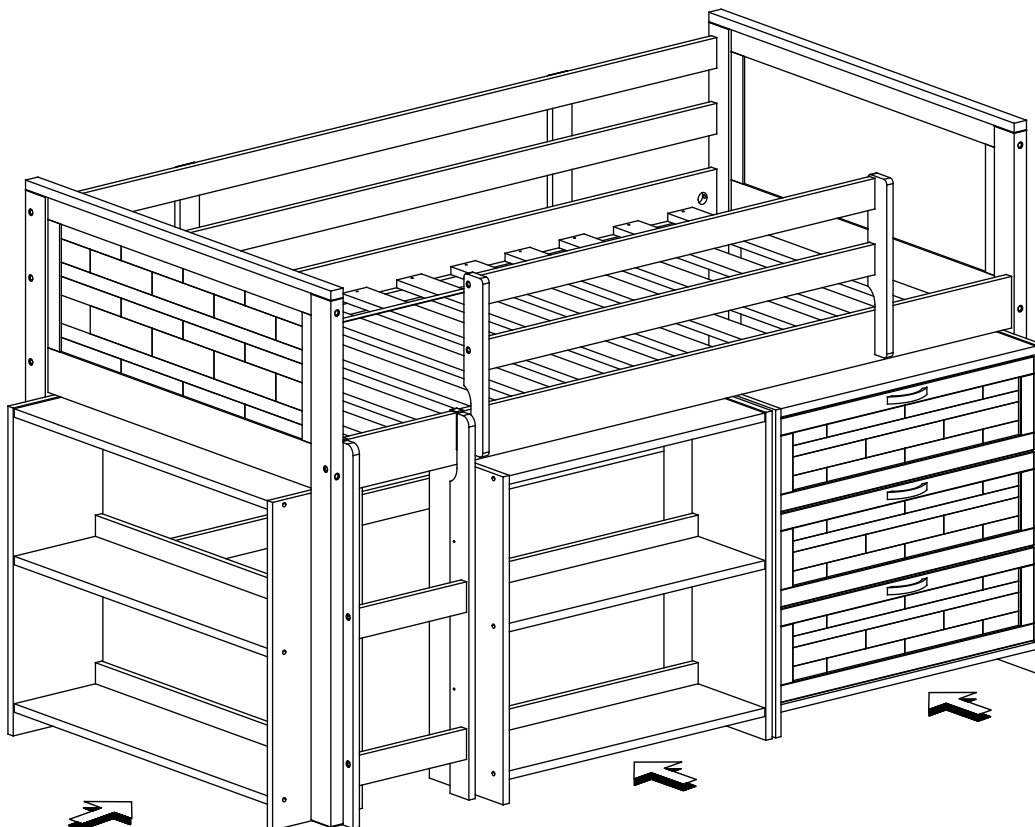


**3 DRAWERS CHEST
SMALL BOOKCASE
HEADBOARD BOOKCASE**

OPTION COMPONENTS

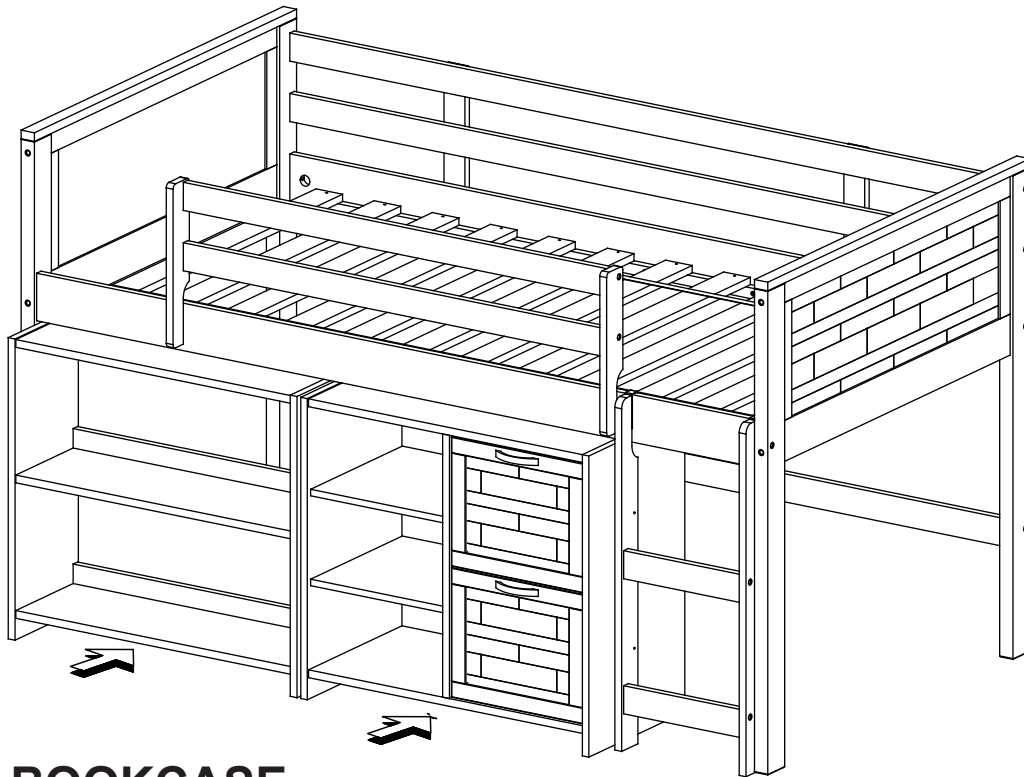

**SMALL BOOKCASE
2 DRAWERS CHEST**

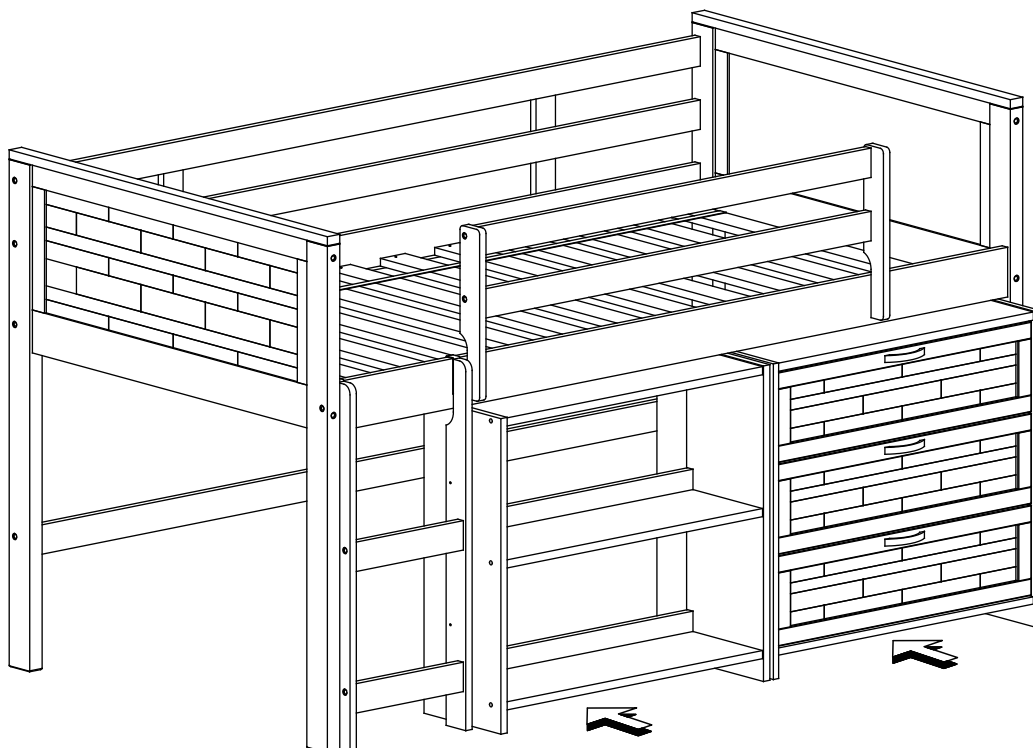

**3 DRAWERS CHEST
SMALL BOOKCASE**