

About the Wood and Finish

This product has been carefully crafted of: MDF, solid pine wood and/or pine veneers. These materials derive from reforestation, a renewable and well managed forest, therefore, not endangering the environment. The highest quality standards have been implemented to assure a sturdy and reliable product. Due to the natural variances in the

graining of wood, you may notice


subtle differences in the shading and tone of the color stain, warp, holes, wood knots and also small cracks. This is not a defect.

But rather a result of the natural beauty of the wood itself.

Care and maintenance:

Dust when needed using a smooth, dry cloth. Household furniture polish can be used occasionally to restore luster.




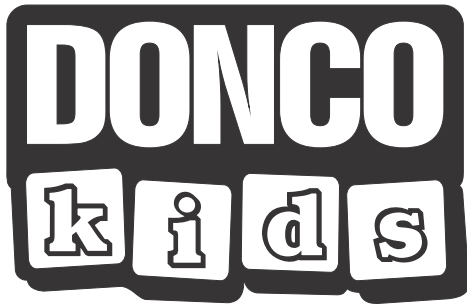

Fort Worth, Texas 76140


ASSEMBLY INSTRUCTIONS

2310-T A FRAME HOUSE BED

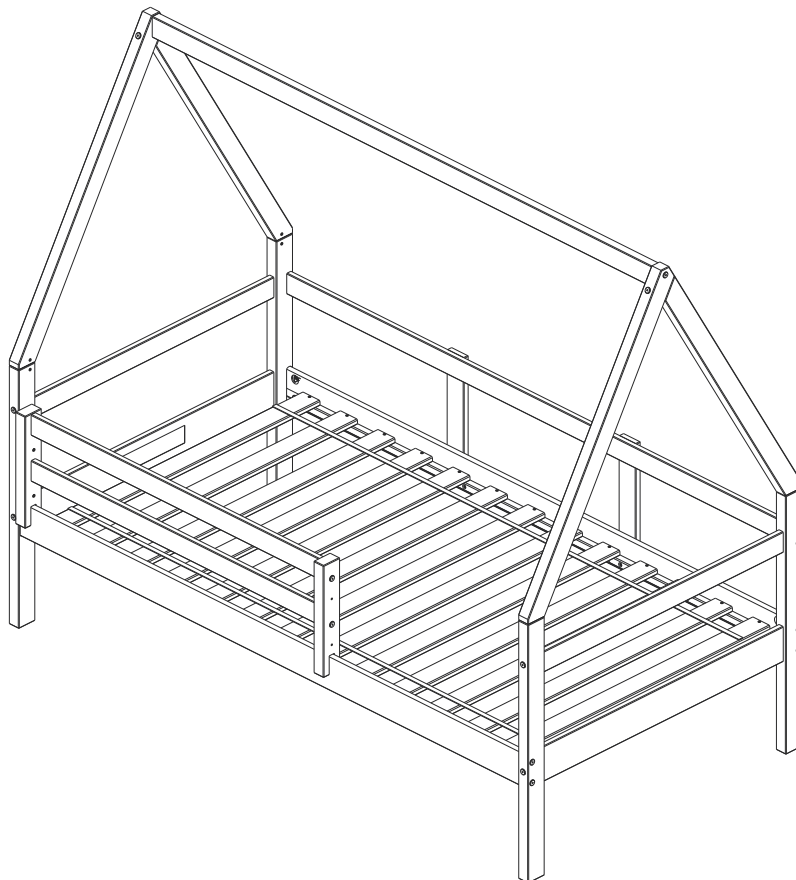


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to make sure that all parts are included.


”DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED”

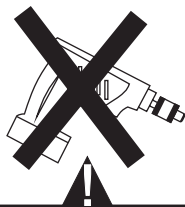


*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !
*Please assemble on a clean soft surface to avoid damage.

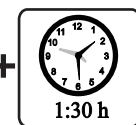

Tools Required



(Not included)




(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List: 2310-T A FRAME HOUSE BED


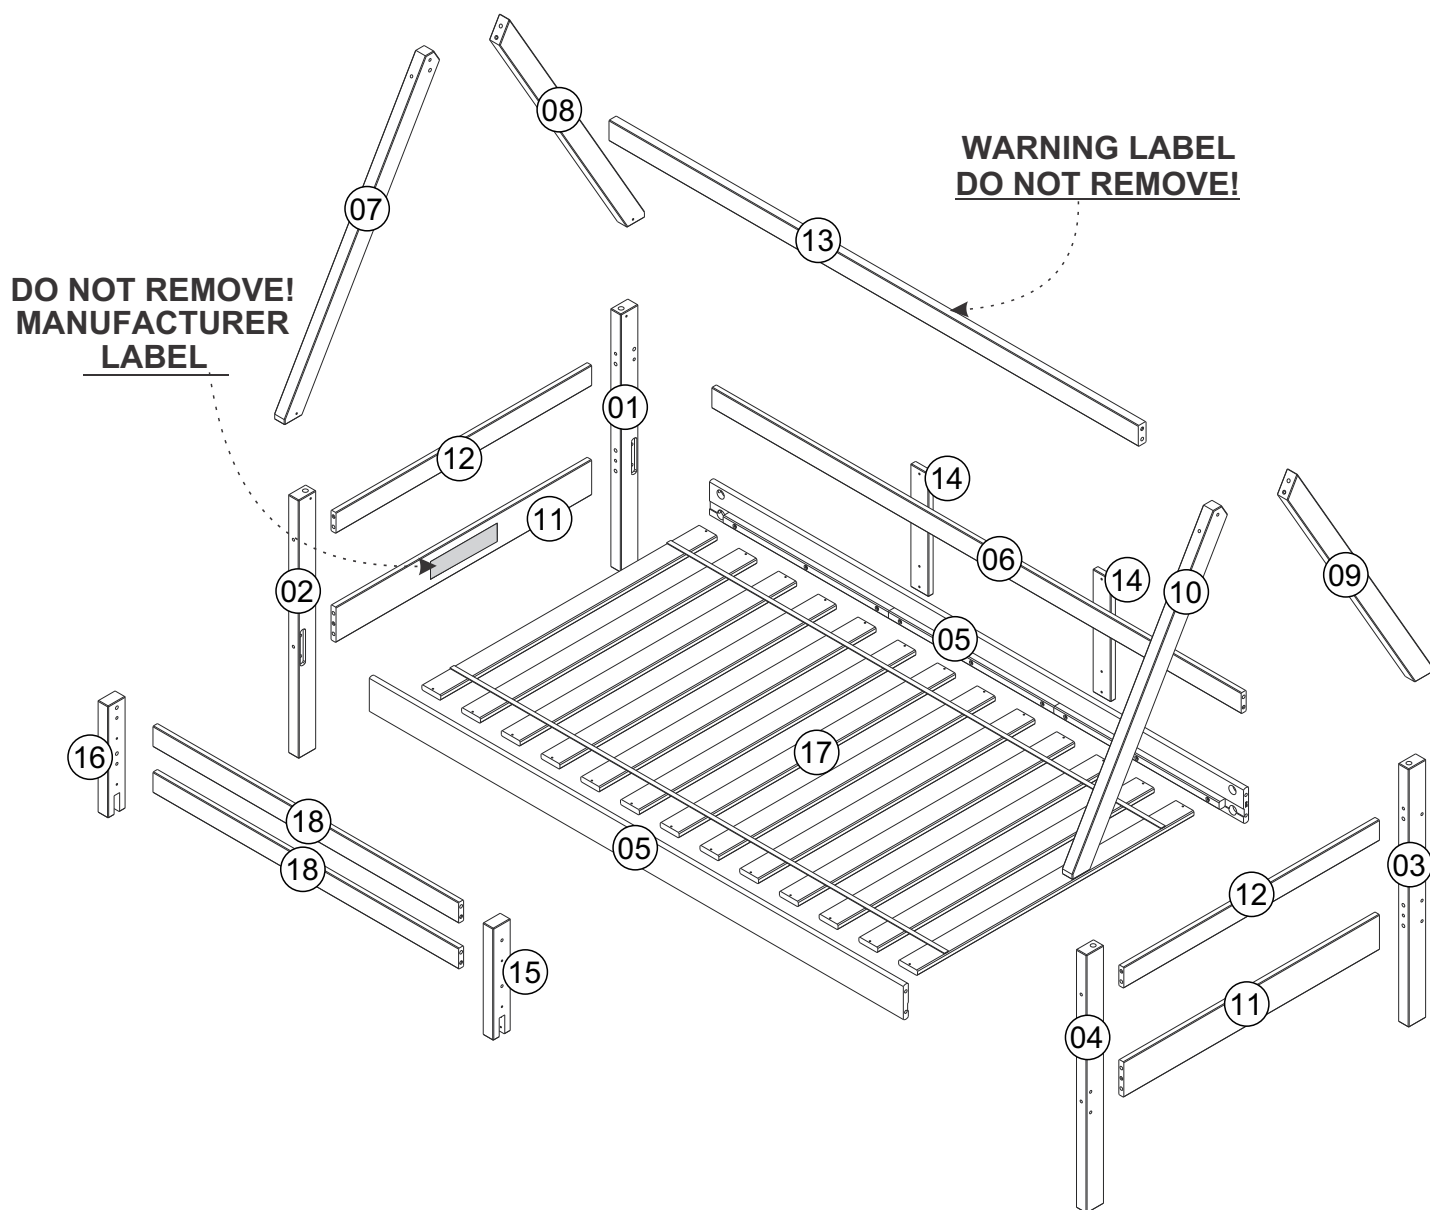


CAUTION!

*Please be careful when assembling this product due the parts are extremely heavy.
Also, please do not allow kids around when assembling this bed to avoid injuries!*

Identify the size and type of hardware using the illustration below:


A

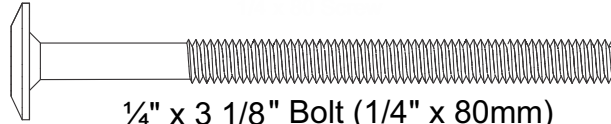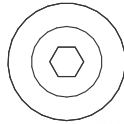

1/4" x 3 1/8" Bolt (1/4" x 80mm)

Qty
08



B

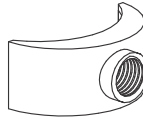

1/4"
Half Moon
Nut

Qty
08



C

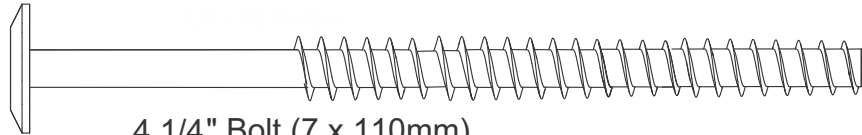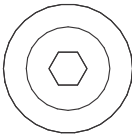

4 1/4" Bolt (7 x 110mm)

Qty
10


D

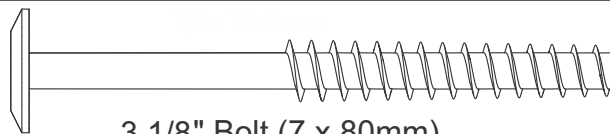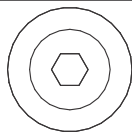

3 1/8" Bolt (7 x 80mm)

Qty
08


E



1 3/16" Screw (4 x 30mm)

Qty
44


F



Allen
wrench

Qty
01


G



3 15/16" Wooden Dowel (15 x 100mm)

Qty
04


H



1 9/16" Wooden Dowel (10 x 40mm)

Qty
22

I



2 1/4" Screw (4,5 x 60mm)

Qty
02


J



Spacer

Qty
02


01

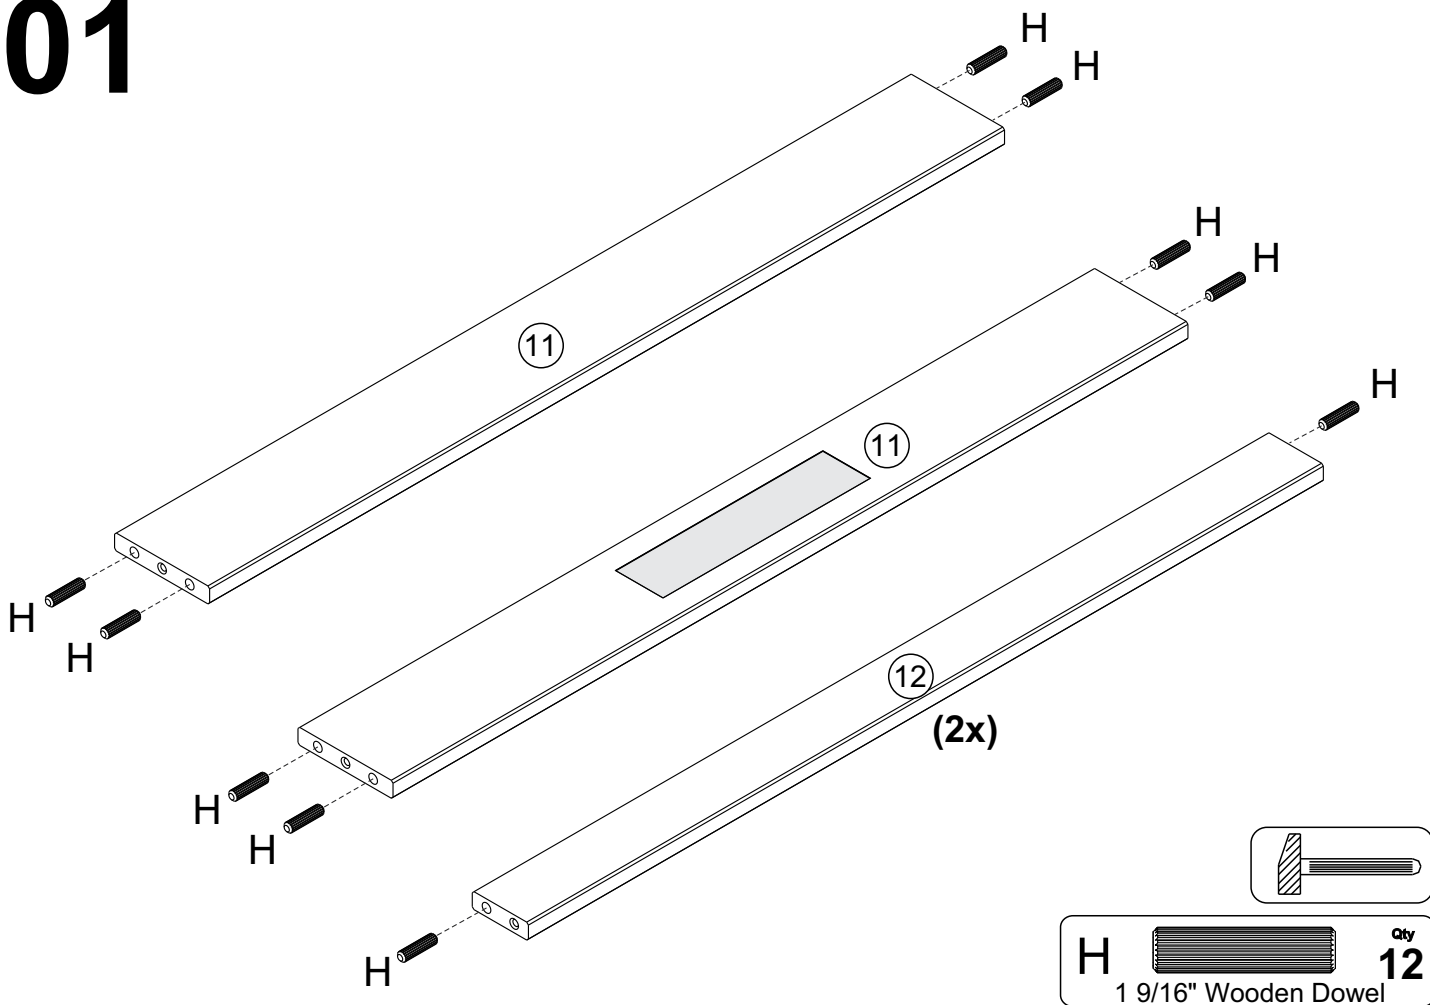


02




**PLEASE ASSEMBLE
ON THE GROUND.**

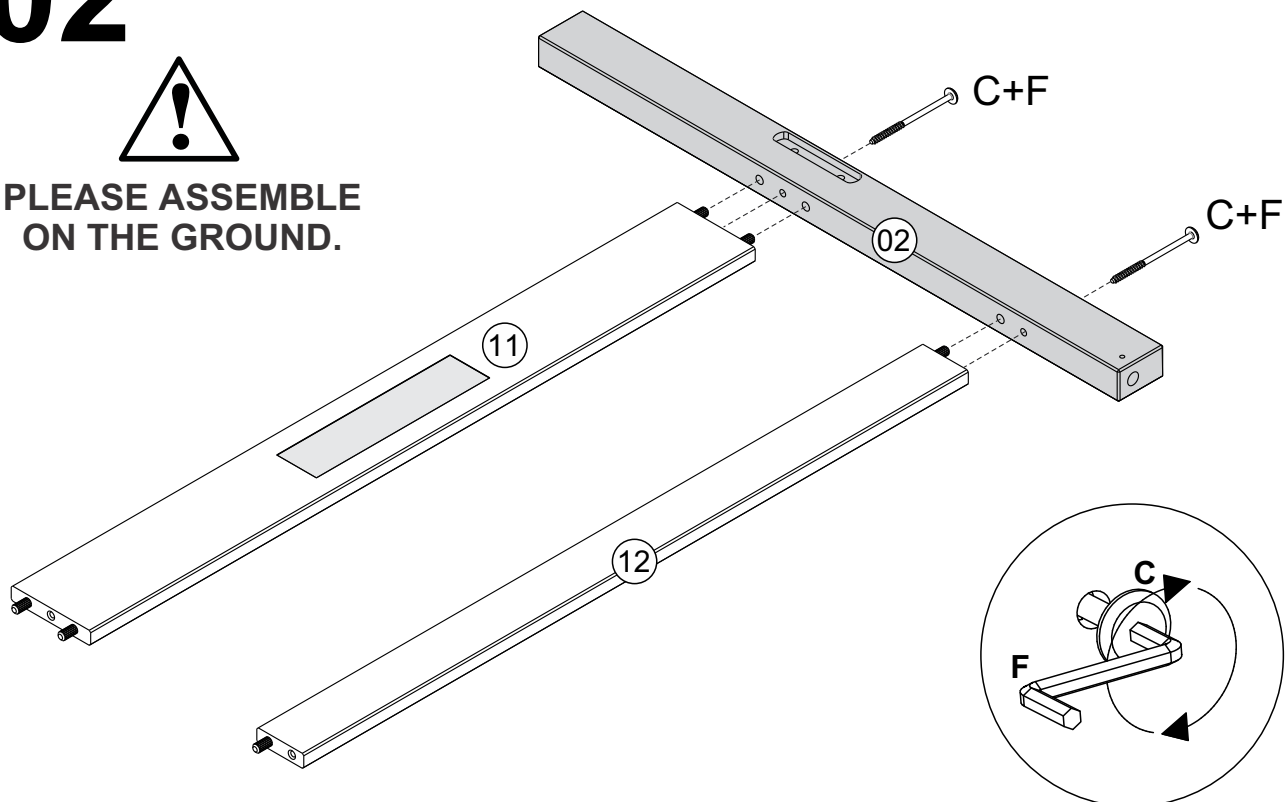

03

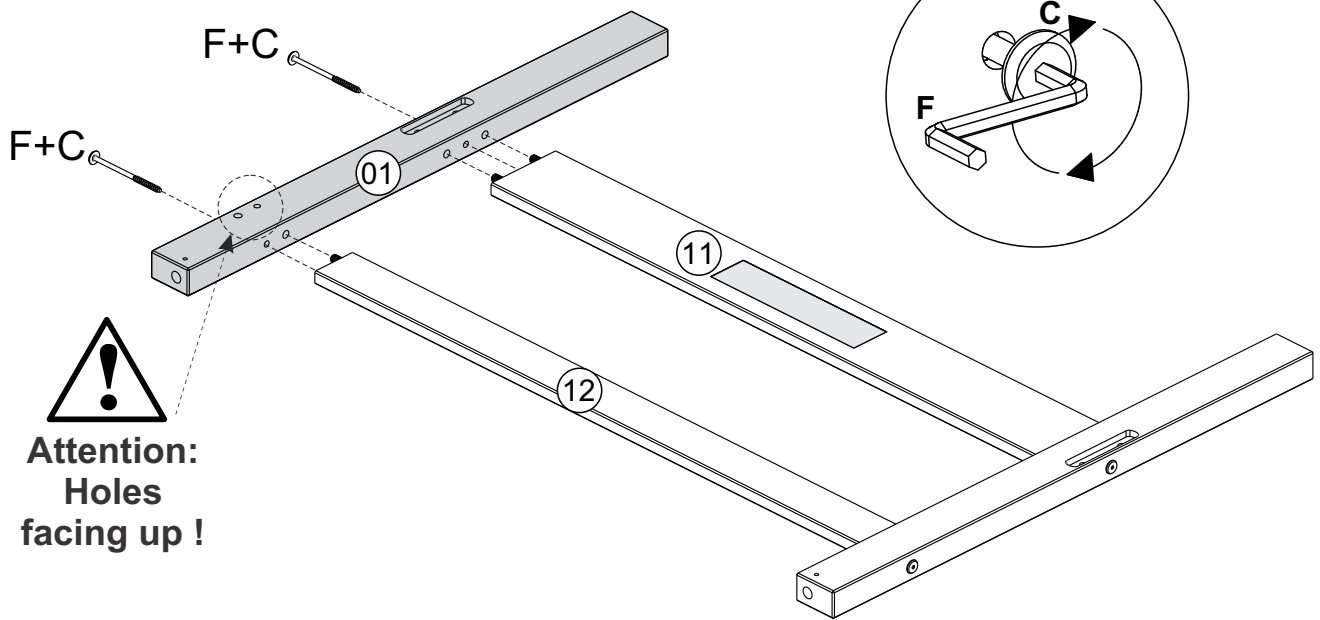




**PLEASE ASSEMBLE
ON THE GROUND.**




04




**PLEASE ASSEMBLE
ON THE GROUND.**

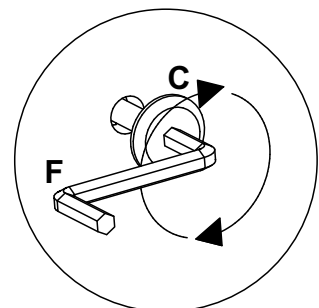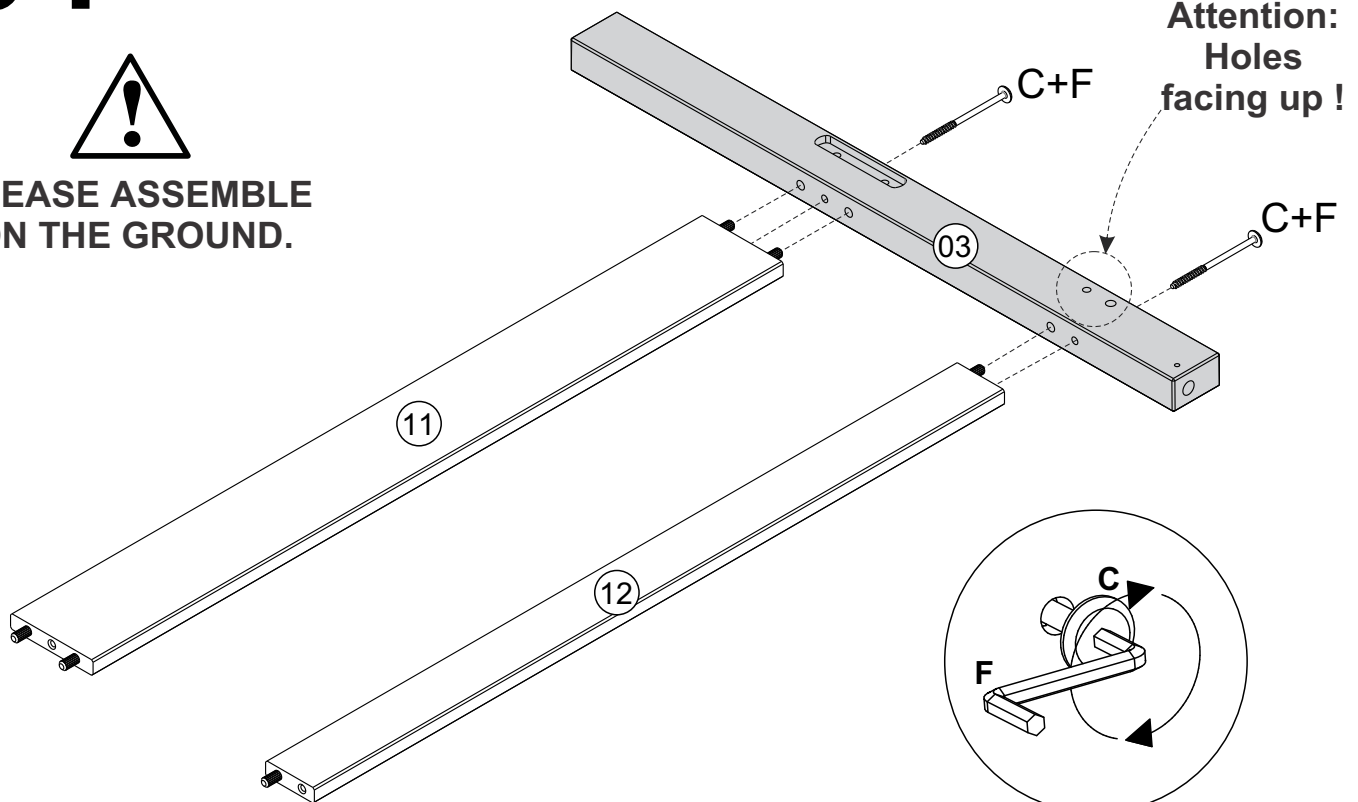

05




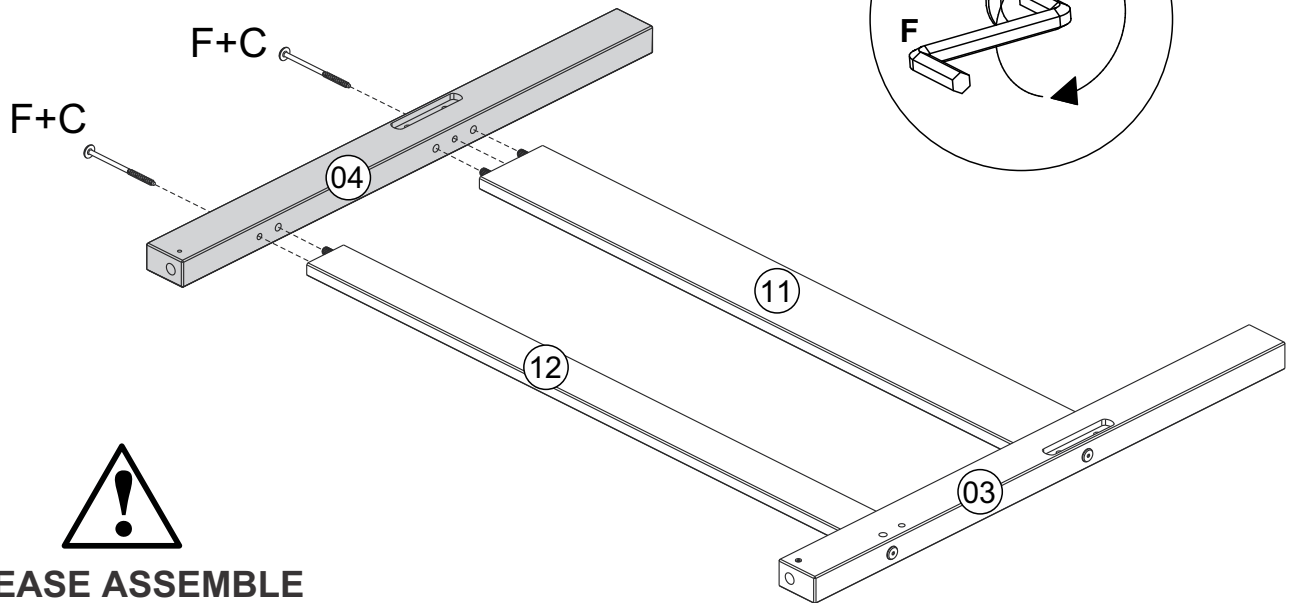


**PLEASE ASSEMBLE
ON THE GROUND.**










06

**IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE
TO HOLD THE OTHER END OF THE SIDE RAIL.**

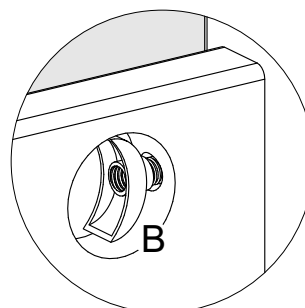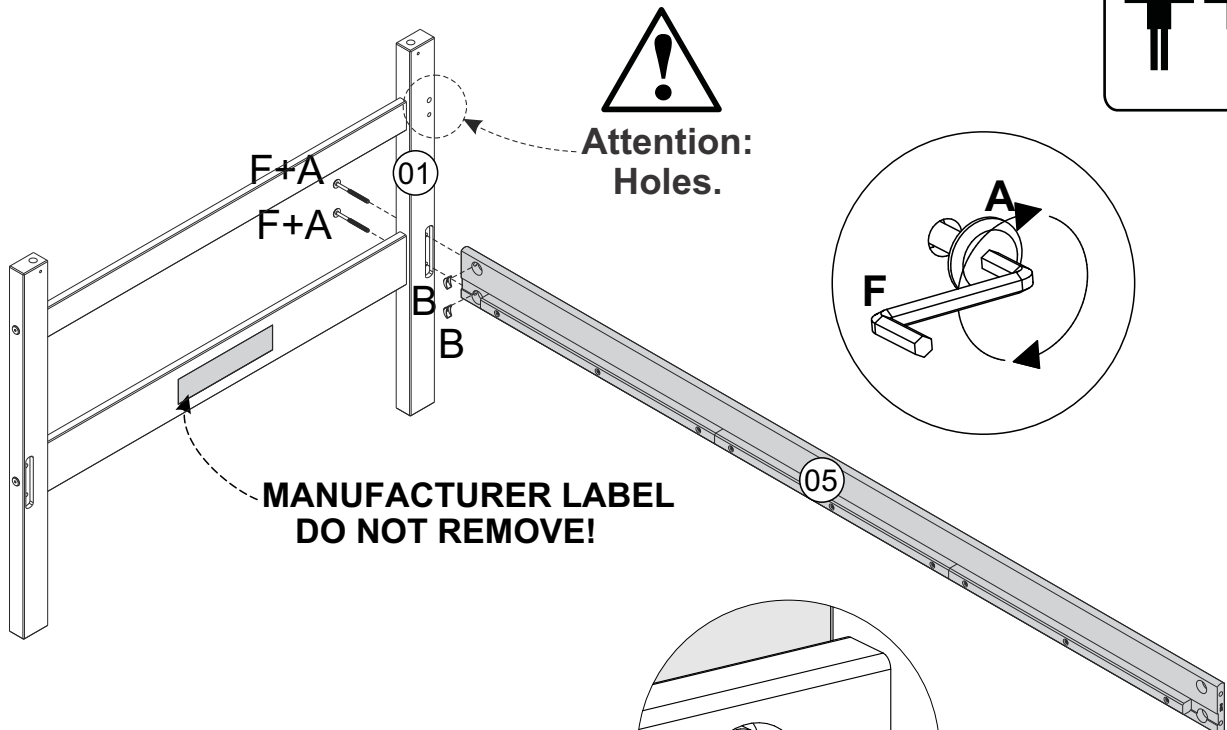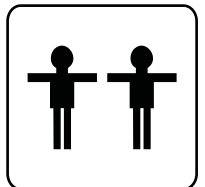


07

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE
TO HOLD THE OTHER END OF THE SIDE RAIL.

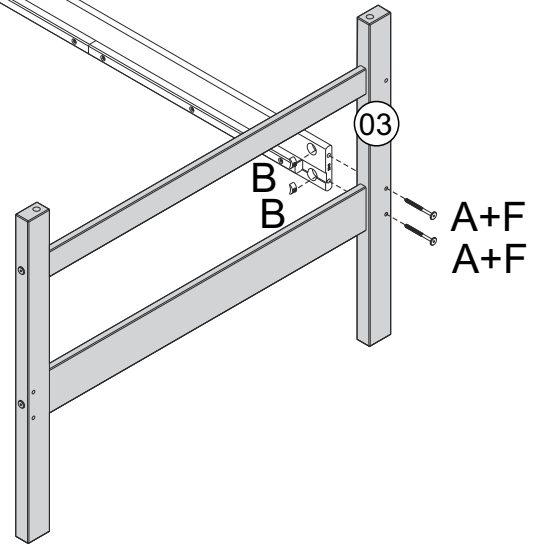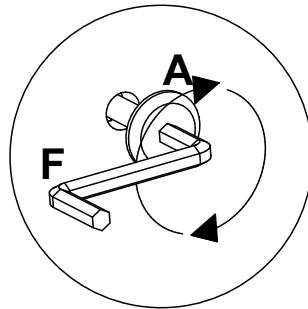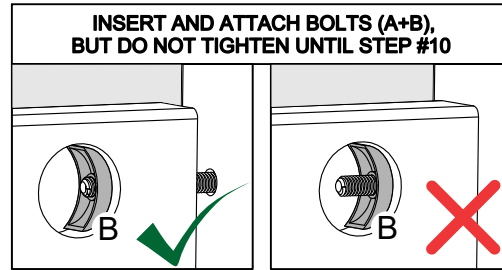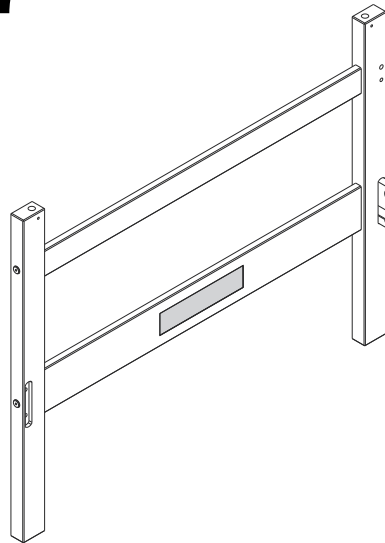
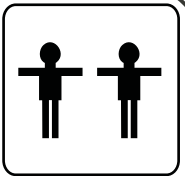


08

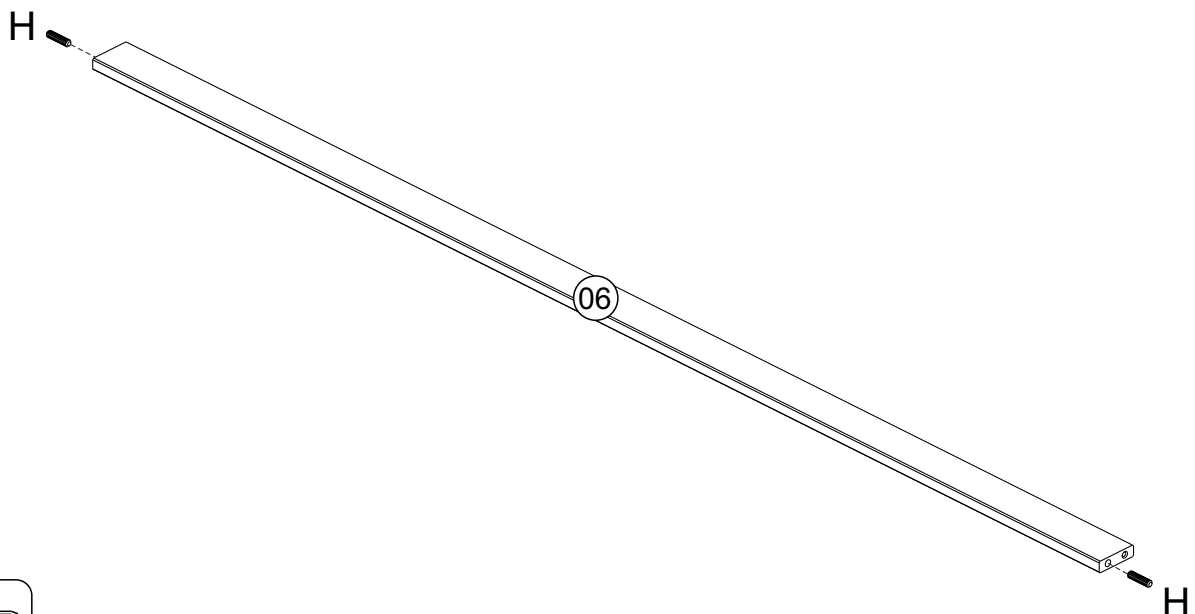





09

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE
TO HOLD THE OTHER END OF THE GUARDRAIL.

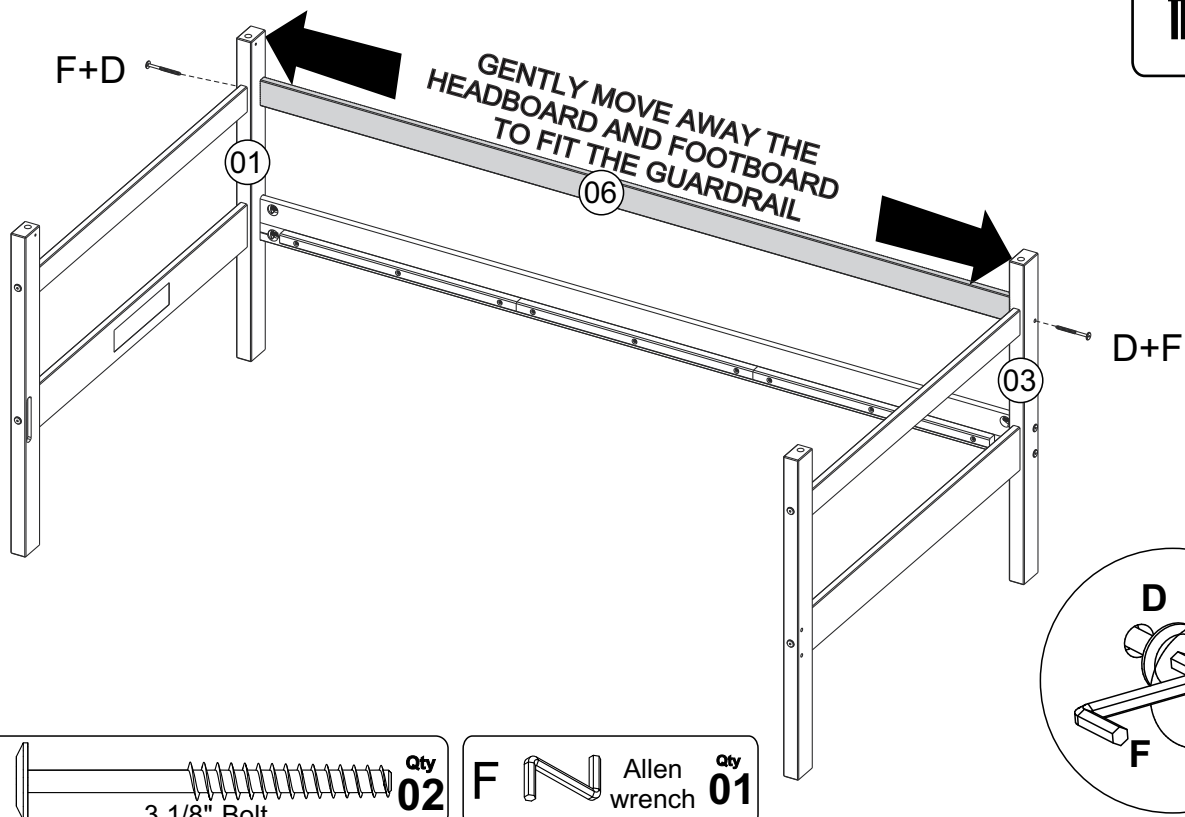
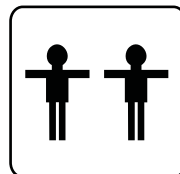



10

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS ON THE HEADBOARDS AND ONE
TO HOLD THE SIDE RAIL.

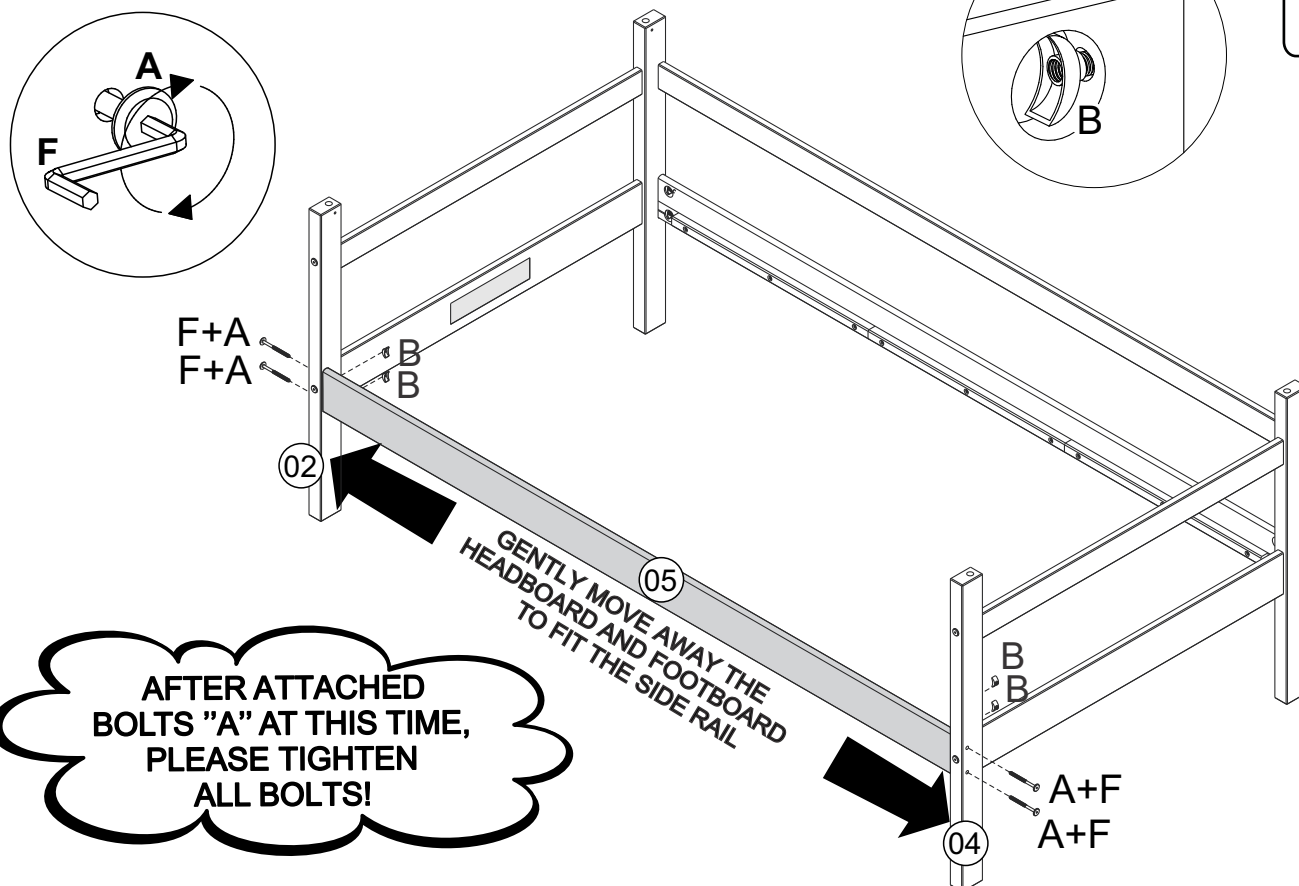
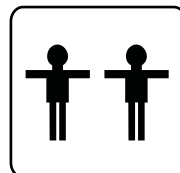



11

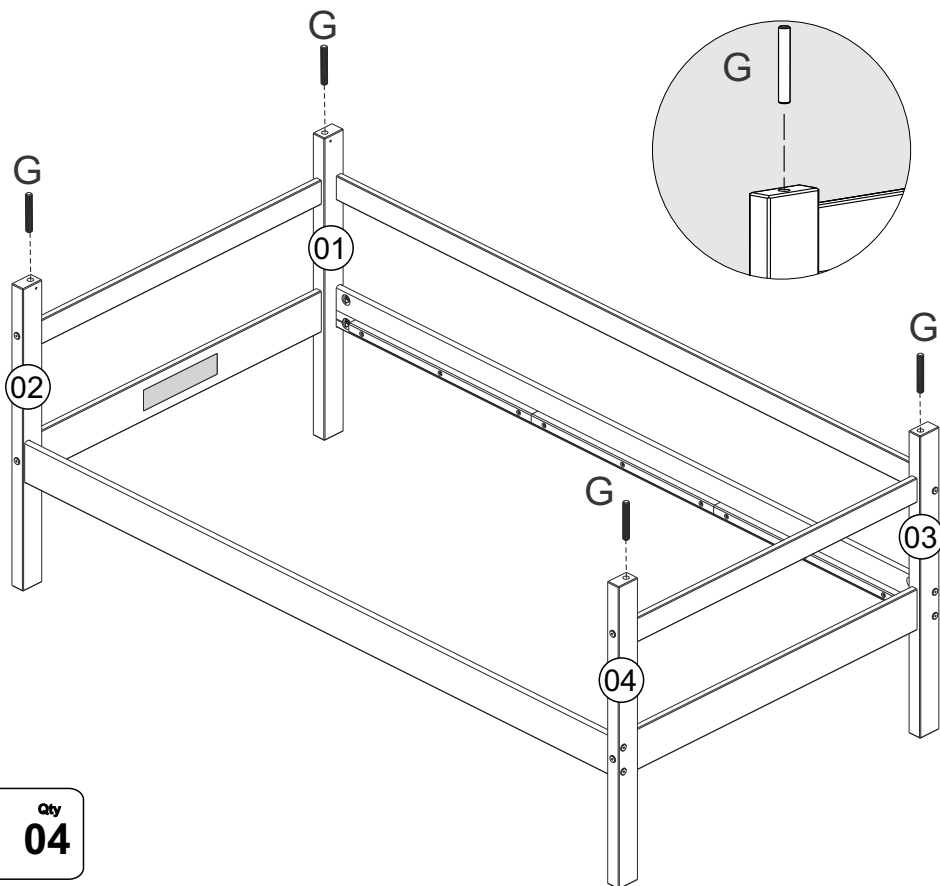

G  Qty **04**
3 15/16" Wooden Dowel

12


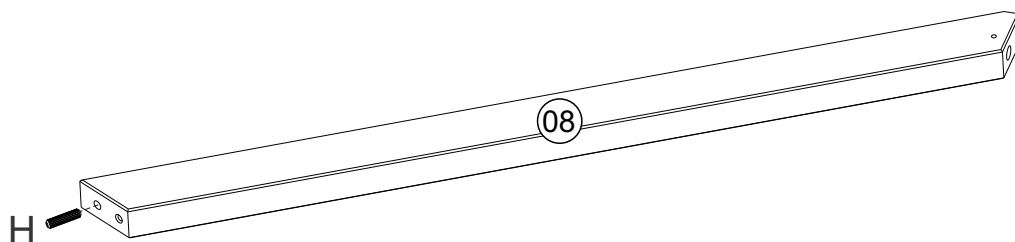


H  Qty **01**
1 9/16" Wooden Dowel


13



**PLEASE ASSEMBLE
ON THE GROUND.**


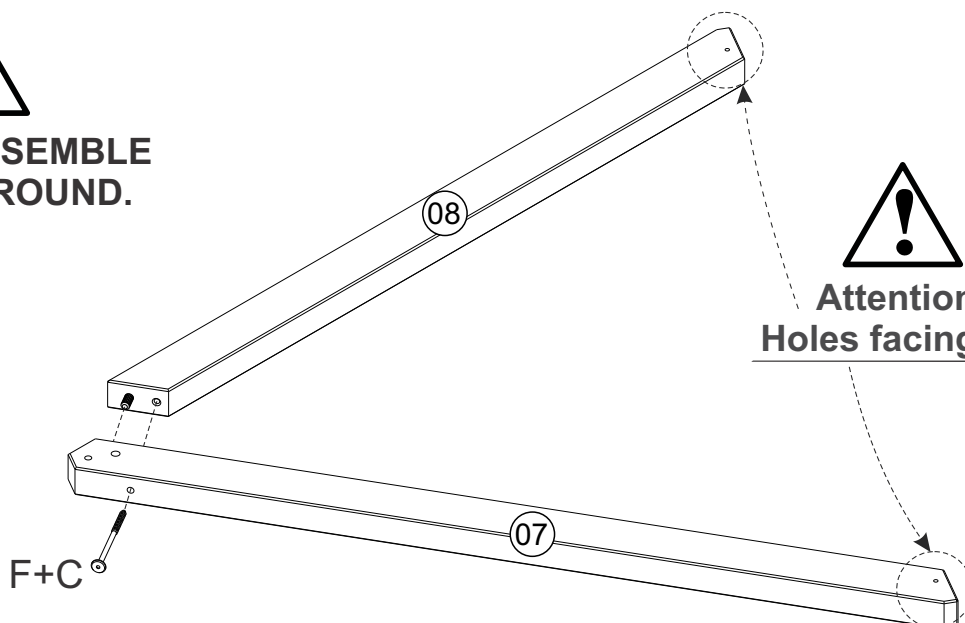
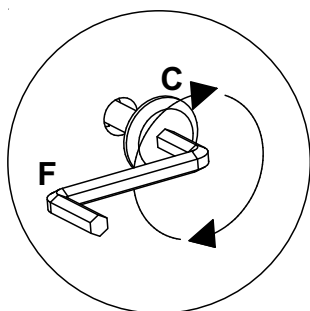



**Attention:
Holes facing up!**

C  Qty **01**
4 1/4" Bolt


F  Qty **01**
Allen wrench

14

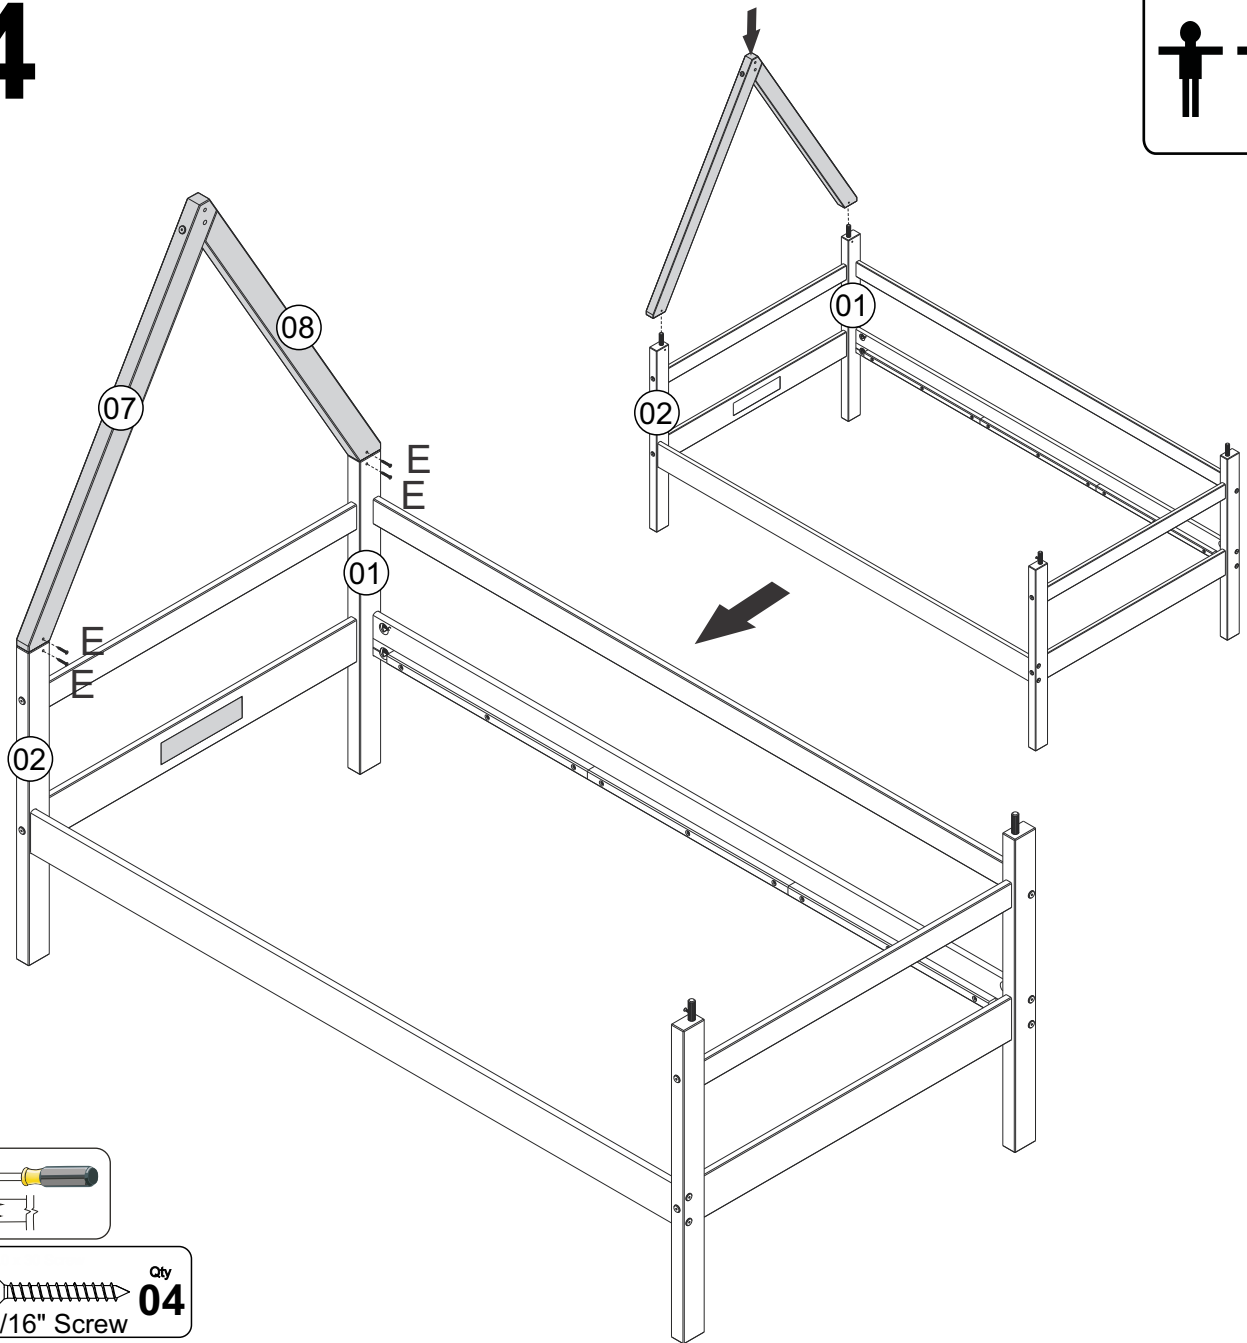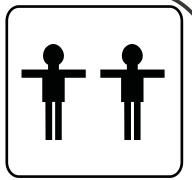

E  **Qty 04**
1 3/16" Screw

15


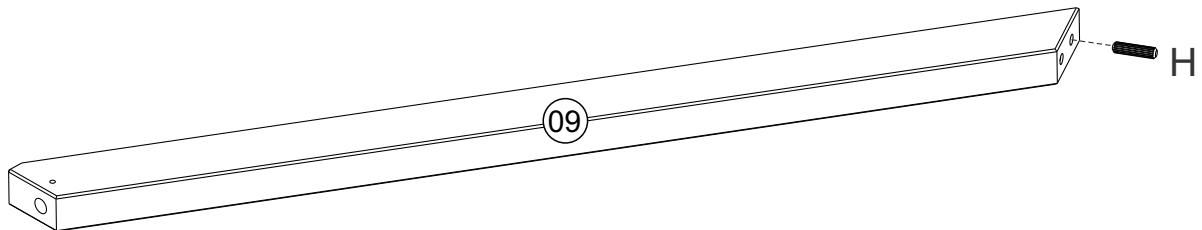


H  **Qty 01**
1 9/16" Wooden Dowel


16







PLEASE ASSEMBLE
ON THE GROUND.

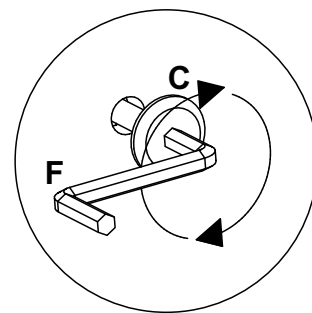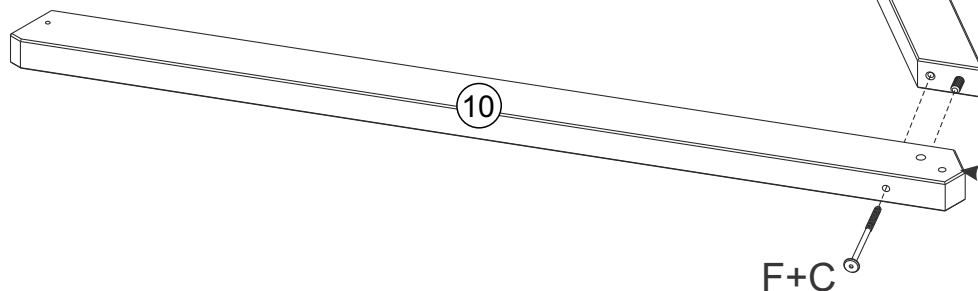



Attention:
Holes facing up!



17

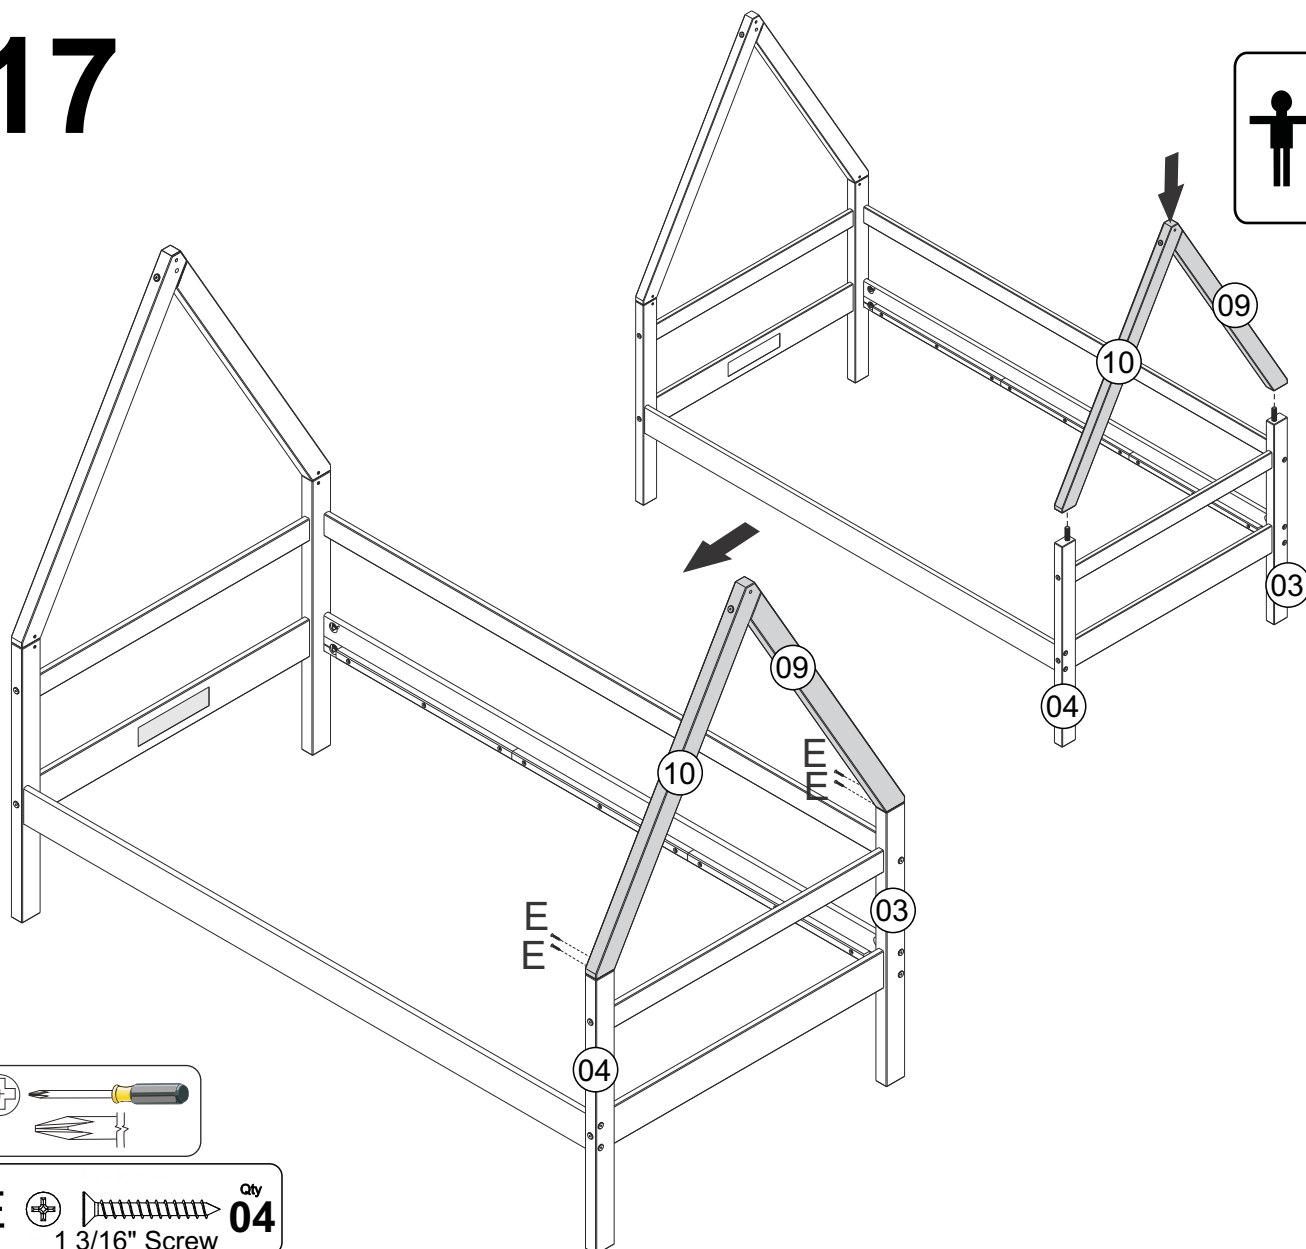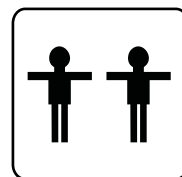


18

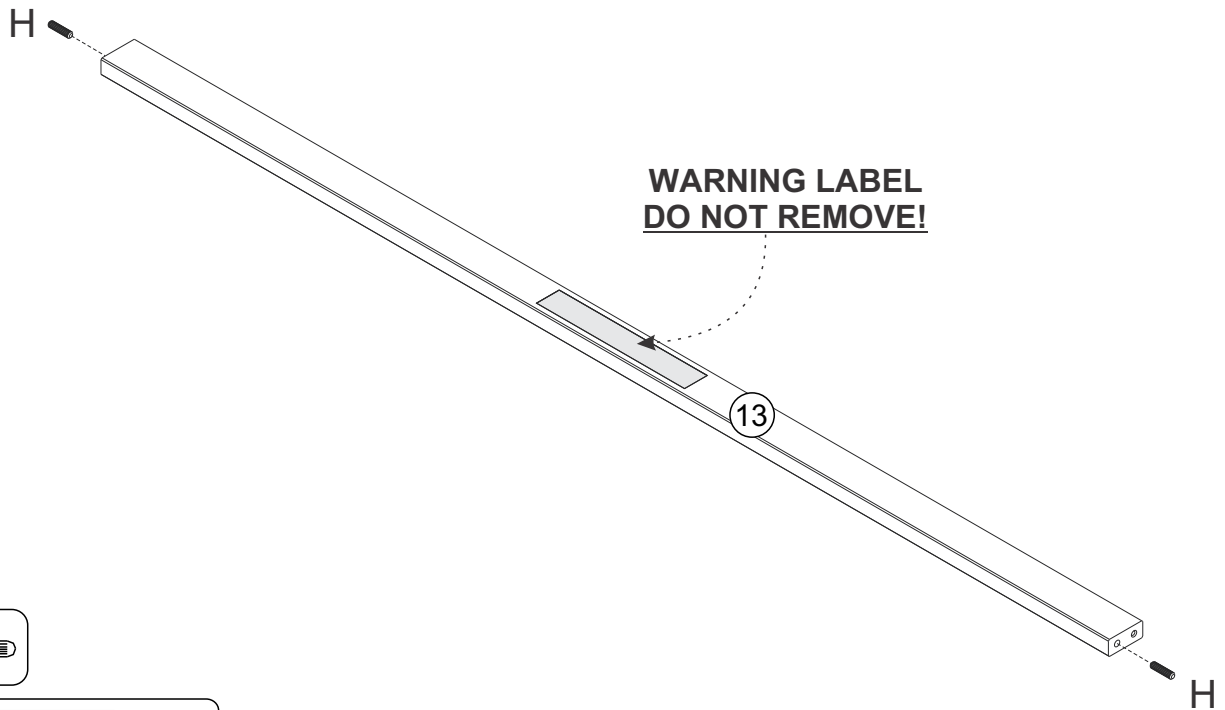



H  **Qty 02**
1 9/16" Wooden Dowel

19

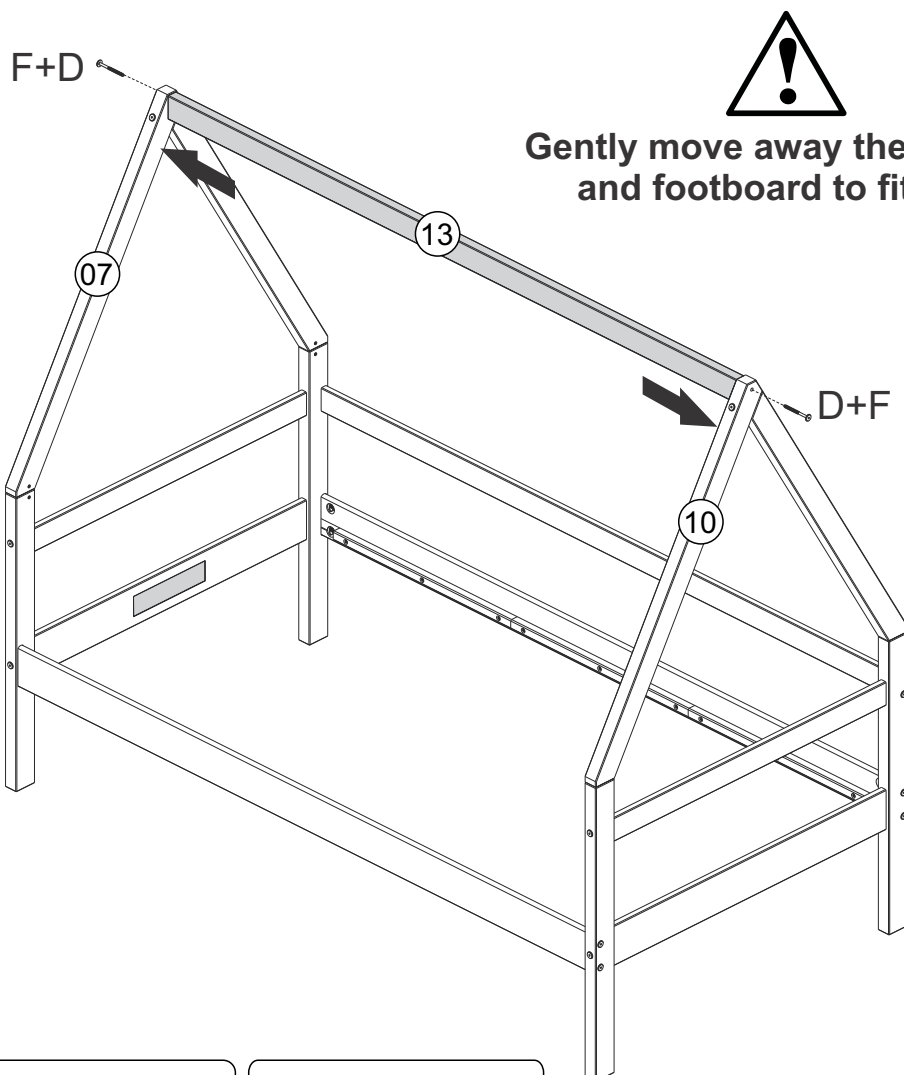


Gently move away the headboard and footboard to fit the rail.

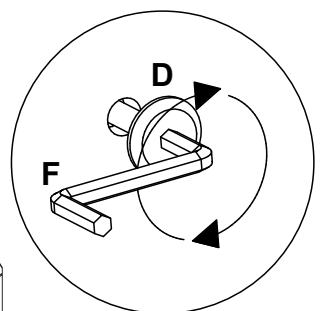



D  **Qty 02**
3 1/8" Bolt


F  **Qty 01**
Allen wrench


20

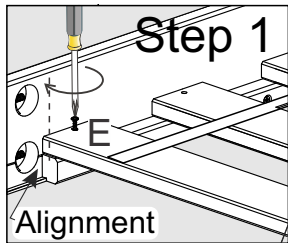

The first slat must be fixed to the end of the side rail cleat.
After fixing the first slat, open the slat set, leaving the tape stretched, until the last slat is aligned at the end of the side rail cleat.

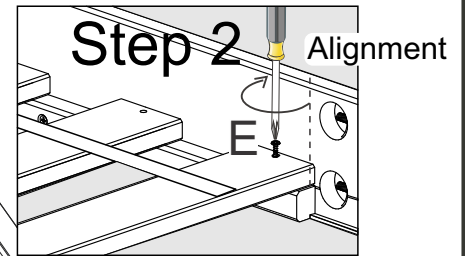

E  1 3/16" Screw Qty 04


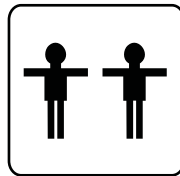


! "PLEASE INSTALL SLAT KIT WITH THE SPACER TAPE ON TOP (FACING UP)"


21


IMPORTANT NOTE!

Please note warping may occur because it is natural wood.
To facilitate the placement of the screws, you must press the two side rails simultaneously.
We suggest 2 people in this step to make it easier the placement of the screws.

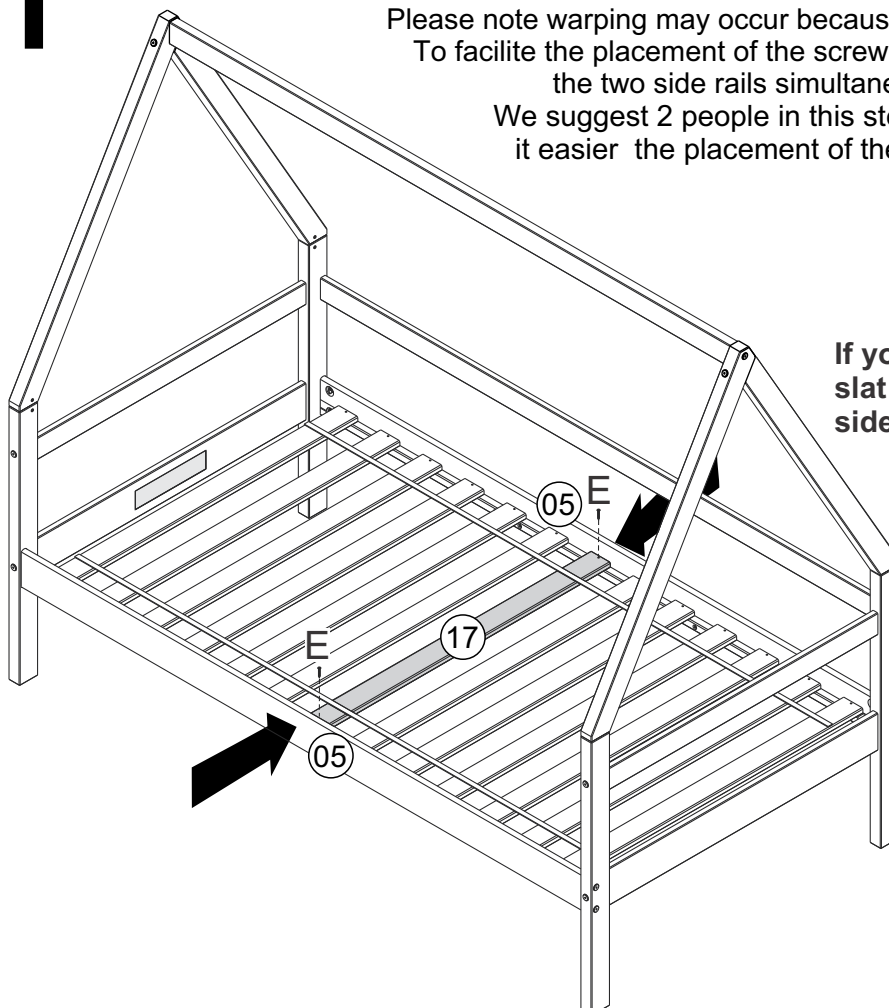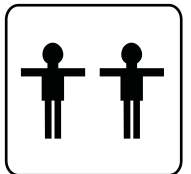

! If you are alone in this step, screw 1 slat first, pull the slat and push the side rail to fix the other slat.







E  1 3/16" Screw Qty 02


22

IMPORTANT NOTE!



Use the spacer between each slat.

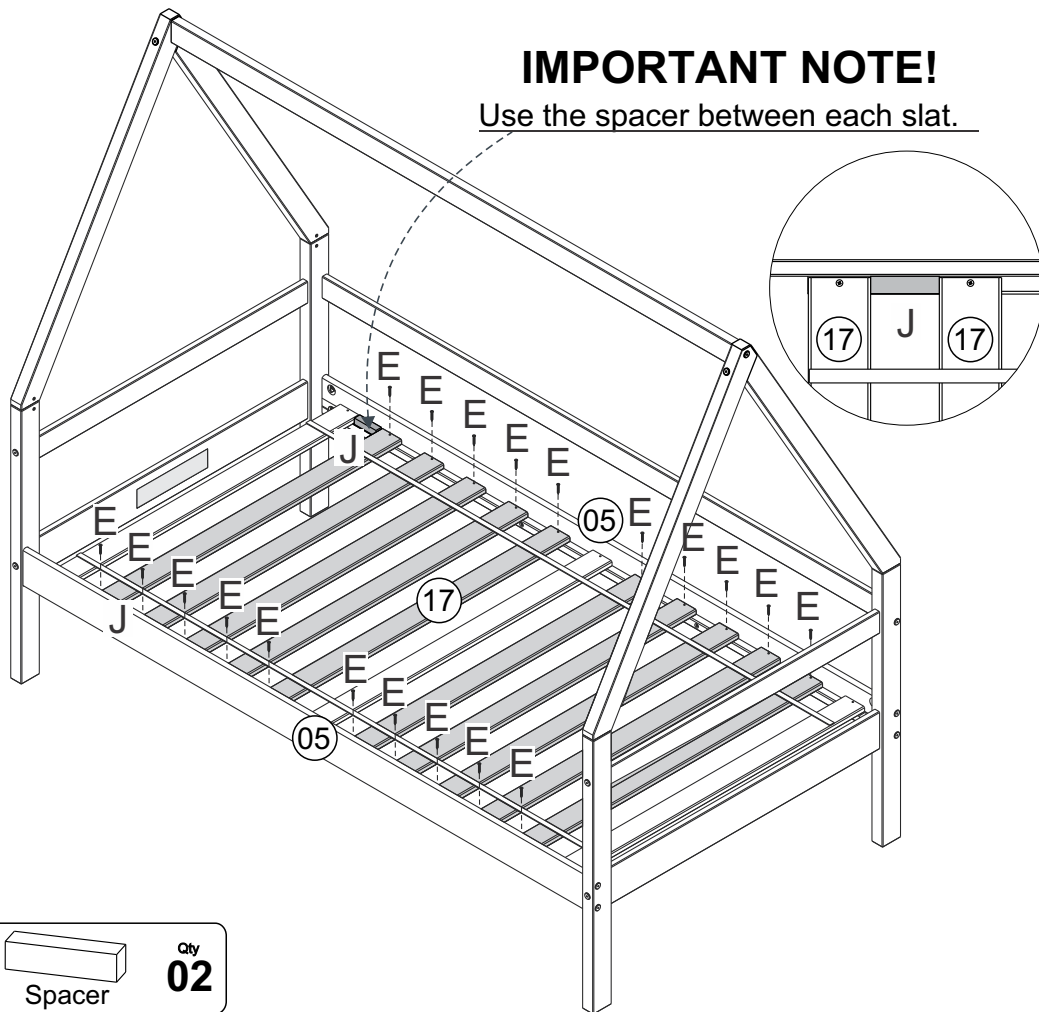



E   Qty **20**
1 3/16" Screw




J  Qty **02**
Spacer

23

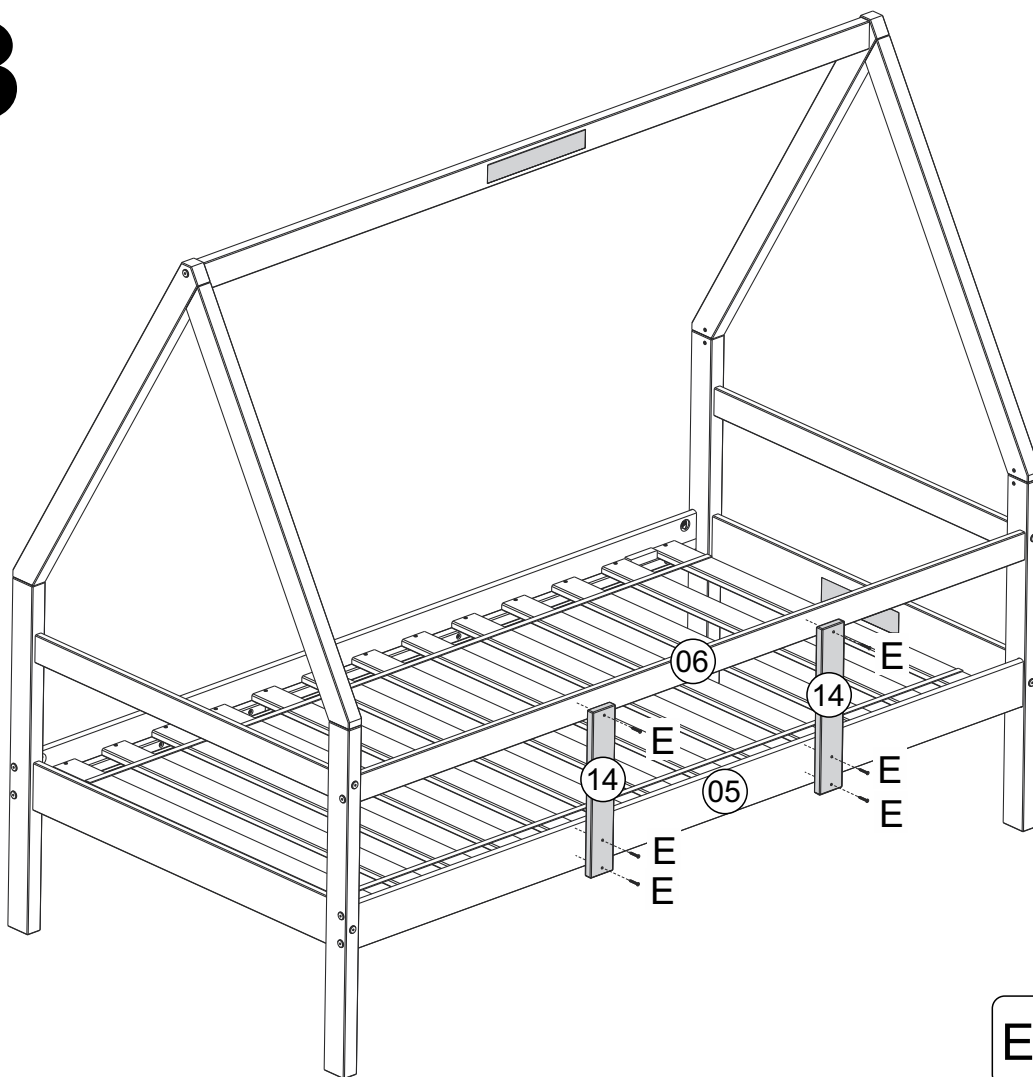

E   Qty **06**
1 3/16" Screw

24 FRONT GUARDRAIL


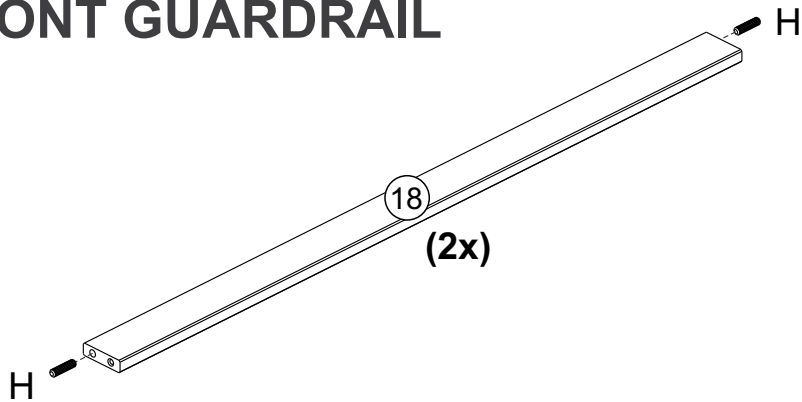


1 9/16" Wooden Dowel

25





PLEASE ASSEMBLE
ON THE GROUND.

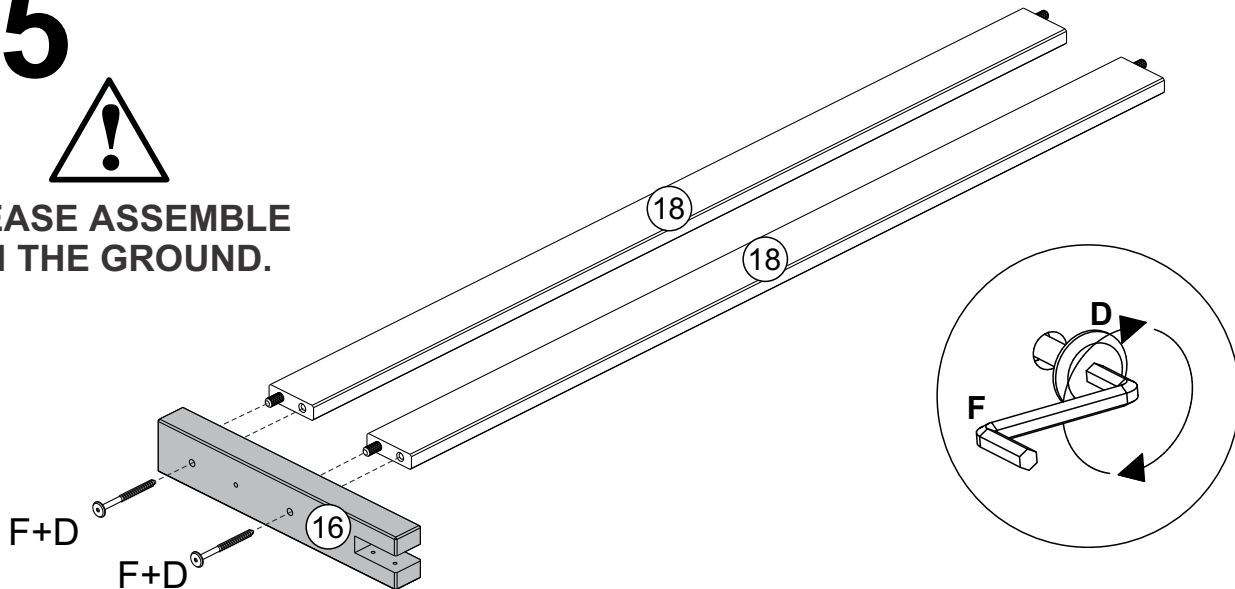


26




PLEASE ASSEMBLE
ON THE GROUND.

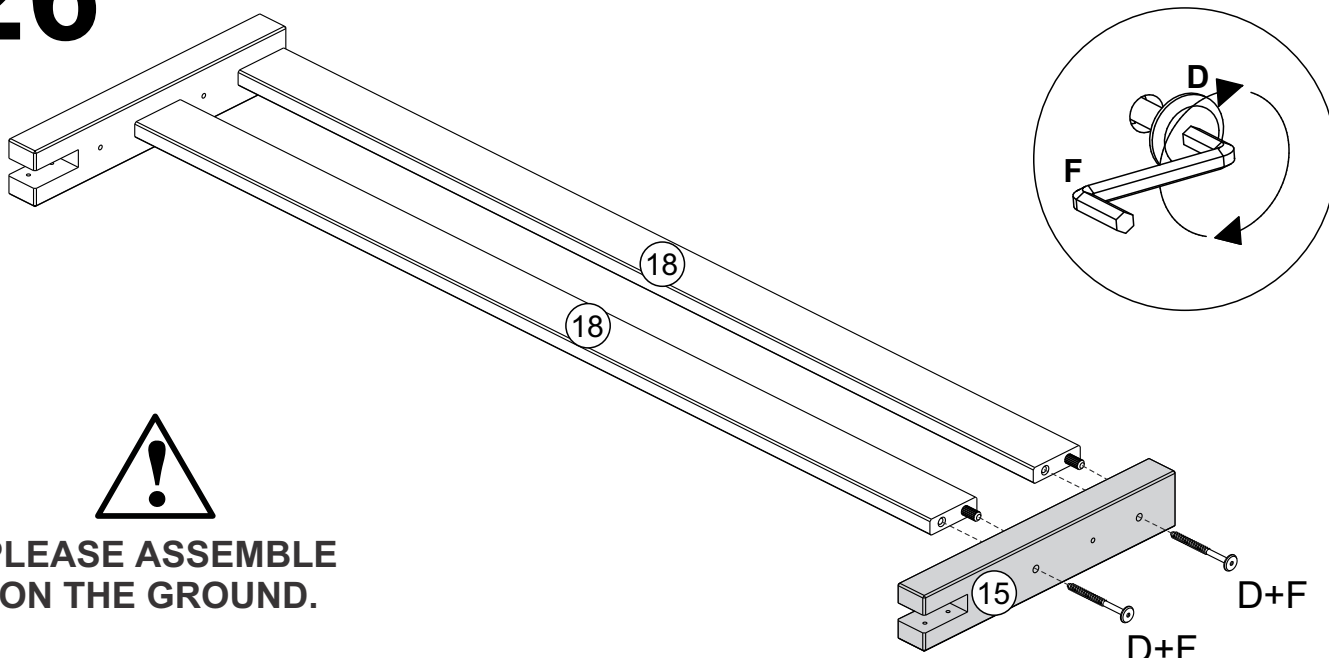

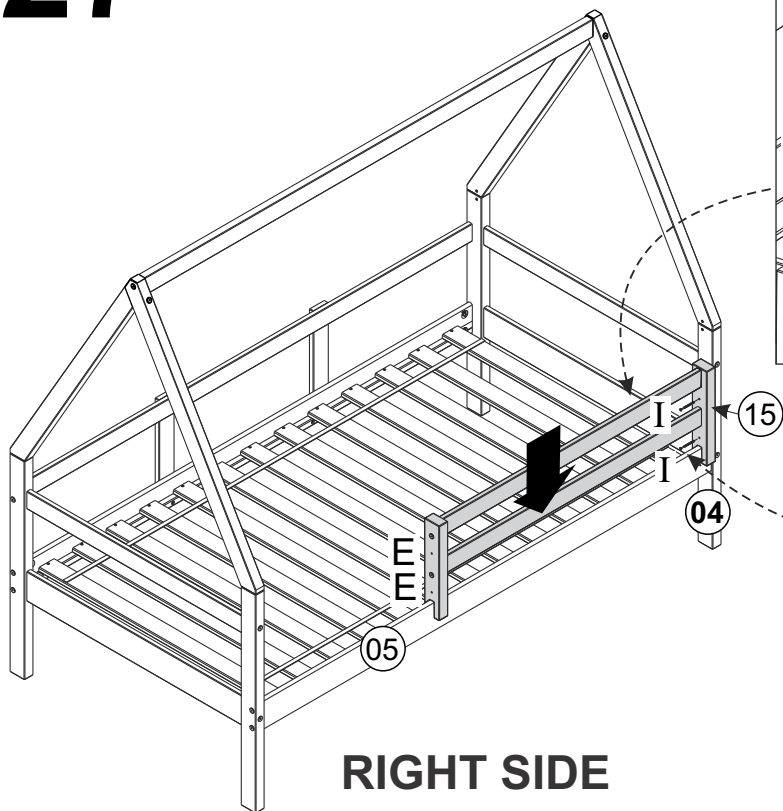


RIGHT SIDE


OR

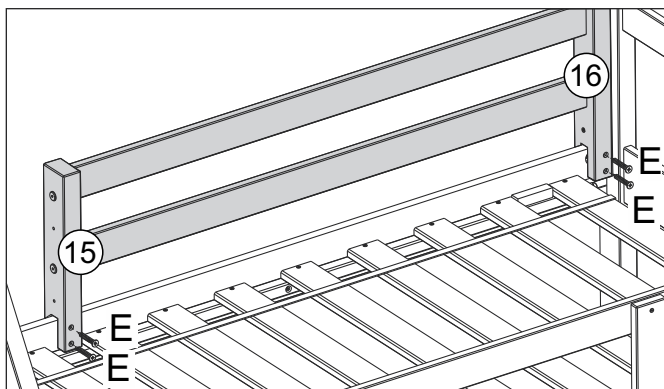



LEFT SIDE



E  **1 3/16" Screw** **Qty 04**

I  **2 1/4" Screw** **Qty 02**

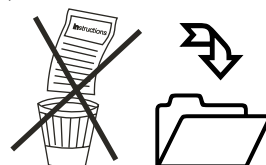

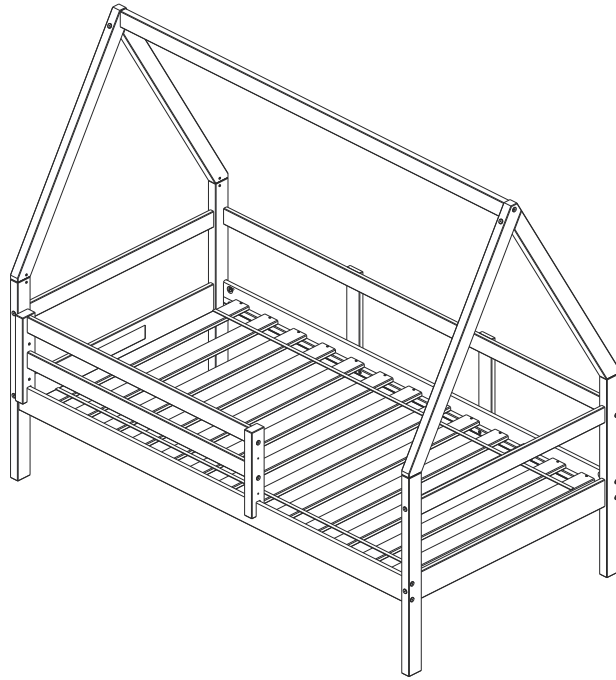

WARNING:

To help prevent serious or fatal injuries from entrapment or falls:

- **STRANGULATION HAZARD** - Never attach or hang items to any part of the bed that are not designed for use with the bed; for example, but not limited to hooks, belts, strings and jump ropes.
 - Prohibit horseplay on bed.
 - Prohibit jumping on bed.
 - Prohibit more than one person on bed.
- **DO NOT HANG FROM ROOF STRUCTURE.**

