

# About the Wood and Finish

This product has been carefully crafted of: MDF, solid pine wood and/or pine veneers. These materials derive from plantations, a renewable and well managed forest, therefore, not endangering the environment. The highest quality standards have been implemented to assure a sturdy and reliable product. Due to the natural variances in the

graining of wood, you may notice subtle differences in the shading and tone of the color stain, warp, holes, wood knots and also small cracks. This is not a defect.

But rather a result of the natural beauty of the wood itself.

## Care and maintenance:

Dust when needed using a smooth, dry cloth. Household furniture polish can be used occasionally to restore luster.






# ASSEMBLY INSTRUCTIONS

## 3006 - TWIN TWIN ACTIVITY BUNK BED

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure that all parts are included.

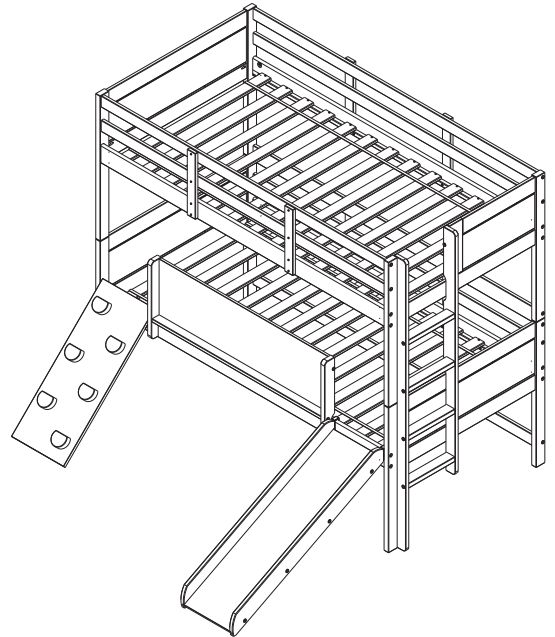

**“DO NOT TIGHTEN SCREWS AND BOLTS UNTIL COMPLETELY ASSEMBLED”.**

### SIZE OF MATTRESS AND FOUNDATION

This bed is designed to use a Twin mattress (37½" - 38½" x 74"-75") and wooden slats sets, as provided by the manufacturer.

The total thickness of the mattress must not exceed 8" (inches).

**Note:** There must be at least 5" from top surface of mattress to top edge or guardrails.


### REPLACEMENT PARTS:


Replacement parts, including additional guardrails, may be obtained from place of purchase or original distributor.


TO OBTAIN PARTS, PLEASE CONTACT: **DONCO TRADING COMPANY-FORT WORTH, TEXAS**

## **SAFETY WARNINGS!**



- 1- Follow the information on the warning label appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
- 2- Always use the recommended size of mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- 3- The surface of mattress must be at least 5" below the upper edge of guardrails.
- 4- Do not allow children under 6 years of age to use the upper bunk.
- 5- Prohibit more than one person on upper bunk.
- 6- Periodically check and ensure that the guardrail, ladder and other components are in their proper position free from damage, and that all connectors are tight.
- 7- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- 8- Always use the ladder for entering and leaving the upper bunk.
- 9- Do not use substitute parts. Contact the distributor or dealer for replacement parts.
- 10- The use of a night light may provide added safety precaution for a child using the upper bunk.
- 11- If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- 12- Always use guardrails on both long sides of the upper bunk.
- 13- The use of water or sleep flotation mattresses is prohibited.
- 14- Keep these instructions for future reference.
- 15- Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed: for example, but not limited to, hooks, belts, and jump ropes, etc.

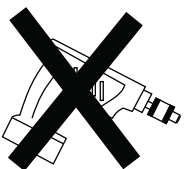


  
\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.

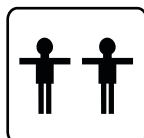

+

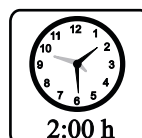

(Not included)



(Not included)



### Tools Required

**IMPORTANT: PLEASE READ INSTRUCTIONS BEFORE STARTING THE ASSEMBLY**


Part list: 3006 - TWIN TWIN ACTIVITY BUNK BED



**WARNING LABEL  
DO NOT REMOVE**















**CERTIFICATION  
LABEL  
DO NOT REMOVE**

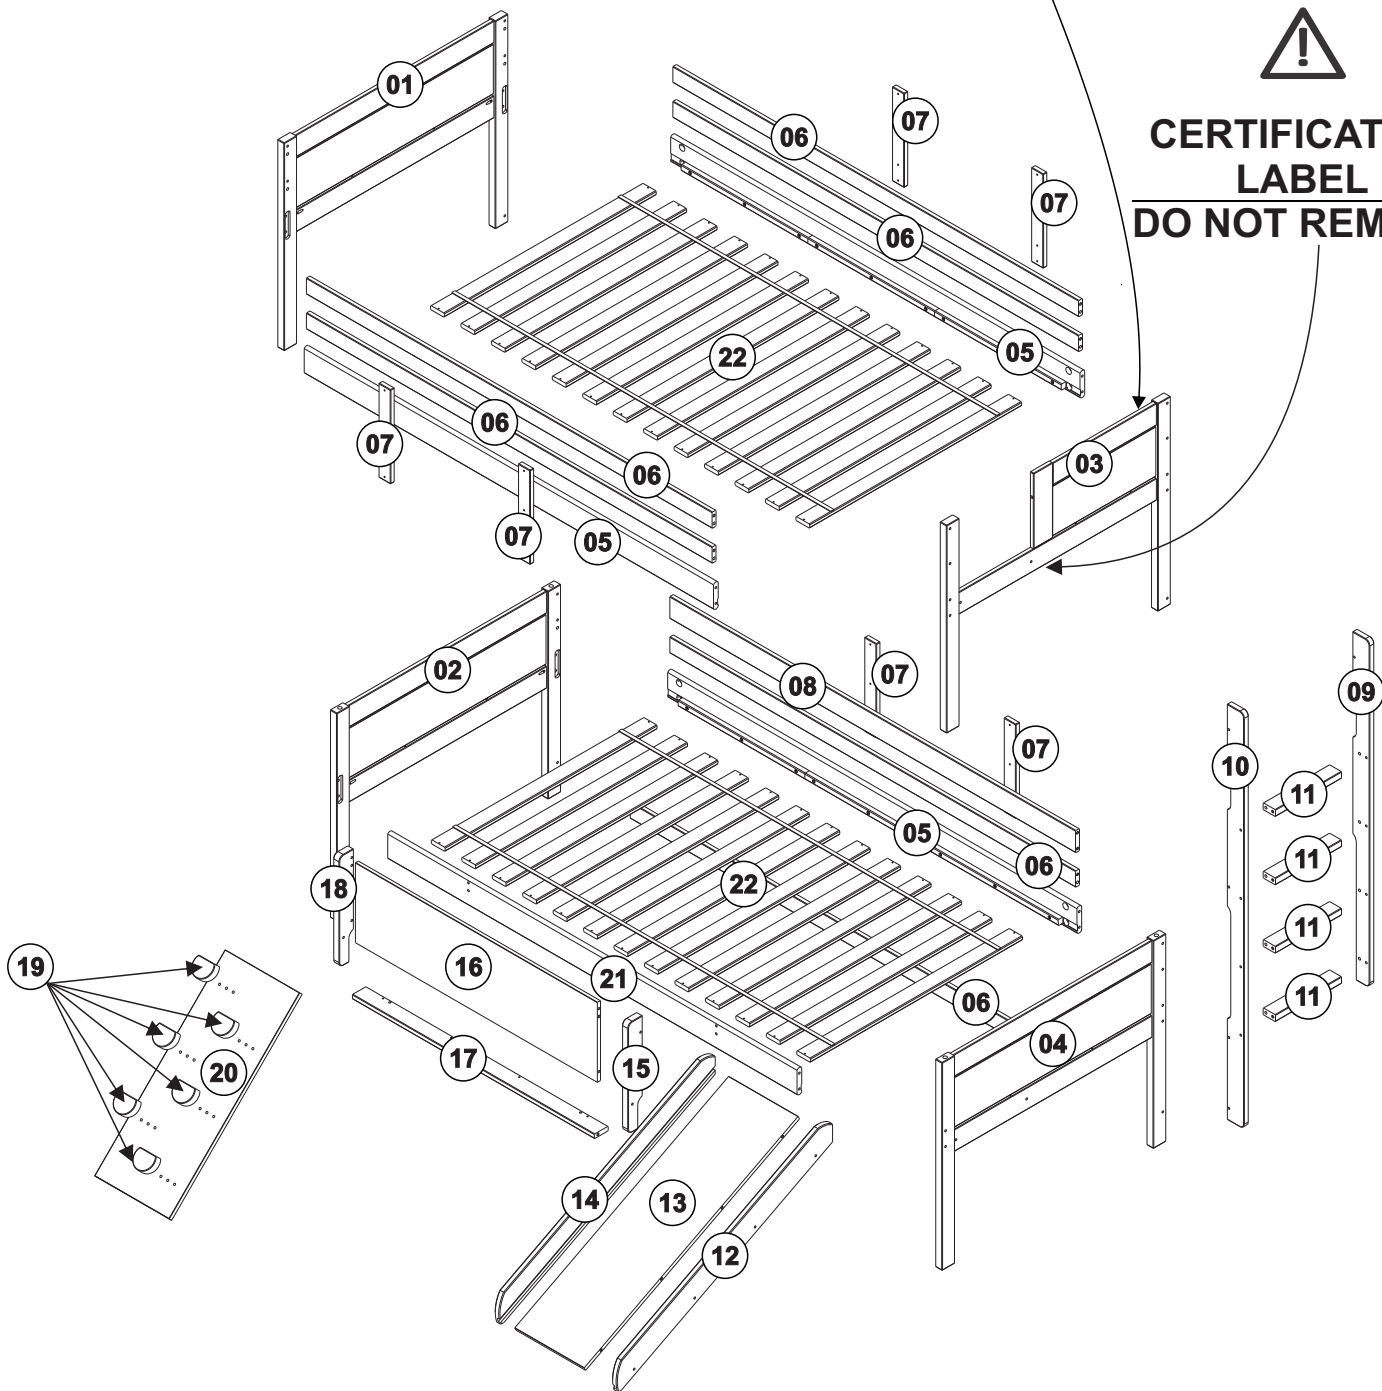





## Identifying the Hardware-Identify the hardware using the illustrations below.

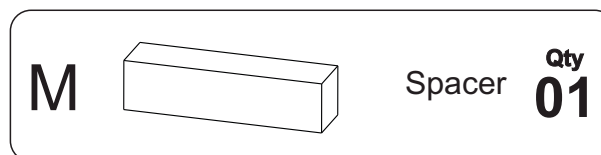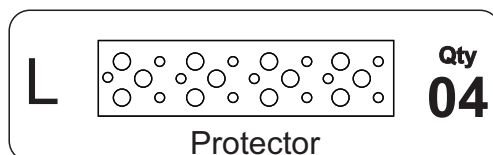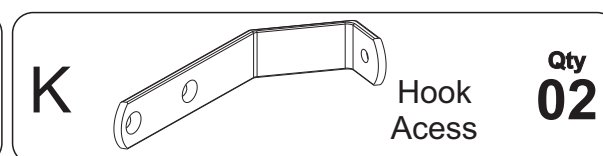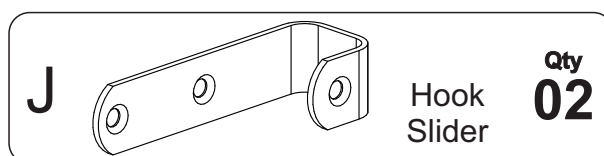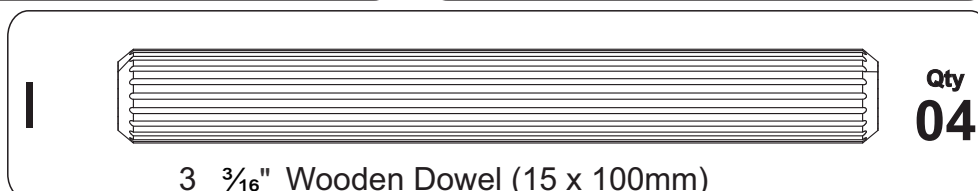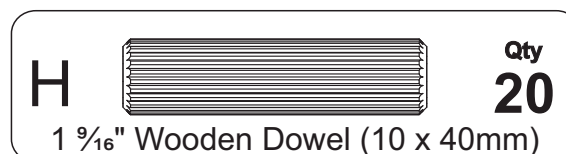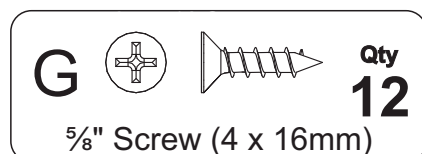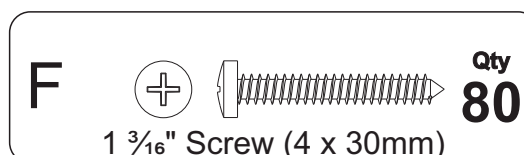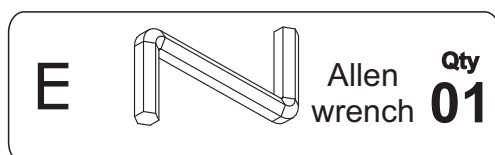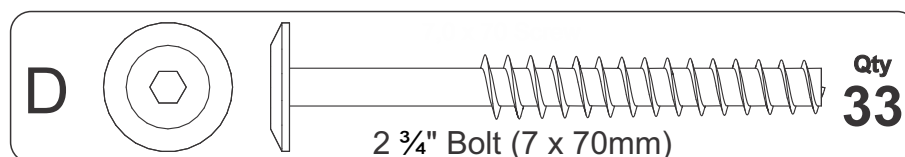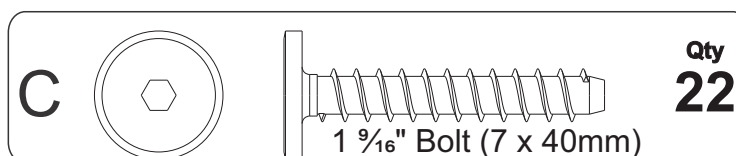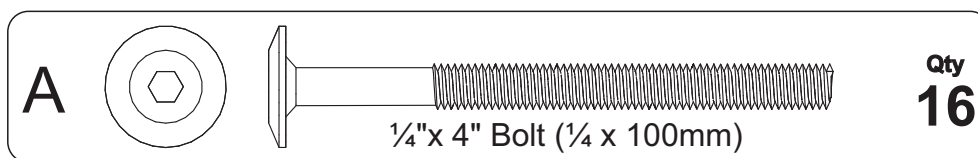




\*Full size screws and bolts, for conference.

# 3006 - TWIN TWIN ACTIVITY BUNK BED OPTIONS

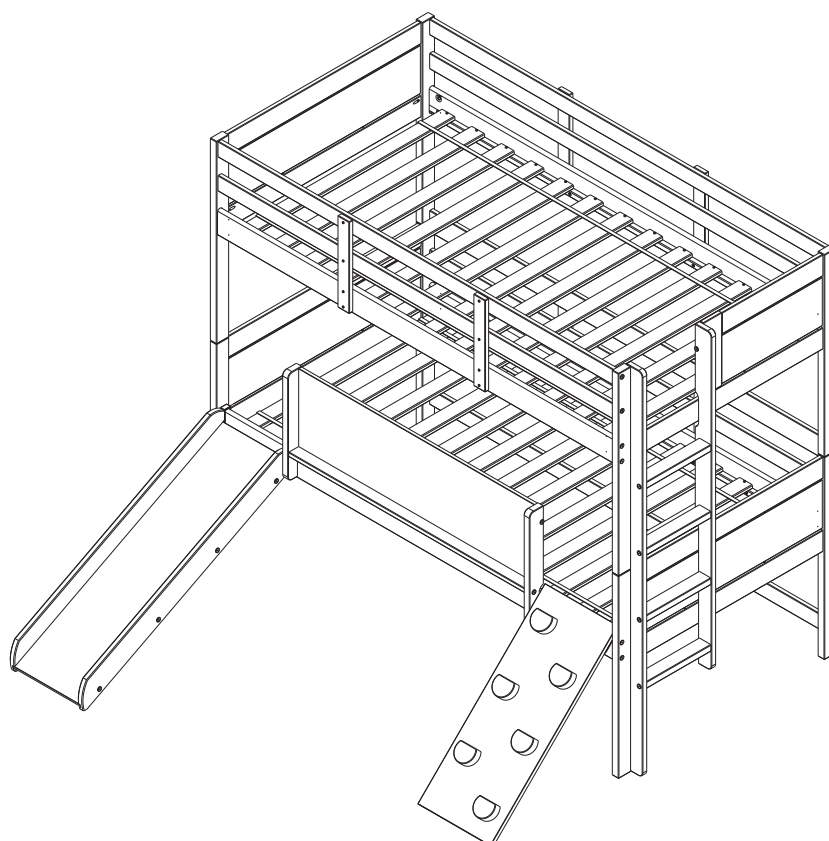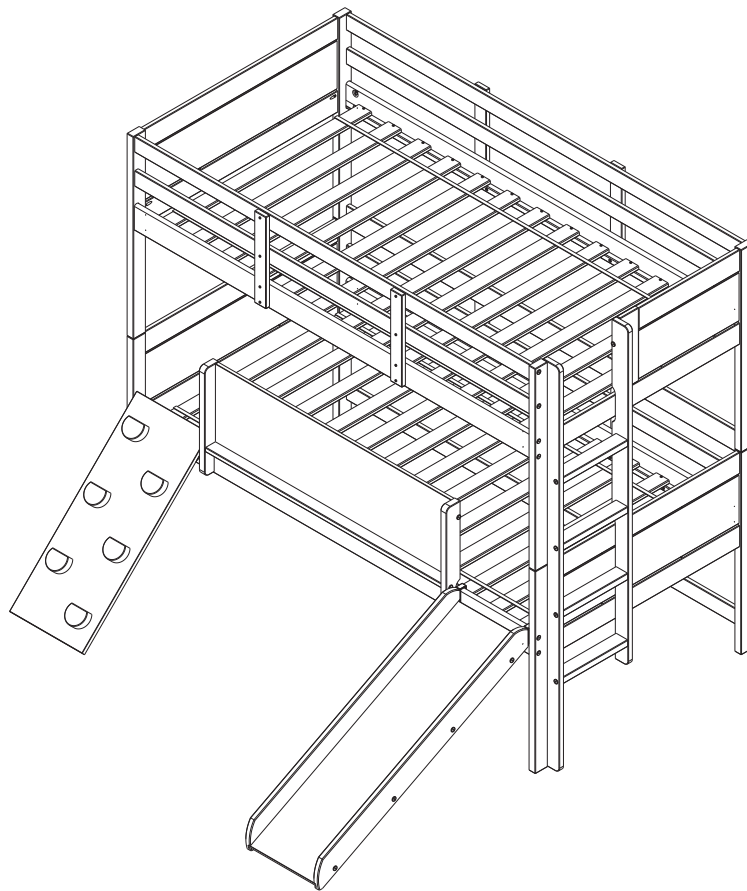




# 01

## BOTTOM BED

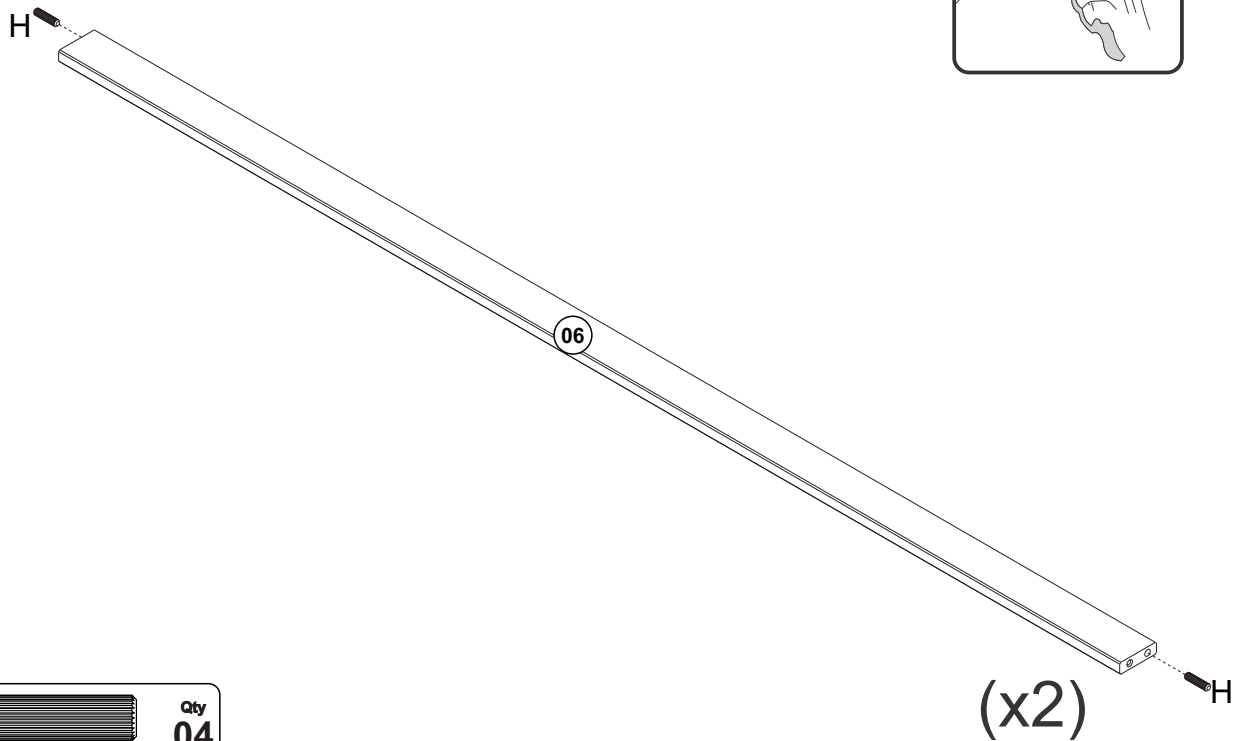
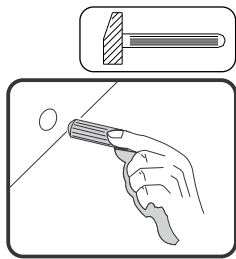


# 02



## BOTTOM BED

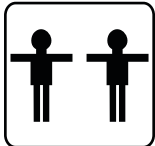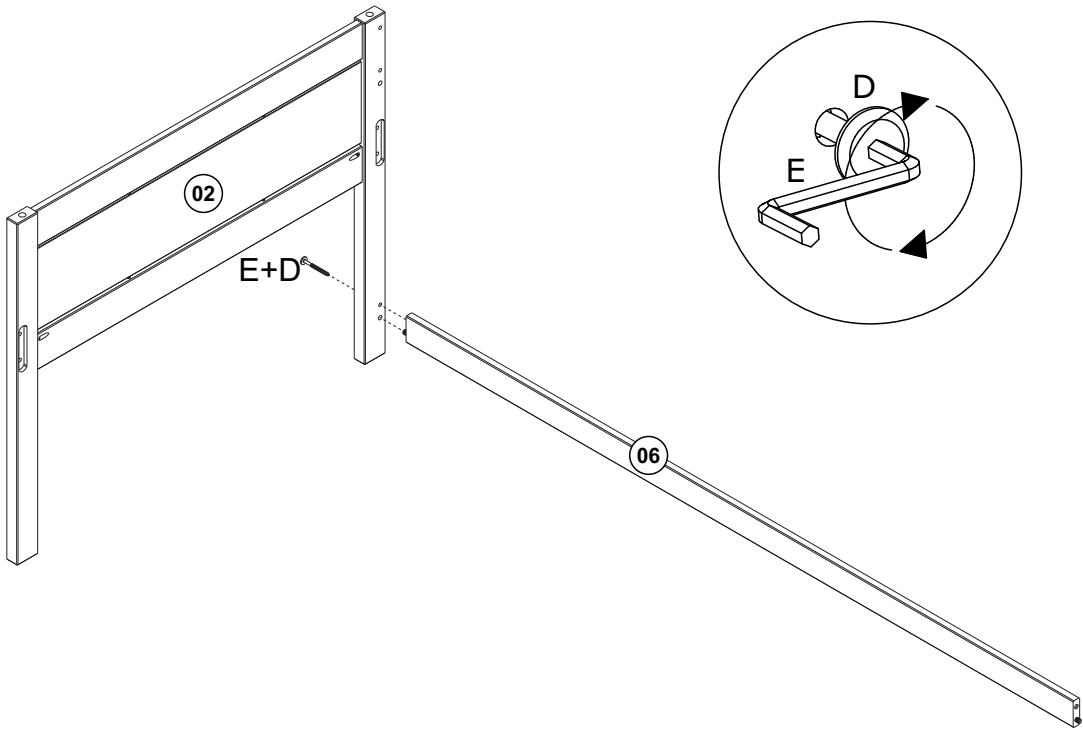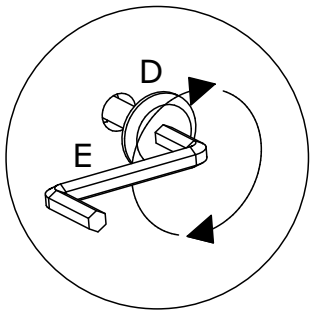



**IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.  
ONE TO ATTACH THE BOLTS THE HEADBOARD AND ONE  
TO HOLD THE OTHER END OF THE CROSSBAR.**




# 03

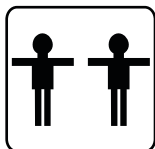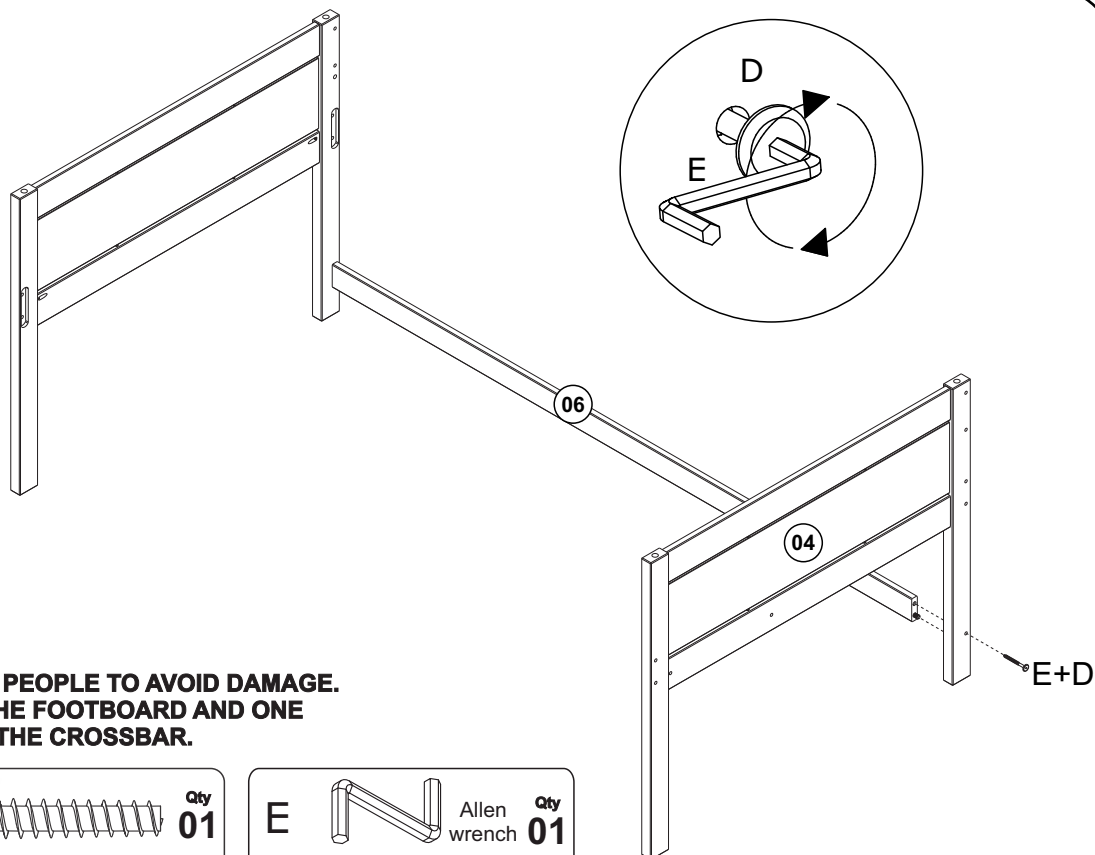


IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.  
ONE TO ATTACH THE BOLTS THE FOOTBOARD AND ONE  
TO HOLD THE OTHER END OF THE CROSSBAR.






# 04

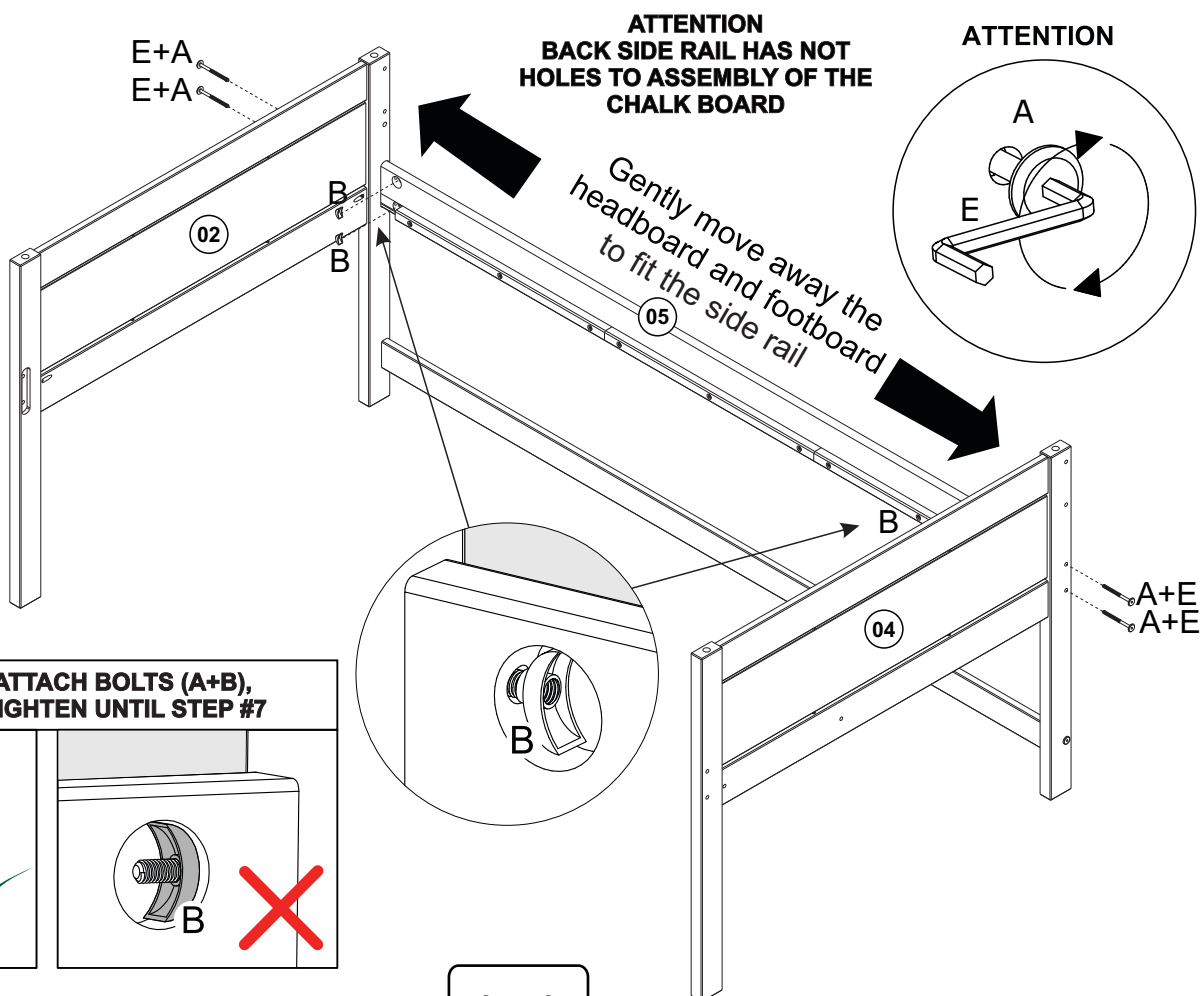

INSERT AND ATTACH BOLTS (A+B),  
BUT DO NOT TIGHTEN UNTIL STEP #7

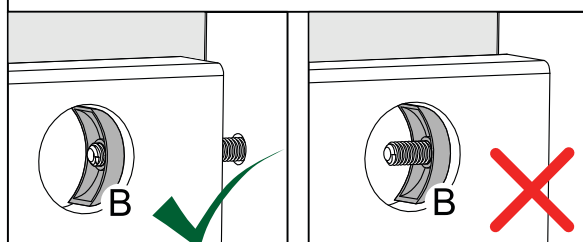




IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.  
ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE  
TO HOLD THE OTHER END OF THE SIDE RAIL.

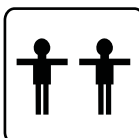




# 05

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE. ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE TO HOLD THE OTHER END OF THE SIDE RAIL.




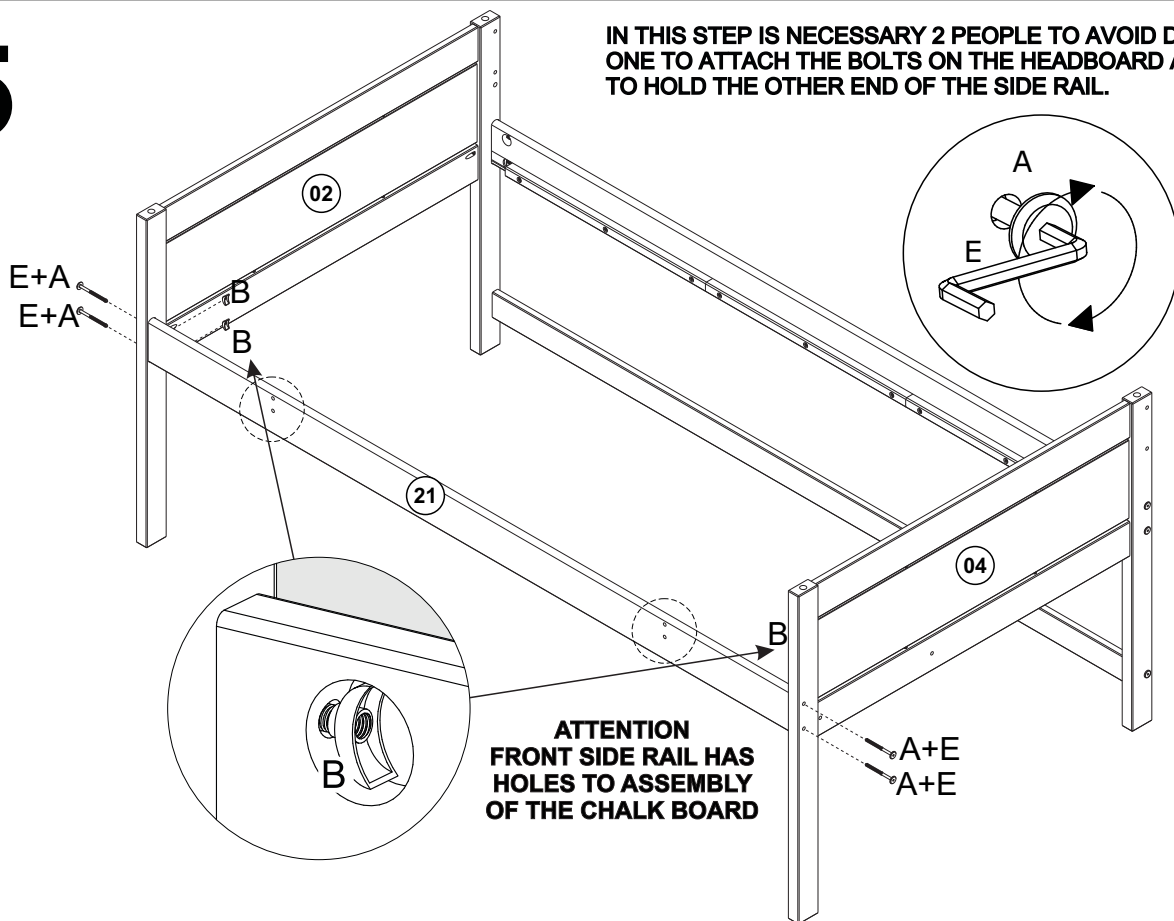


# 06


IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE. ONE TO ATTACH THE BOLTS THE HEADBOARD AND ONE TO HOLD THE OTHER END OF THE GUARDRAIL.

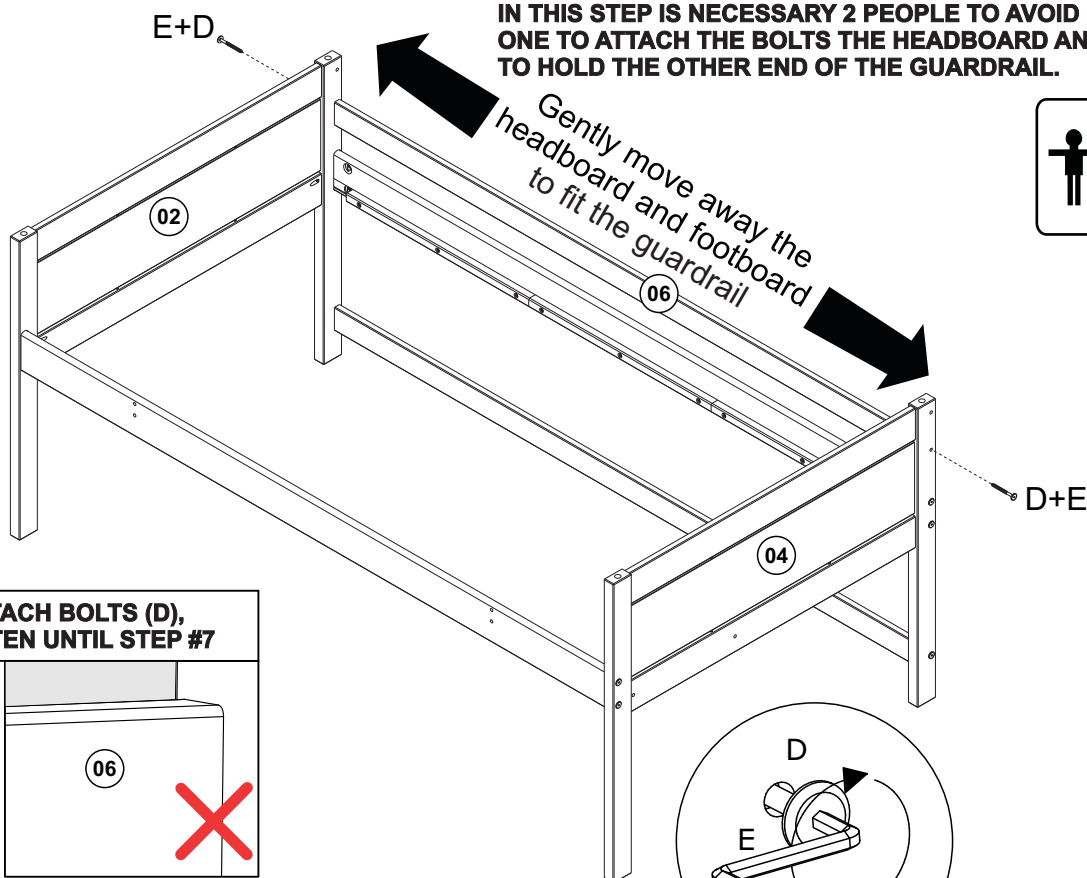


INSERT AND ATTACH BOLTS (D), BUT DO NOT TIGHTEN UNTIL STEP #7

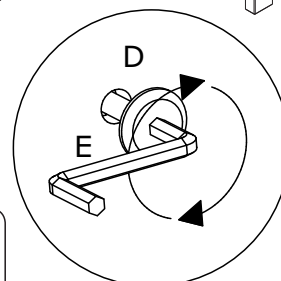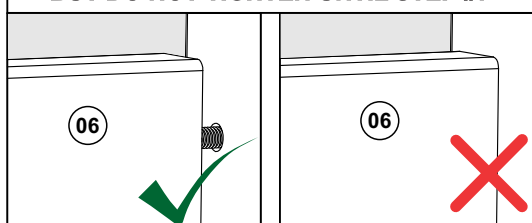


# 07

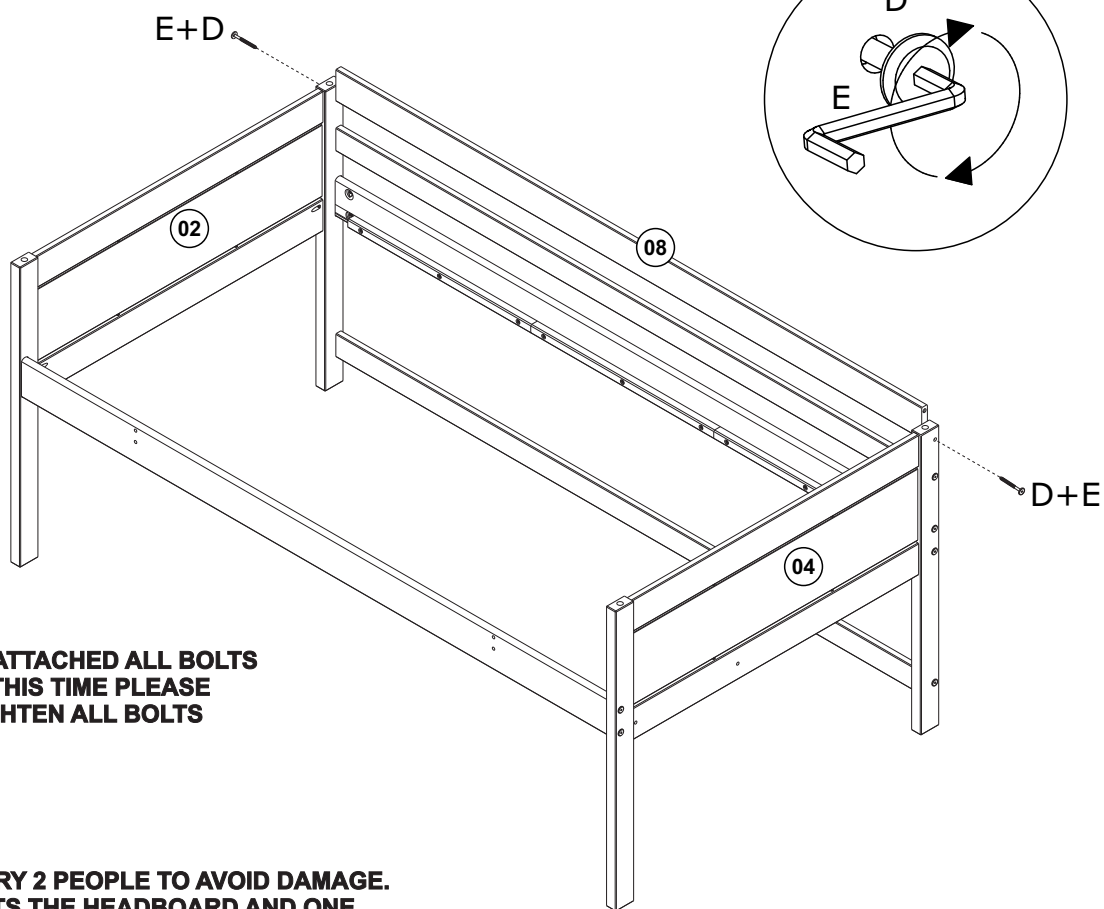

**AFTER ATTACHED ALL BOLTS  
AT THIS TIME PLEASE  
TIGHTEN ALL BOLTS**

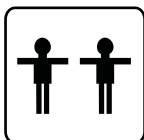

**IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.  
ONE TO ATTACH THE BOLTS THE HEADBOARD AND ONE  
TO HOLD THE OTHER END OF THE GUARDRAIL.**







# 08

## CHALK BOARD









**PLEASE ASSEMBLE  
ON THE GROUND**

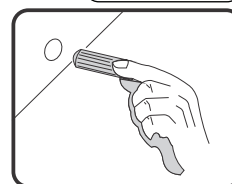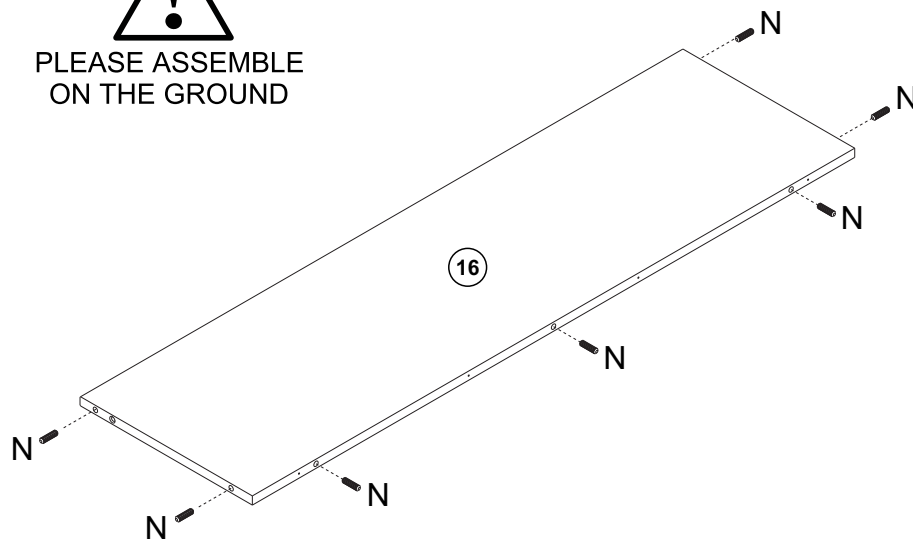






# 09





PLEASE ASSEMBLE  
ON THE GROUND

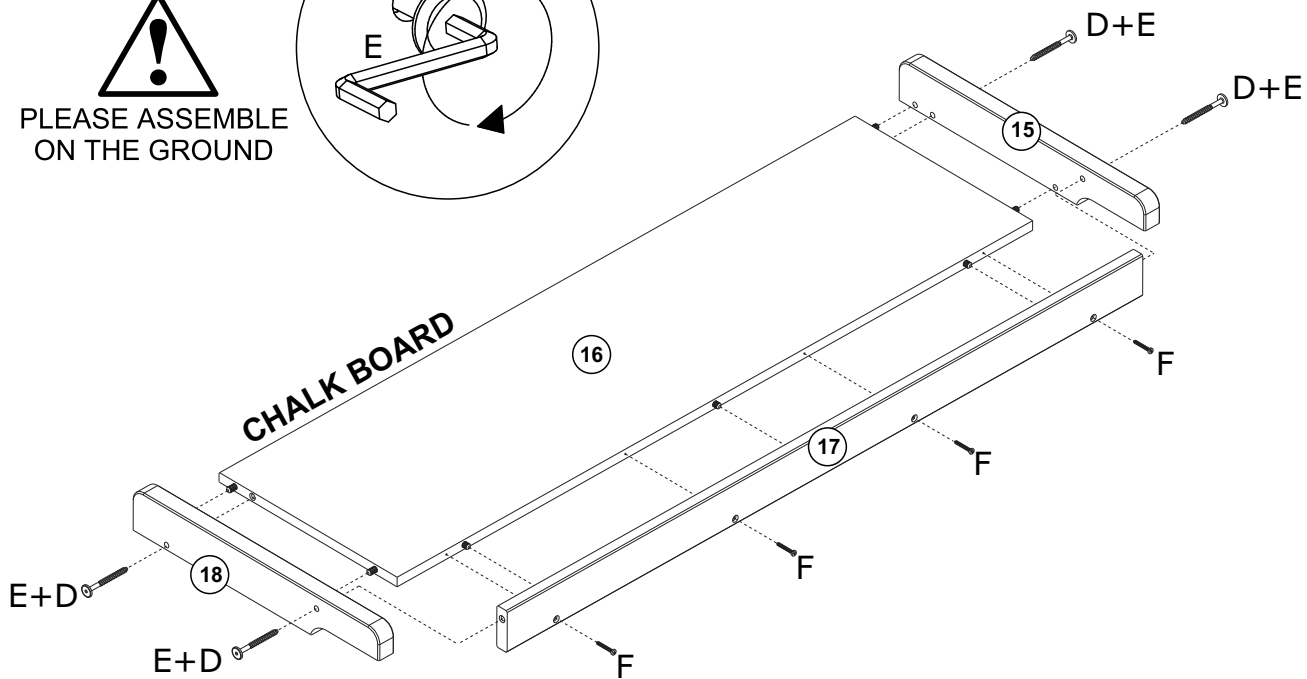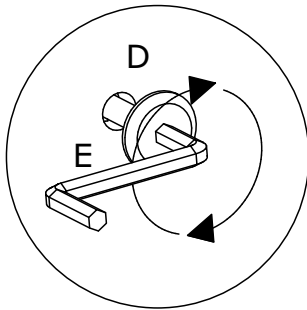

# 10

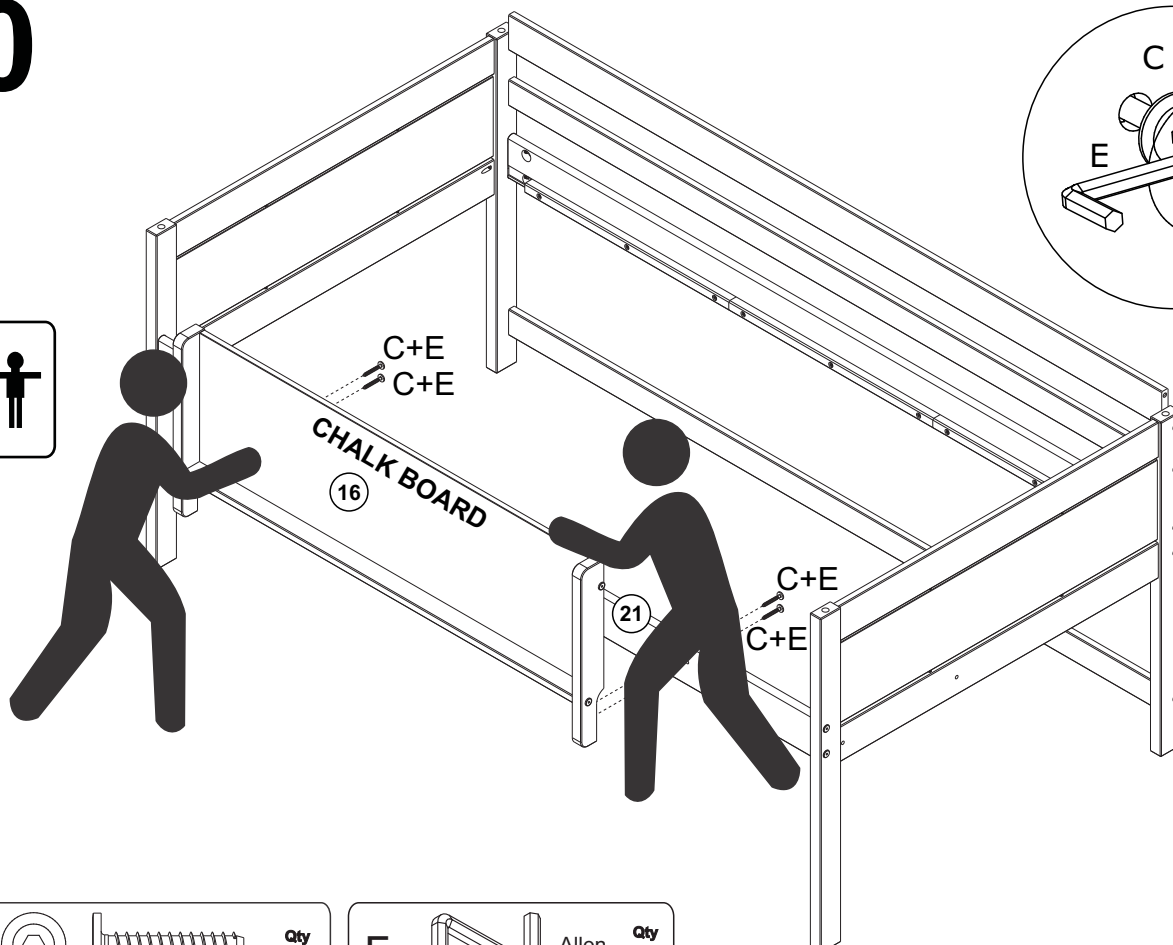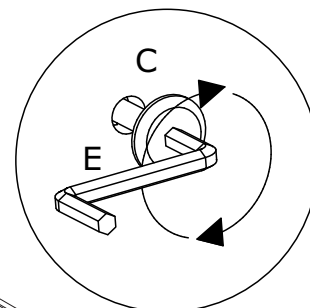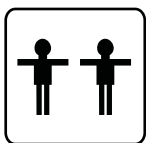


# 11

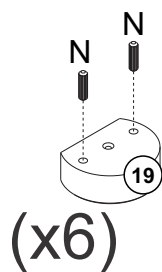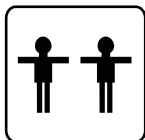





## ACCESS



PLEASE ASSEMBLE  
ON THE GROUND


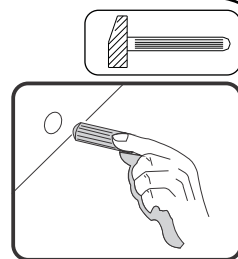


**ATTENTION**  
Pre-drilled holes  
for up





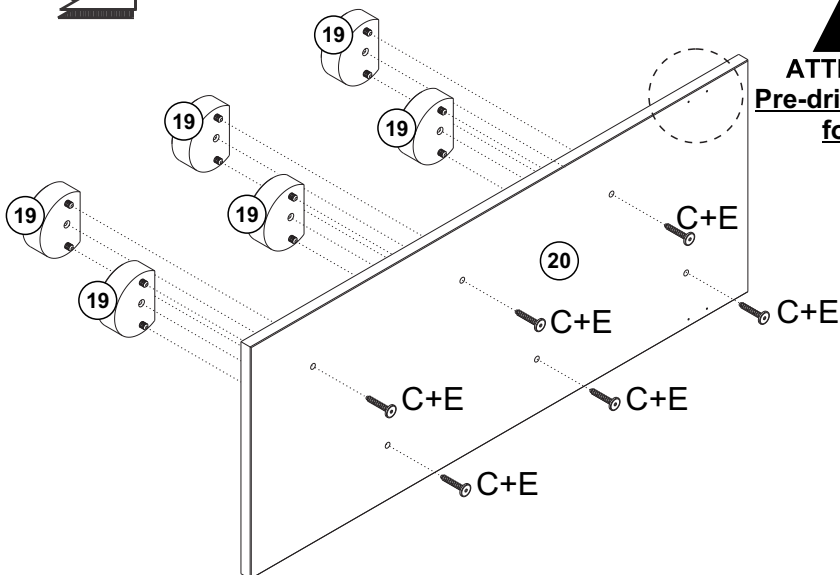
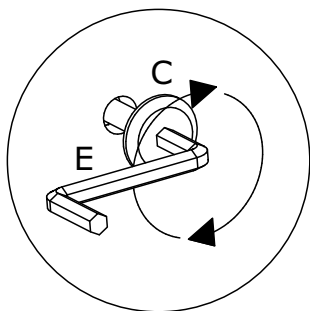


# 12

Step 1

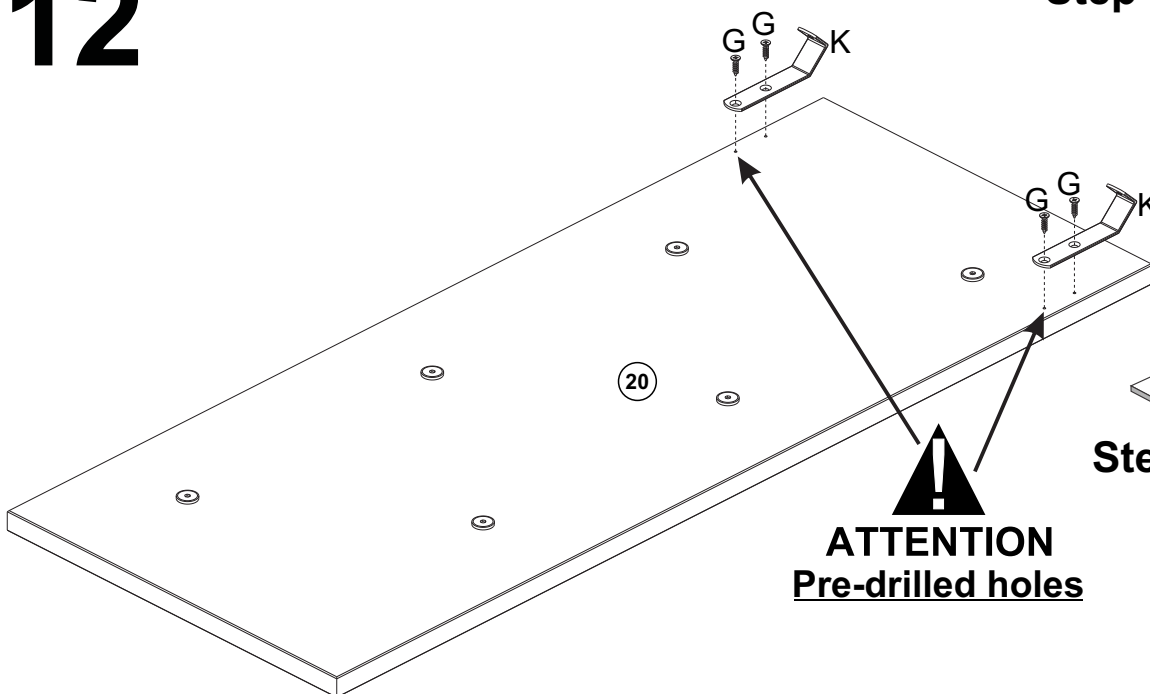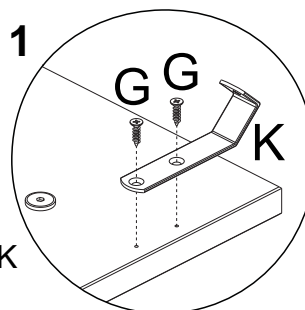

**ATTENTION**  
Pre-drilled holes

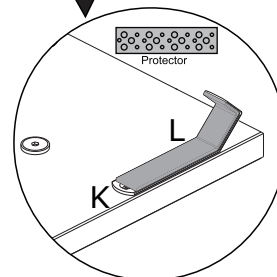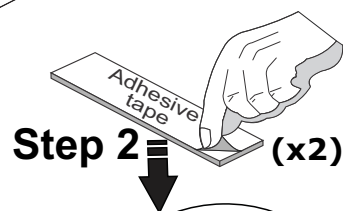



[illegible]

**14 SLIDE**

**! PLEASE ASSEMBLE ON THE GROUND**

**ATTENTION Pre-drilled holes**

**Step 1**

**Step 2**




**Adhesive tape (x2)**

**Protector**

**Qty 02**

Qty  
01







# 15

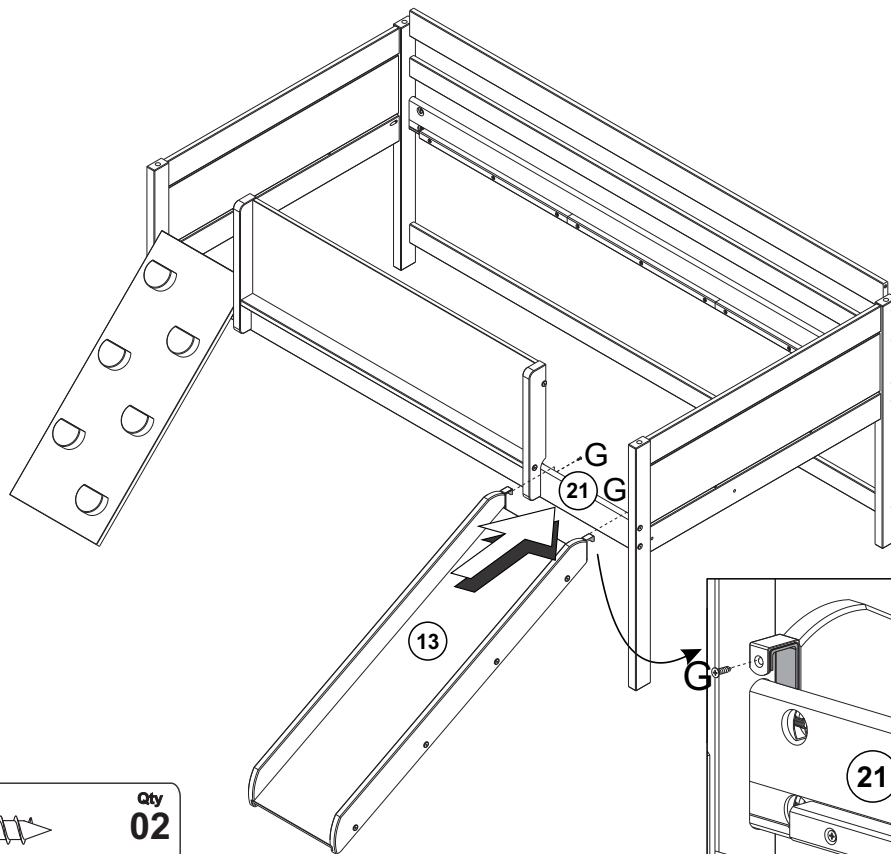

# 16



**"PLEASE INSTALL SLAT KIT WITH  
THE SPACER TAPE ON TOP  
(FACING UP)"**

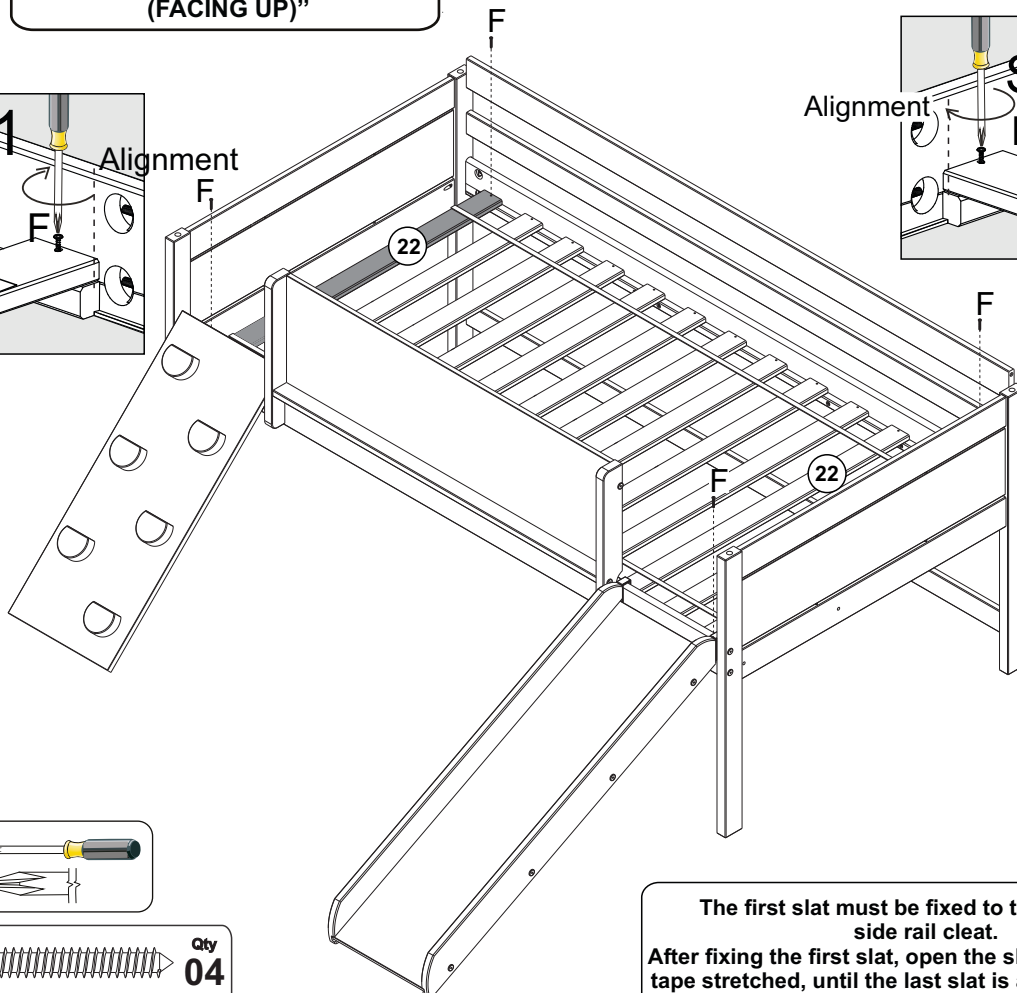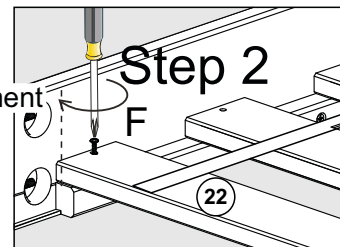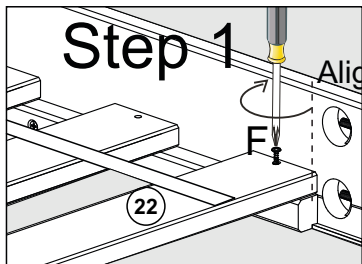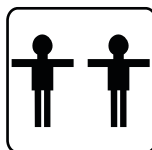

**The first slat must be fixed to the end of the  
side rail cleat.  
After fixing the first slat, open the slat set, leaving the  
tape stretched, until the last slat is aligned at the end  
of the side rail cleat.**



# 17

## IMPORTANT NOTE



Please note warping may occur because it is natural wood.

To facilitate the placement of the screws, you must press the two side rails simultaneously.

We suggest 2 people in this step to make it easier the placement of the screws.


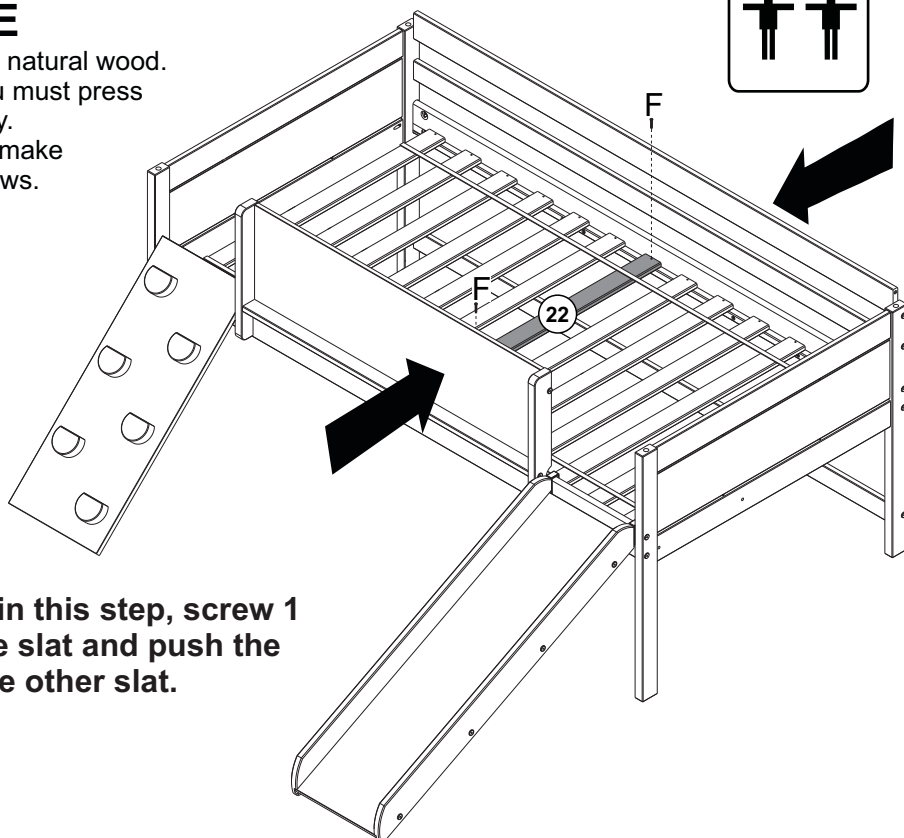
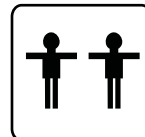


If you are alone in this step, screw 1 slat first, pull the slat and push the side rail to fix the other slat.



1 3/16" Screw





# 18

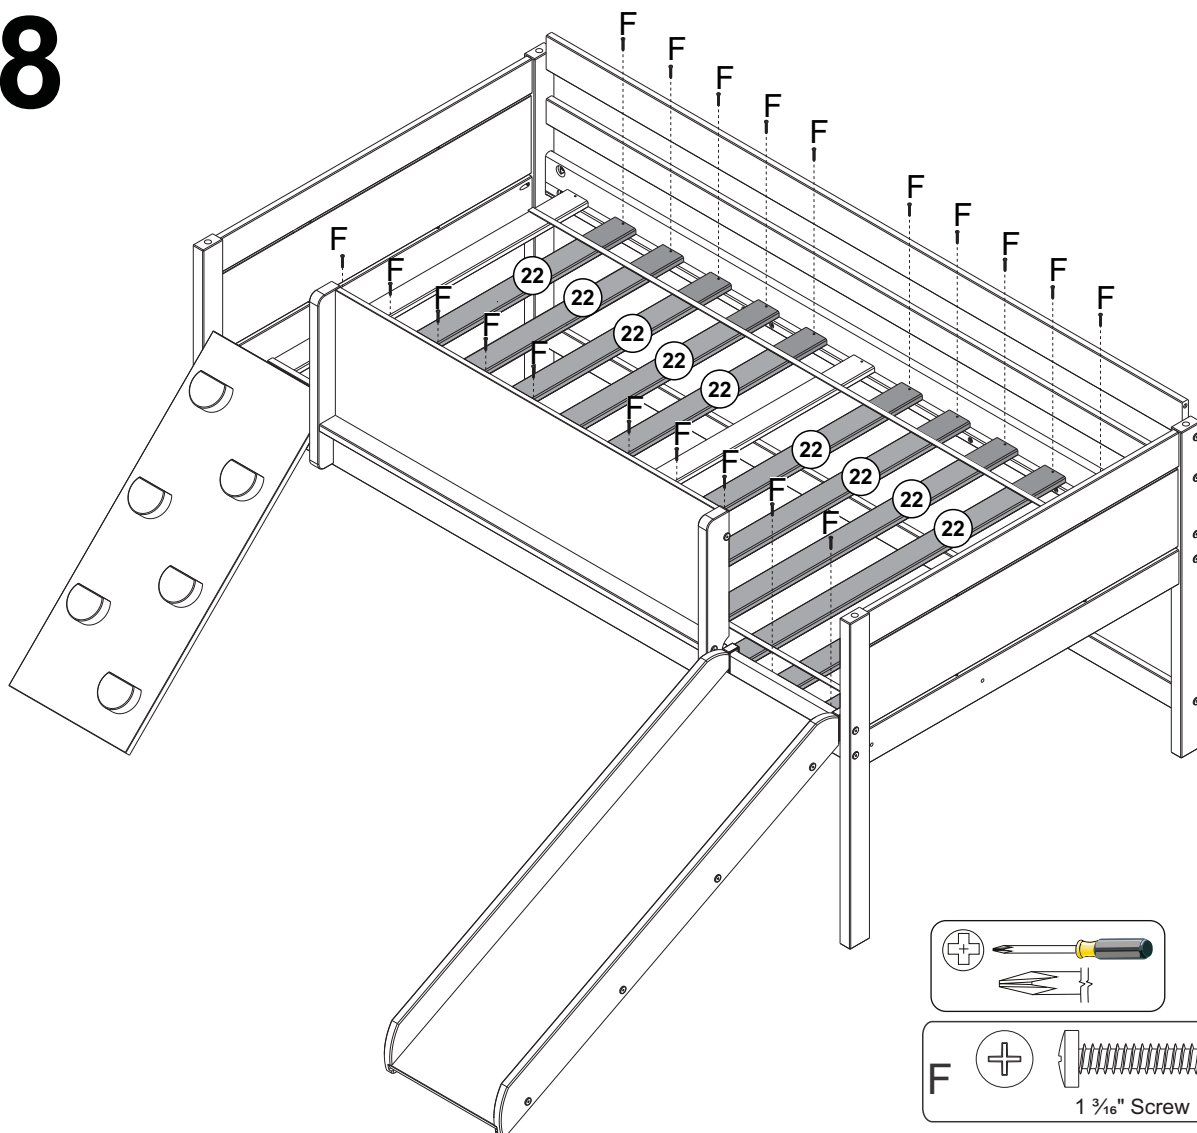




1 3/16" Screw

# 18A

PLEASE USE THE WOOD SPACER LETTER M TO CHECK THE DISTANCE BETWEEN EACH SLAT.  
 THE SPACE BETWEEN EACH SLAT CANNOT EXCEED THE SPACER SIZE (3 2/16" OR 80 MM);  
 IT CAN BE SMALLER, BUT NOT LARGER.  
 IF THE SPACER IS LARGER, PLEASE REMOVE THE SCREWS AND MAKE SURE TO REATTACH  
 THE SLATS TO ENSURE THEY DO NOT EXCEED THE SPACER SIZE.



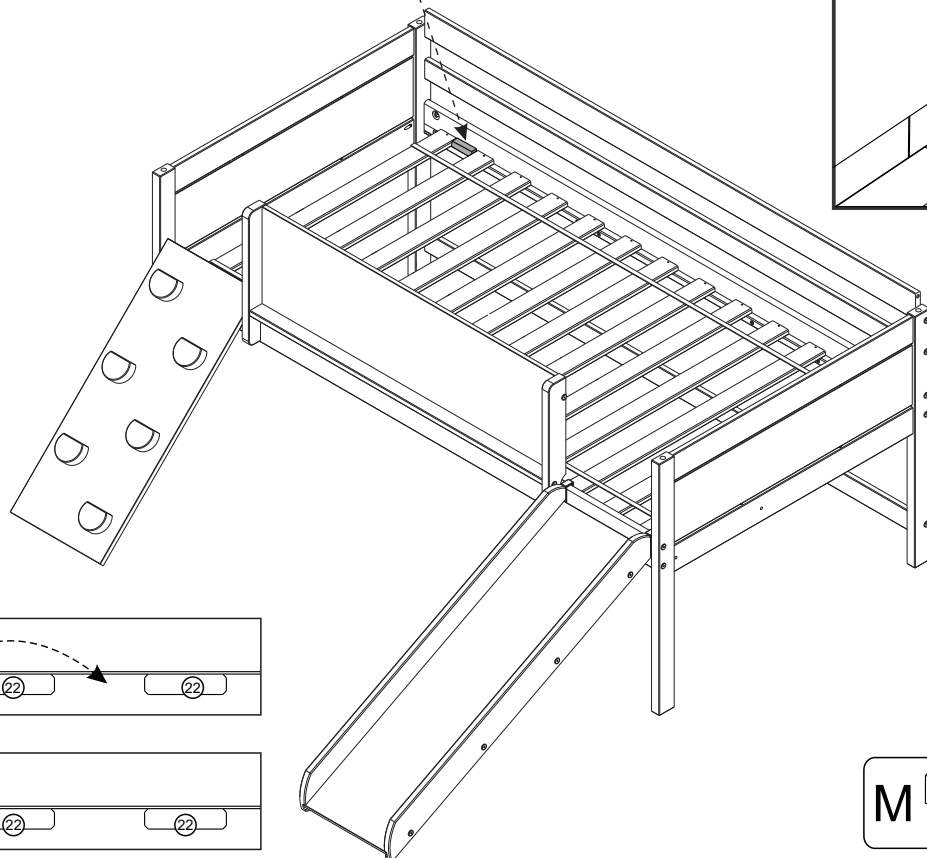


# 19




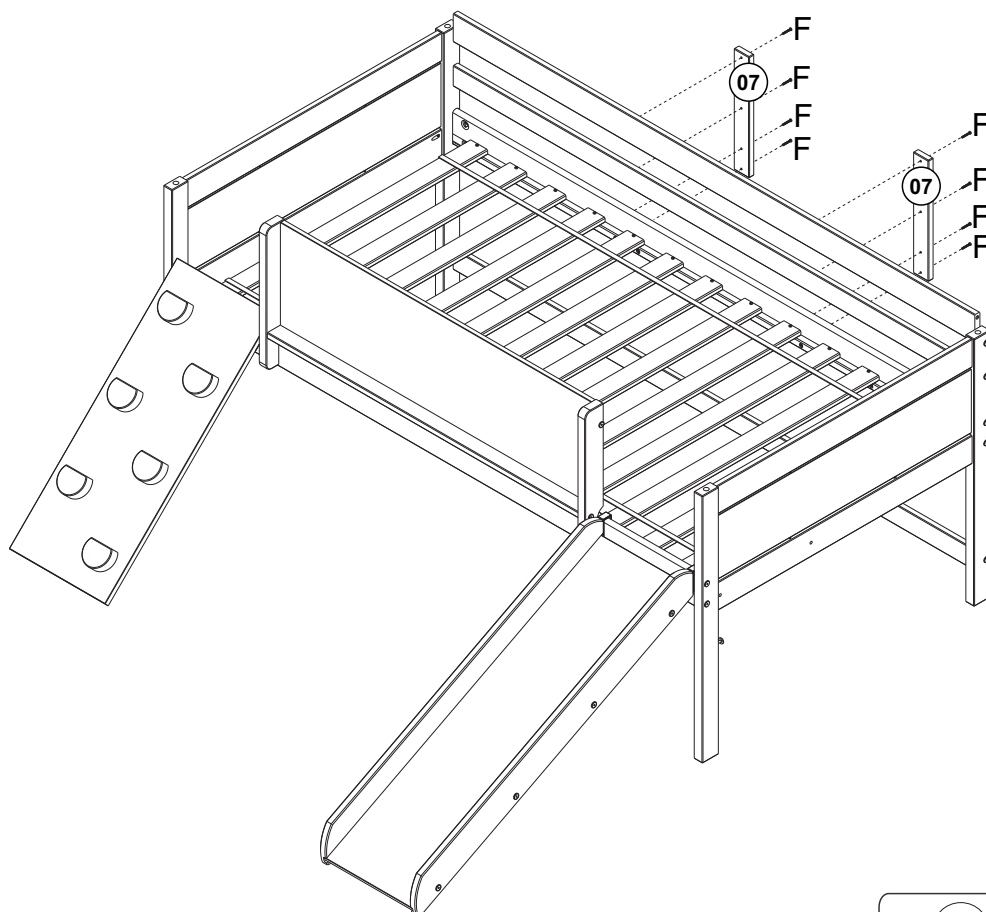




# 20 TOP BED

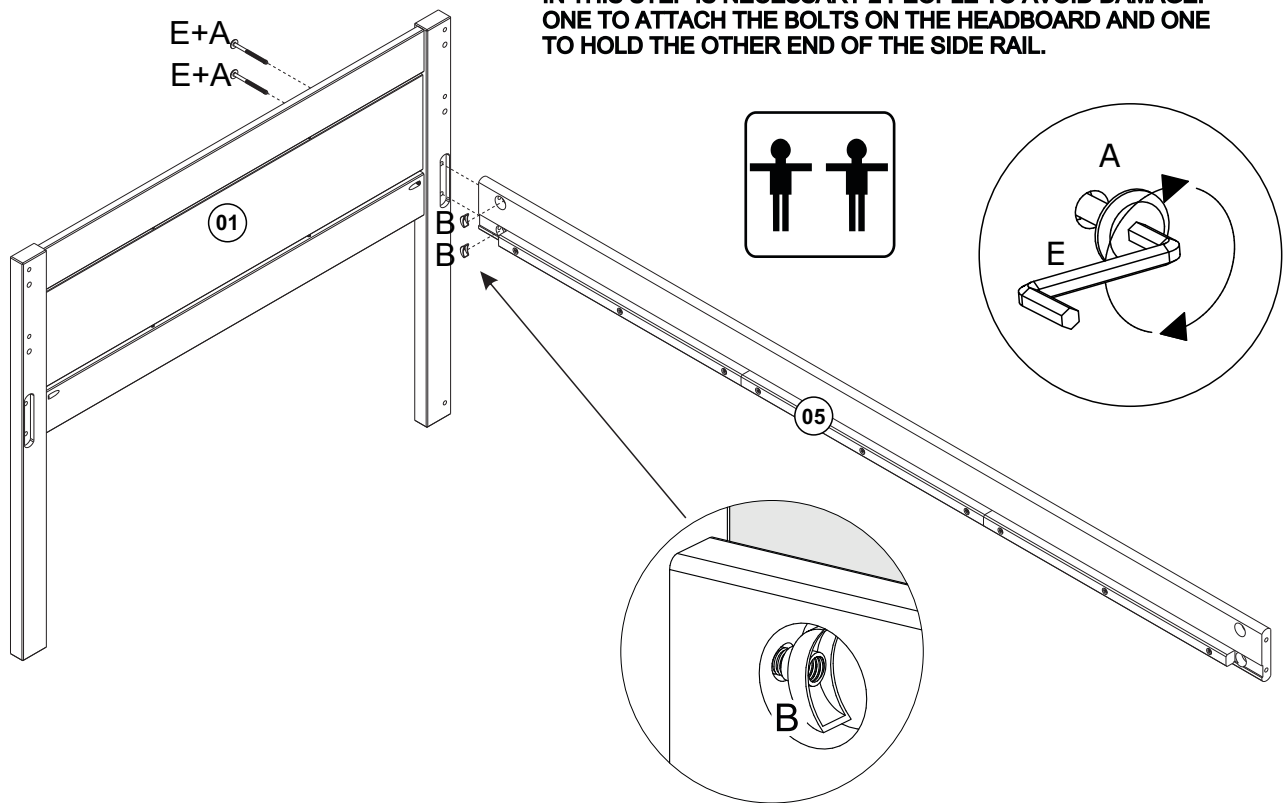


# 21

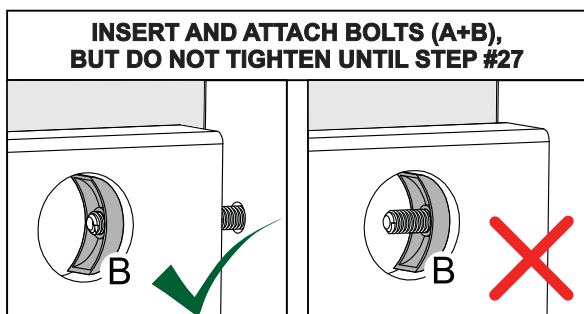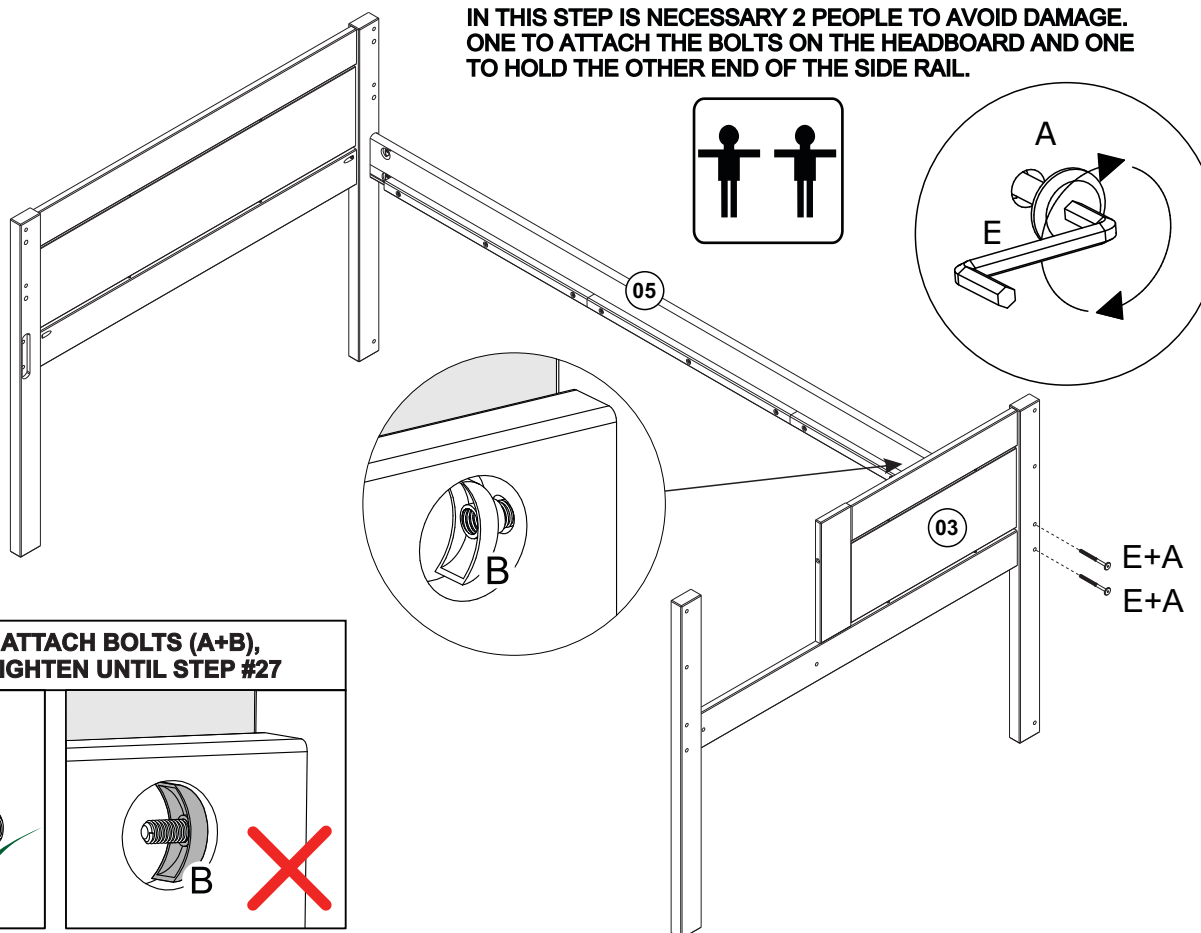

# 22

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE. ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE TO HOLD THE OTHER END OF THE SIDE RAIL.

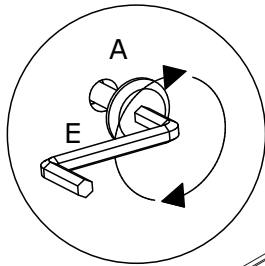

E+A  
E+A

01

B  
B

Gently move away the headboard and footboard to fit the side rail.

05



B

03


B

E+A  
E+A

INSERT AND ATTACH BOLTS (A+B), BUT DO NOT TIGHTEN UNTIL STEP #27

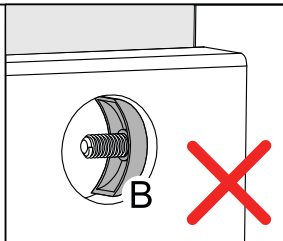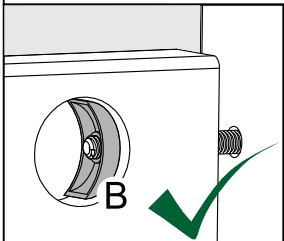


A



1/4"x 4" Bolt

Qty  
04

E



Allen wrench

Qty  
01

B



1/4"  
Elliptical  
Nut

Qty  
04

# 23

H

06

(x4)


H

H



1 9/16" Wooden Dowel

Qty  
08

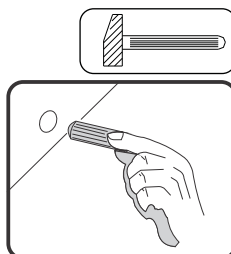


# 24



E+D

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.  
ONE TO ATTACH THE BOLTS THE GUARDRAIL AND ONE  
TO HOLD THE OTHER END OF THE GUARDRAIL.

Gently move away the  
headboard and footboard  
to fit the guardrail

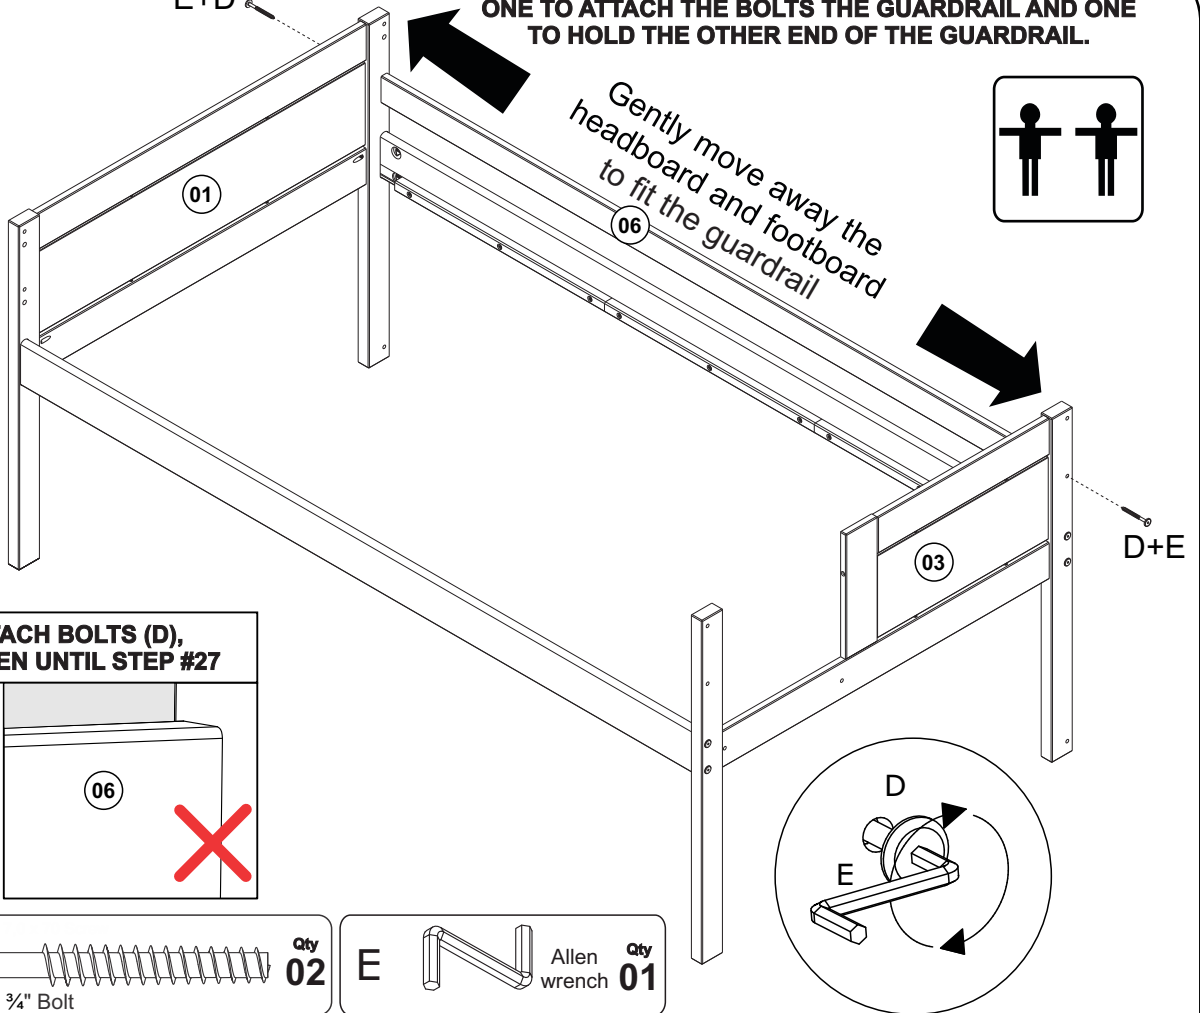

INSERT AND ATTACH BOLTS (D),  
BUT DO NOT TIGHTEN UNTIL STEP #27

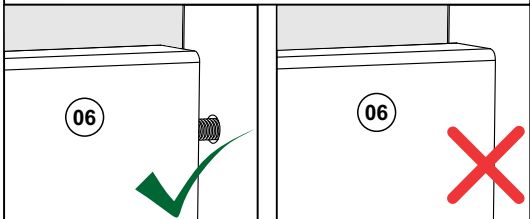


# 25




E+D

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.  
ONE TO ATTACH THE BOLTS THE GUARDRAIL AND ONE  
TO HOLD THE OTHER END OF THE GUARDRAIL.

Gently move away the  
headboard and footboard  
to fit the guardrail



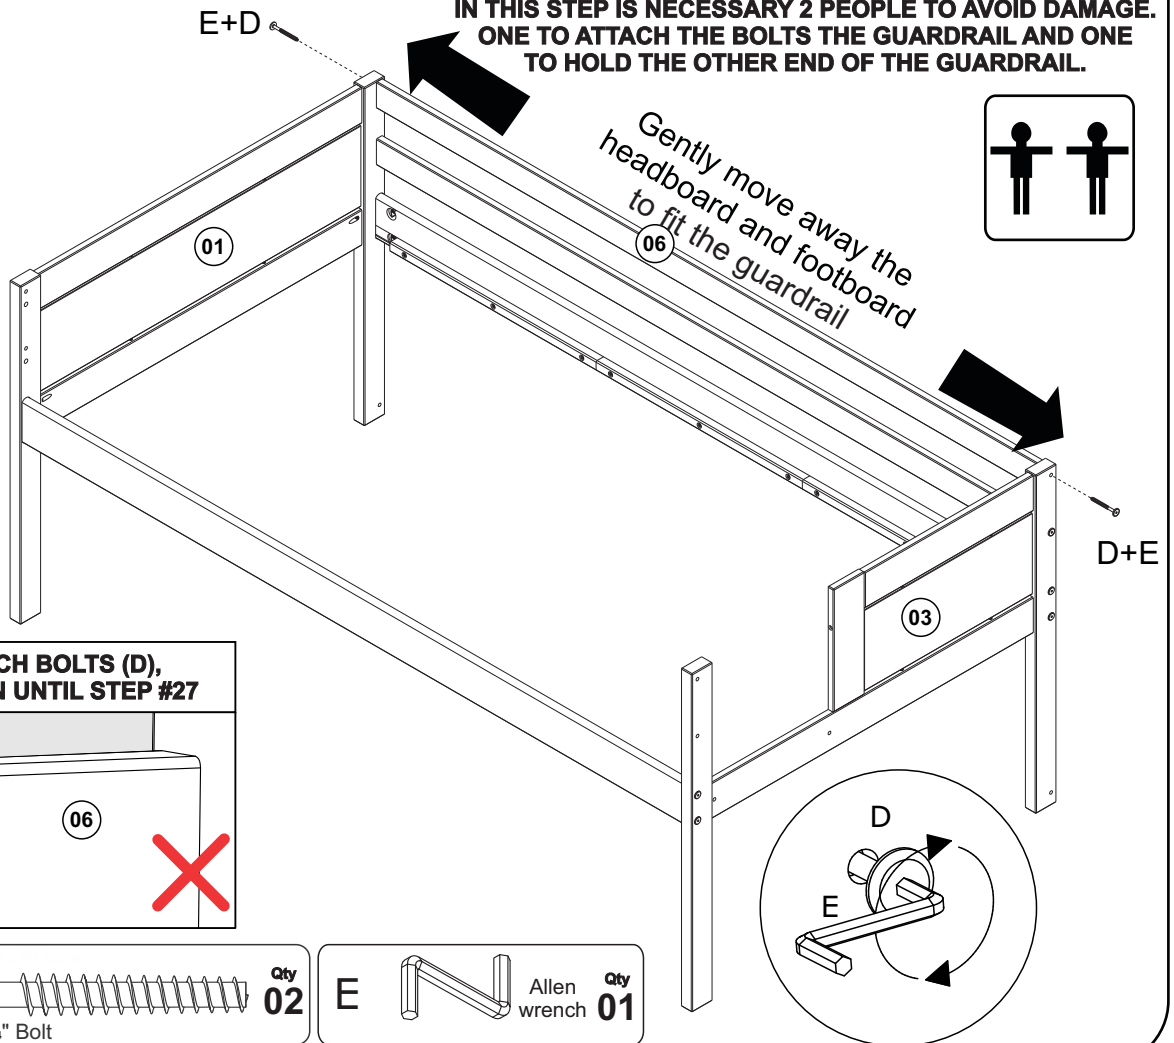


INSERT AND ATTACH BOLTS (D),  
BUT DO NOT TIGHTEN UNTIL STEP #27



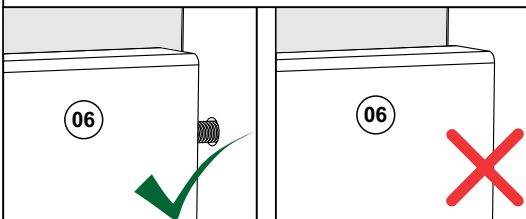


# 26

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.  
ONE TO ATTACH THE BOLTS THE GUARDRAIL AND ONE  
TO HOLD THE OTHER END OF THE GUARDRAIL.

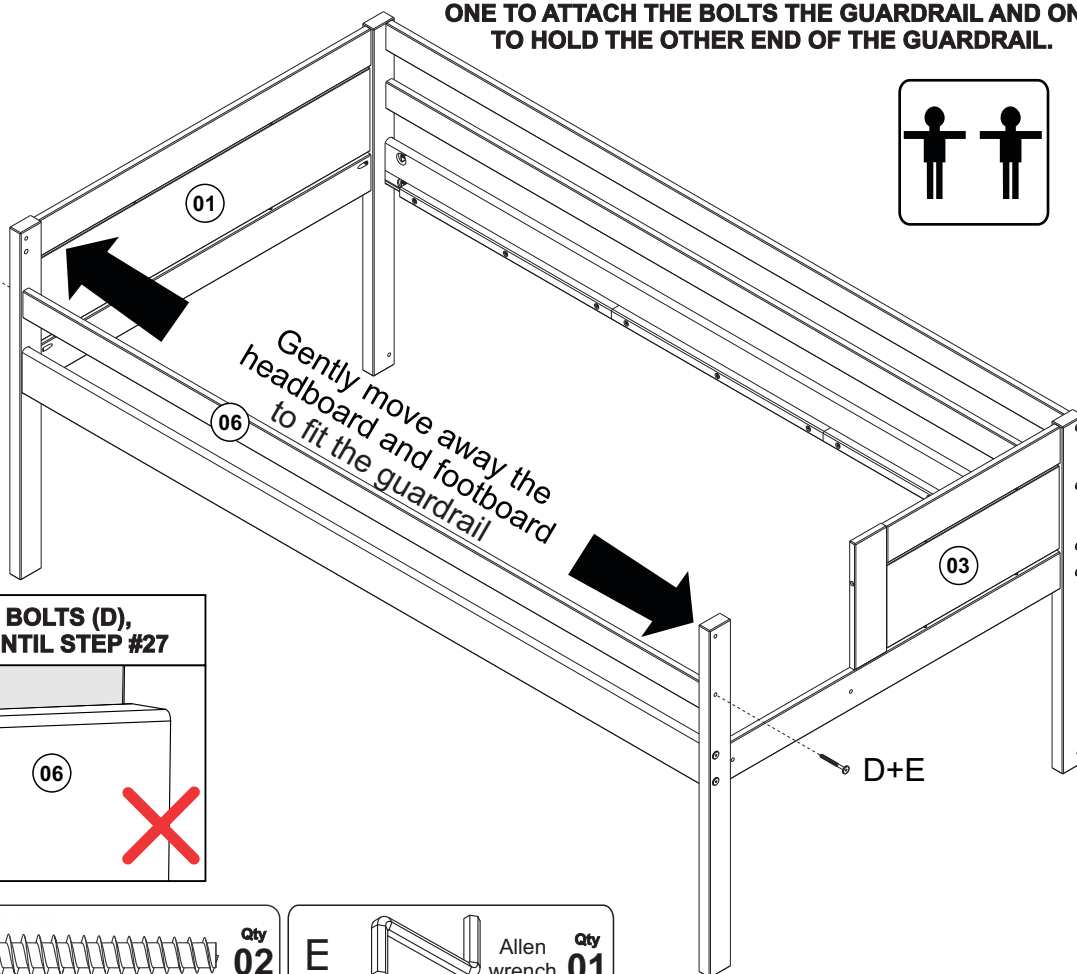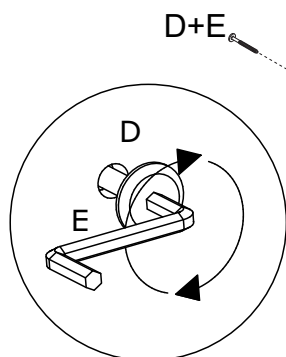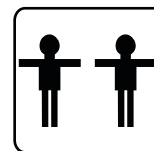


INSERT AND ATTACH BOLTS (D),  
BUT DO NOT TIGHTEN UNTIL STEP #27


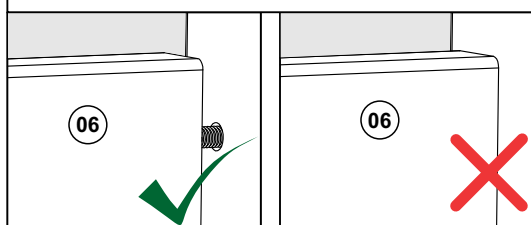


# 27



IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.  
ONE TO ATTACH THE BOLTS THE GUARDRAIL AND ONE  
TO HOLD THE OTHER END OF THE GUARDRAIL.

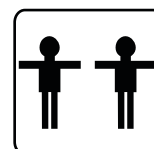

D+E

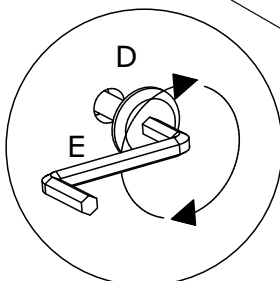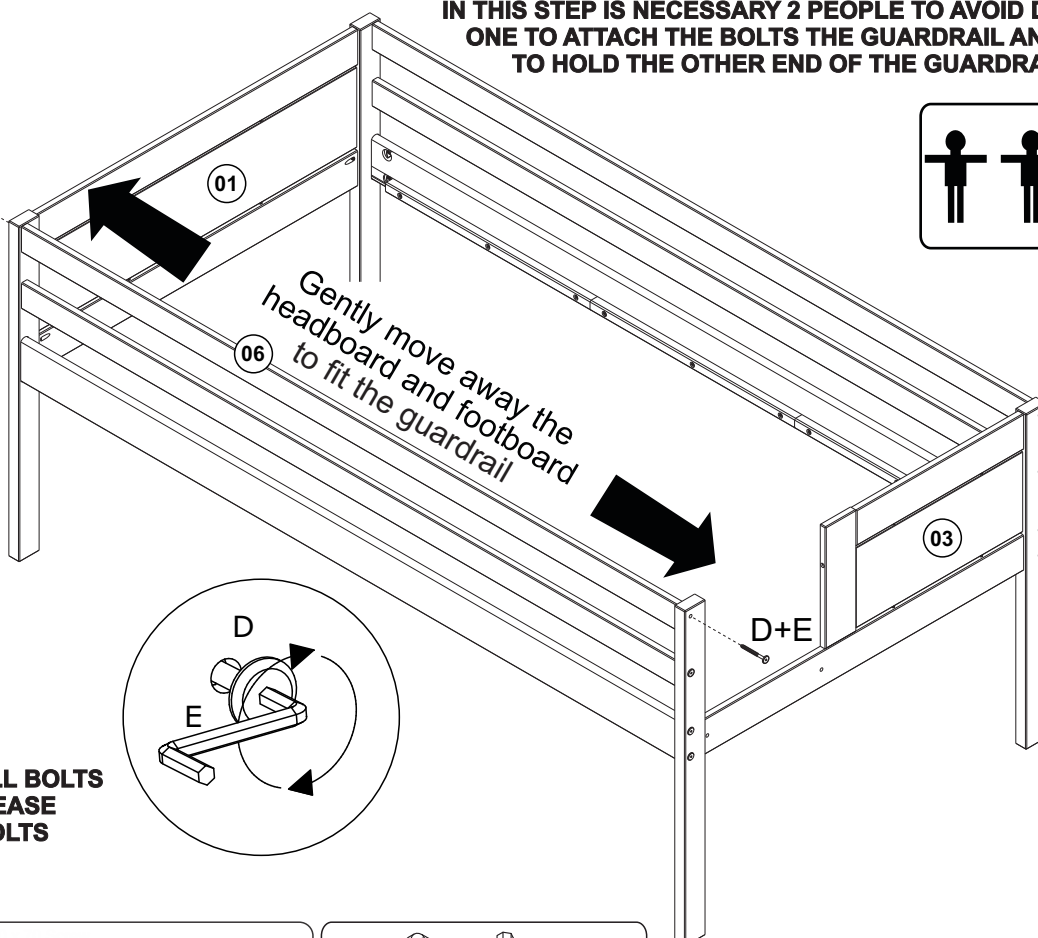







AFTER ATTACHED ALL BOLTS  
AT THIS TIME PLEASE  
TIGHTEN ALL BOLTS



# 28



If you are alone in this step, screw 1 slat first, pull the slat and push the side rail to fix the other slat.

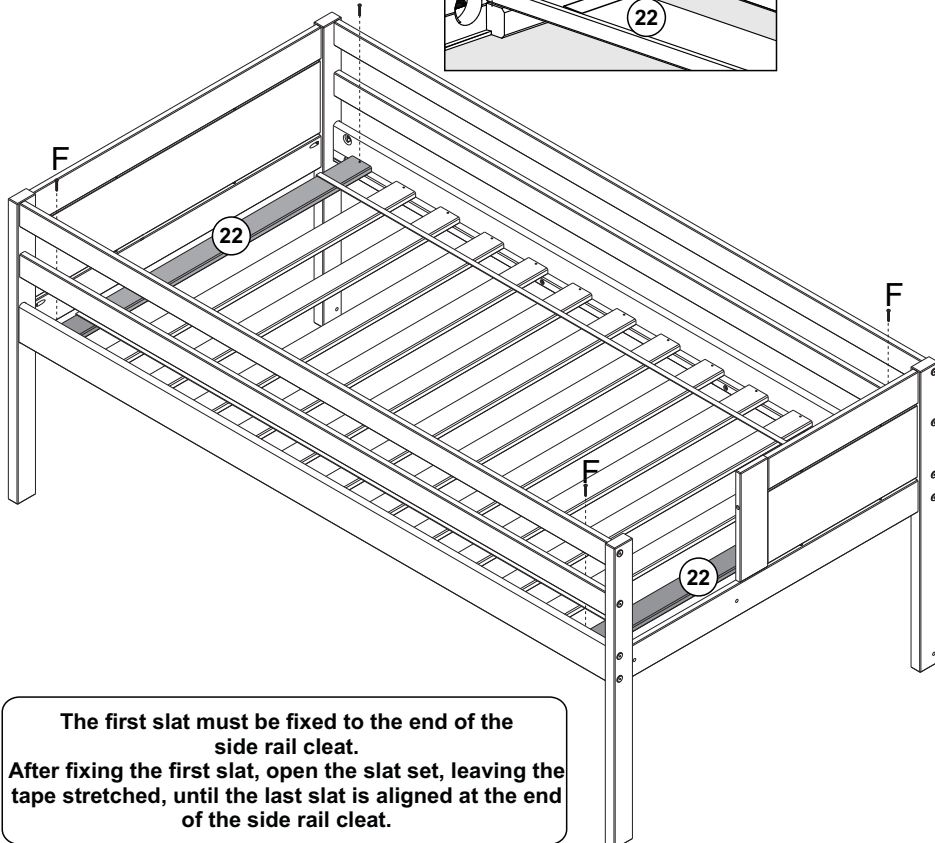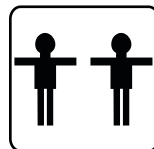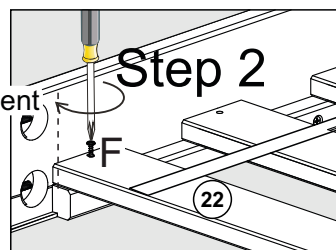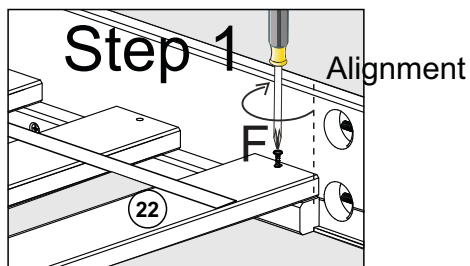

The first slat must be fixed to the end of the side rail cleat.  
After fixing the first slat, open the slat set, leaving the tape stretched, until the last slat is aligned at the end of the side rail cleat.





# 29

## IMPORTANT NOTE

Please note warping may occur because it is natural wood.

To facilitate the placement of the screws, you must press the two side rails simultaneously.




We suggest 2 people in this step to make it easier the placement of the screws.

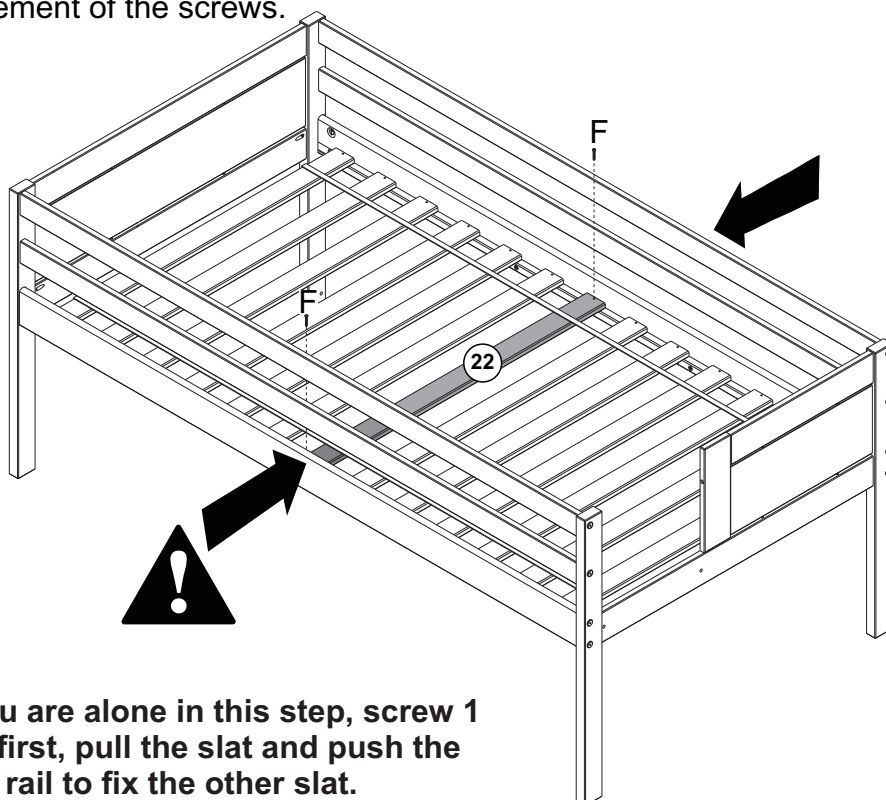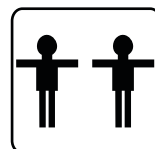

If you are alone in this step, screw 1 slat first, pull the slat and push the side rail to fix the other slat.








# 30

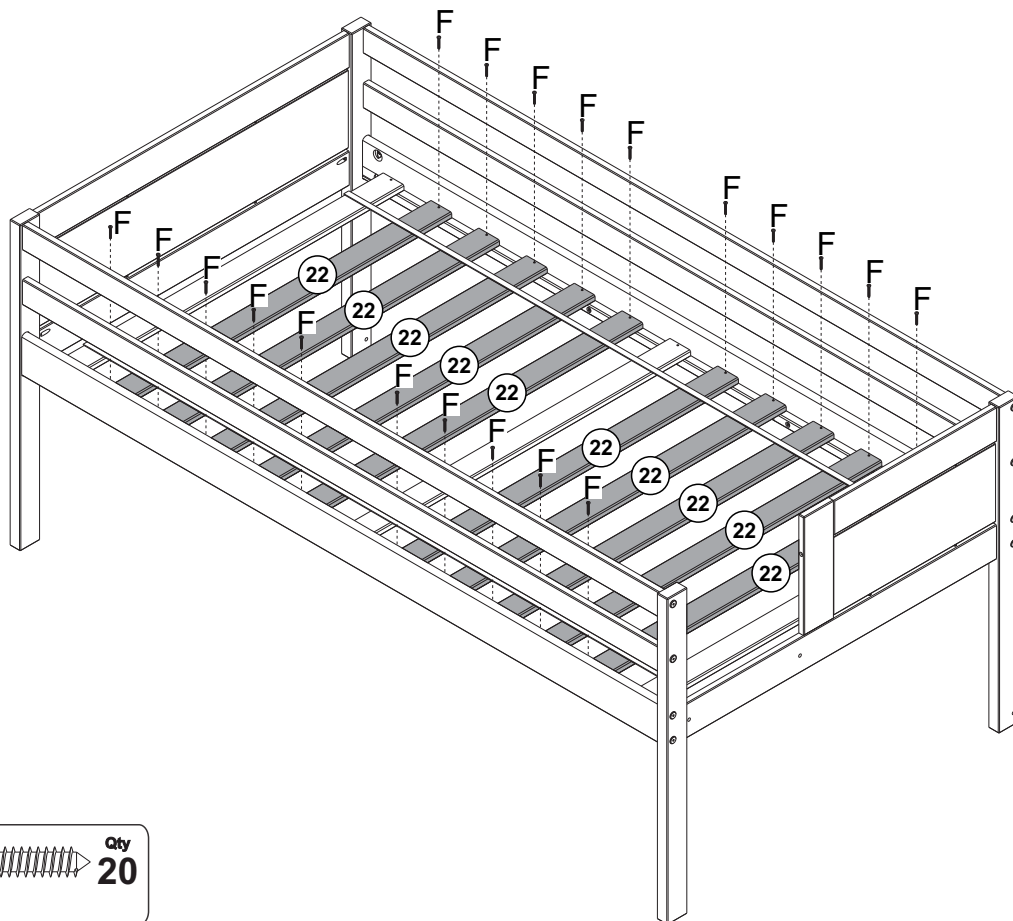




## 30A

PLEASE USE THE WOOD SPACER LETTER M TO CHECK THE DISTANCE BETWEEN EACH SLAT. THE SPACE BETWEEN EACH SLAT CANNOT EXCEED THE SPACER SIZE (3 2/16" OR 80 MM); IT CAN BE SMALLER, BUT NOT LARGER. IF THE SPACER IS LARGER, PLEASE REMOVE THE SCREWS AND MAKE SURE TO REATTACH THE SLATS TO ENSURE THEY DO NOT EXCEED THE SPACER SIZE.

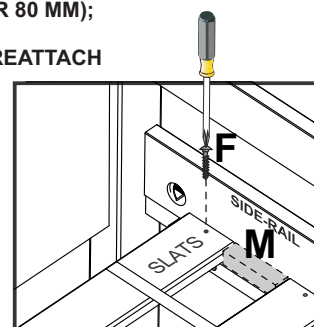
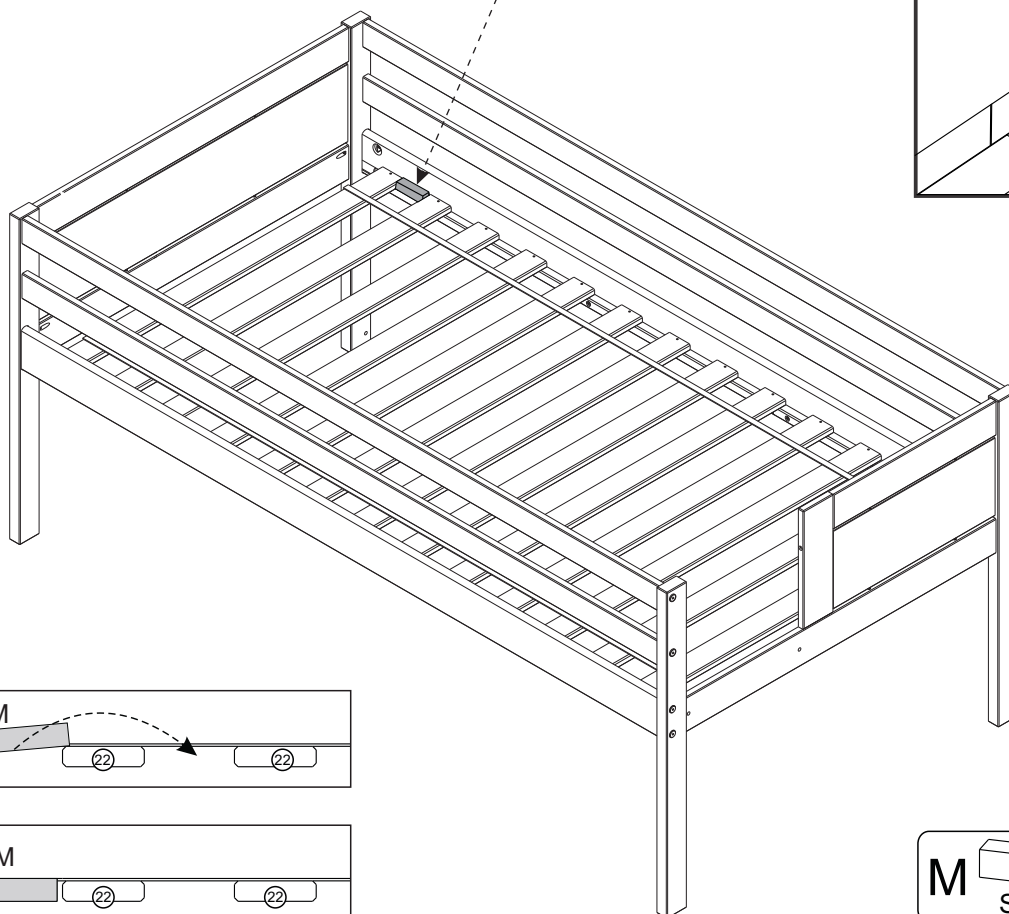




# 31

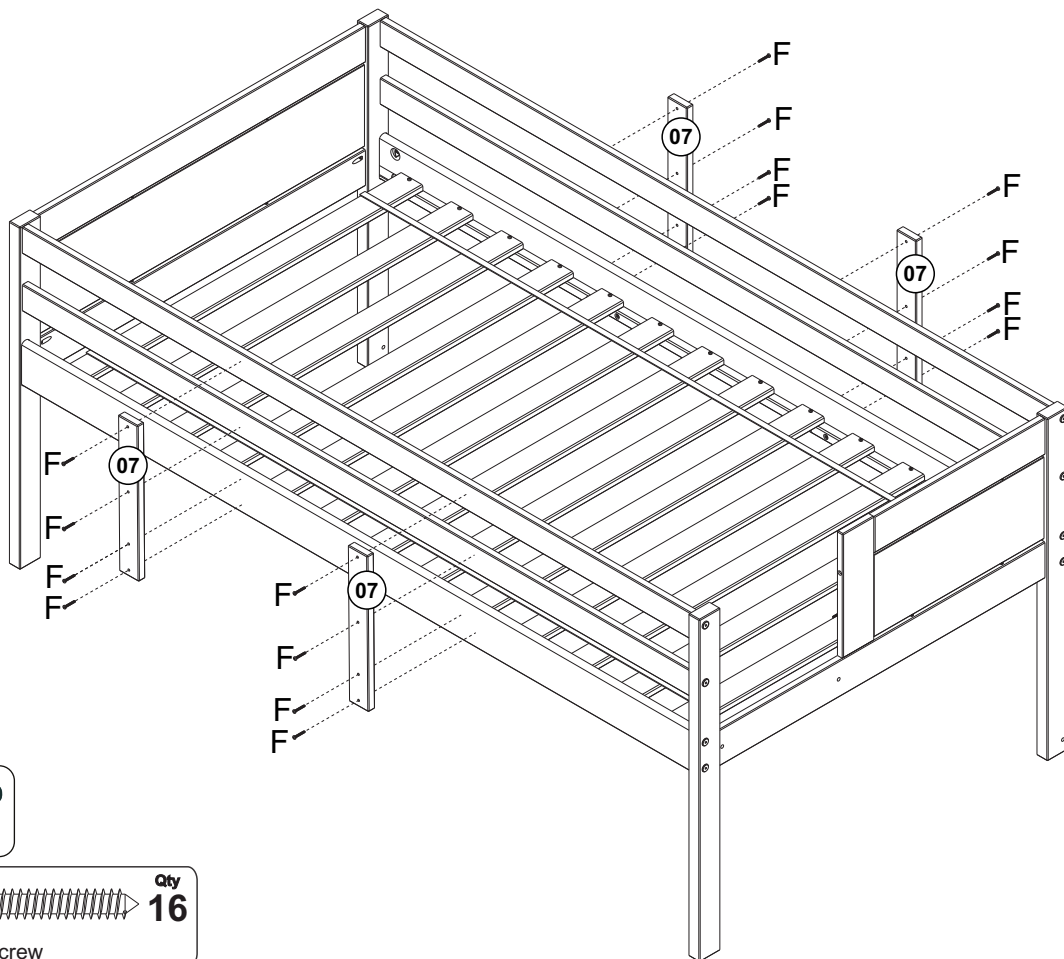


# 32

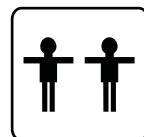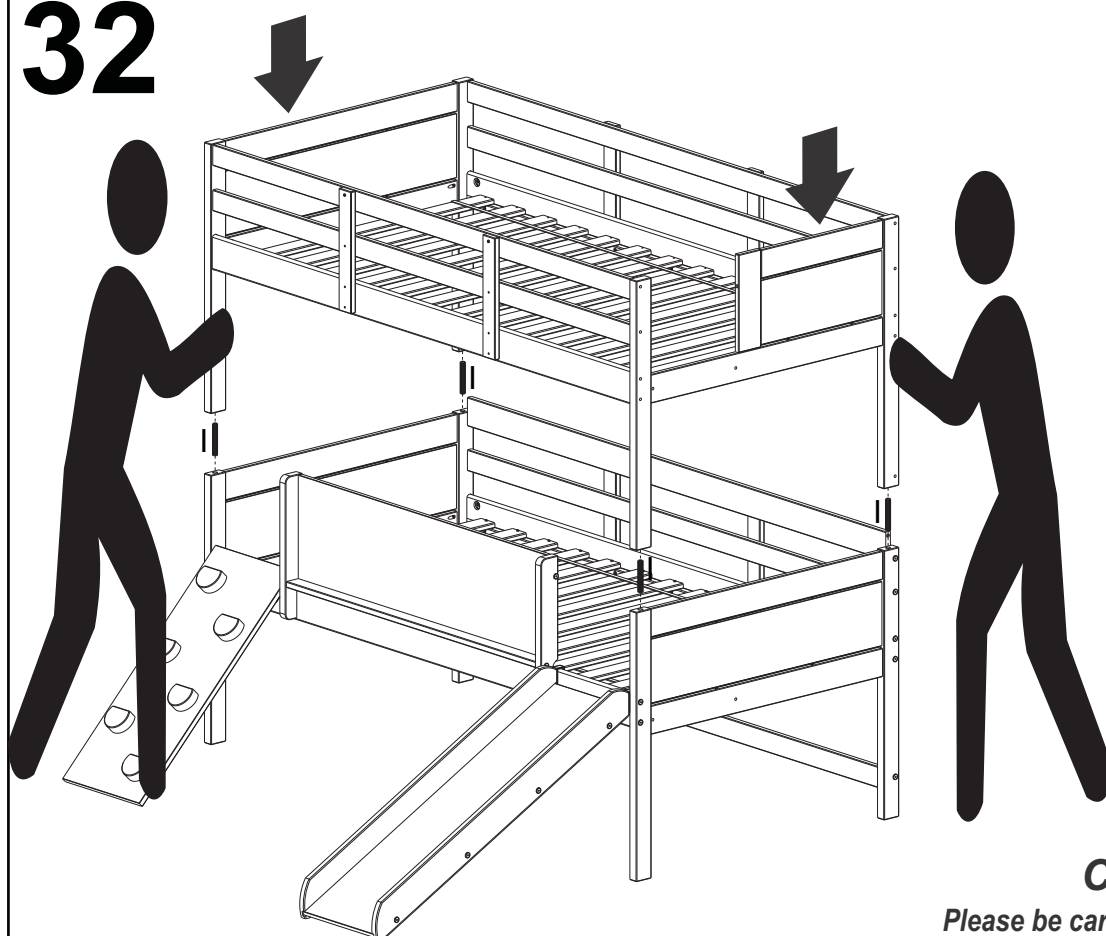



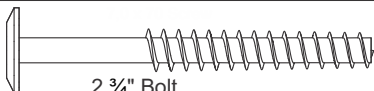
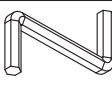
## CAUTION!

Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries!




# 33

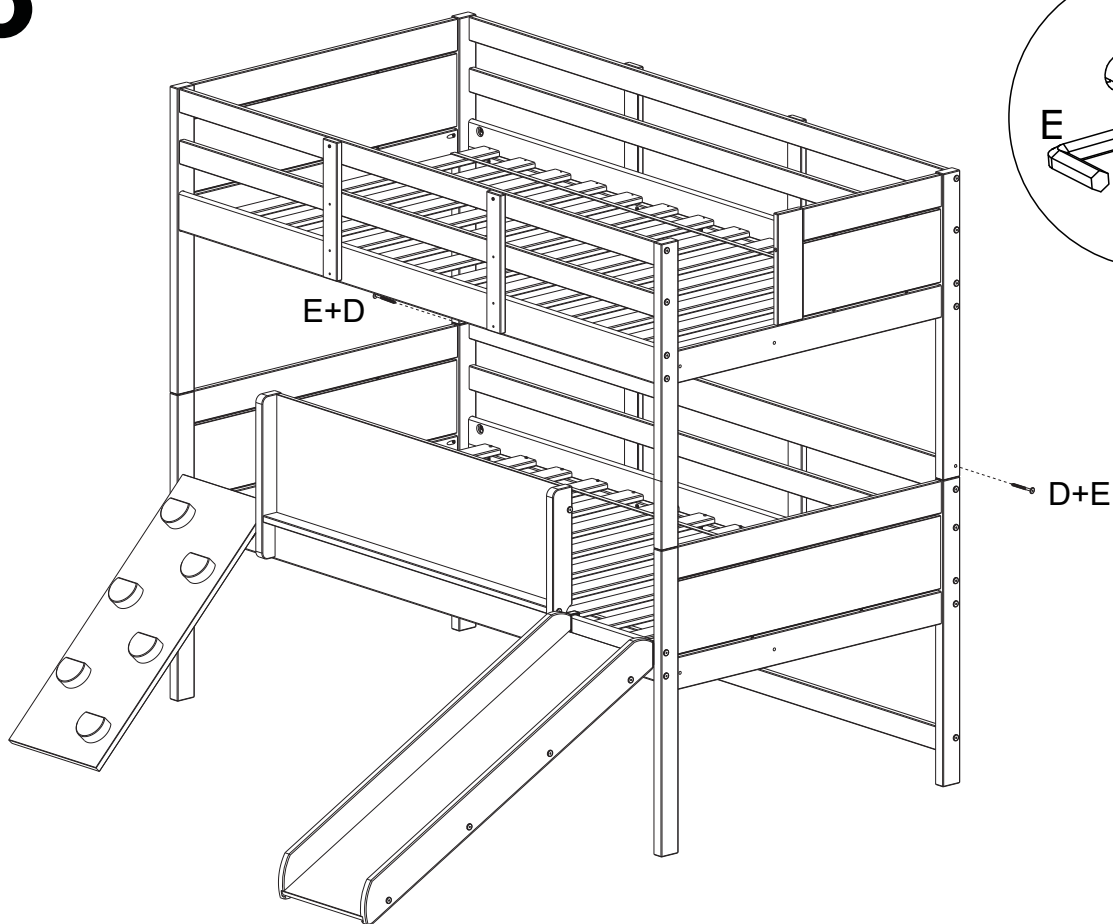


<b>D</b> 	 <b>Qty 02</b>	<b>E</b>  <b>Qty 01</b> Allen wrench
--	---	--

# 34




## LADDER

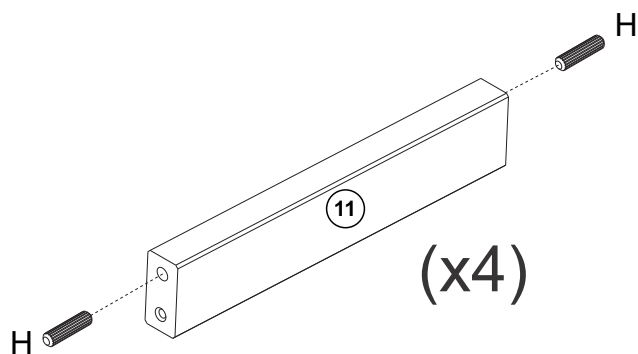


<b>H</b>  <b>Qty 08</b> 1 9/16" Wooden Dowel
--

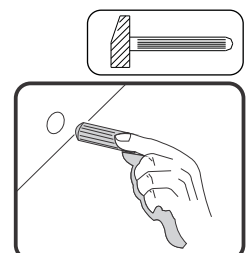





# 35

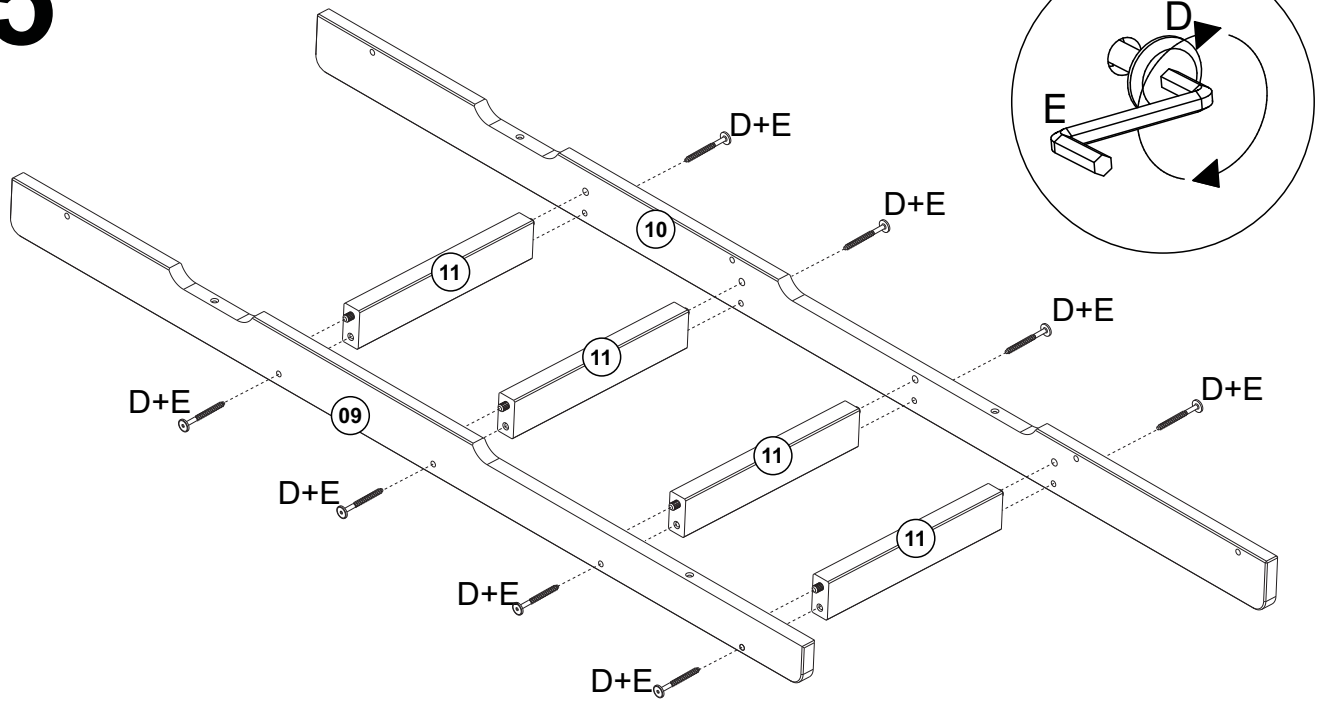

# 36

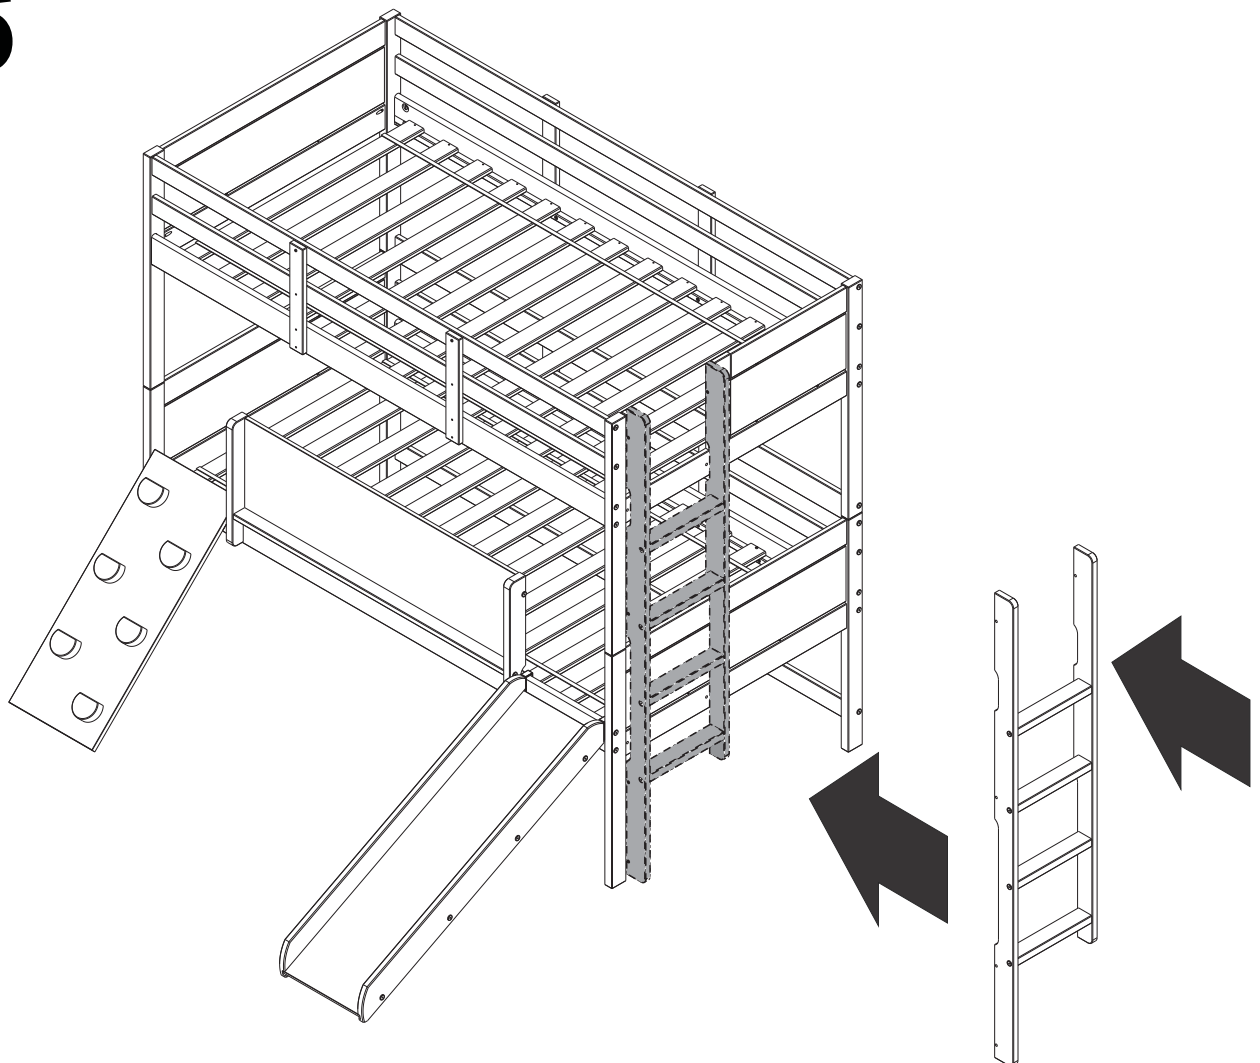

# 37

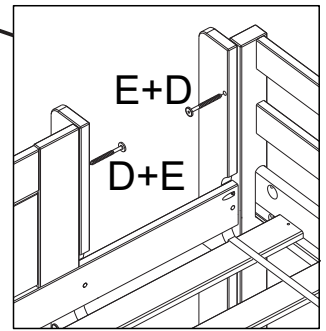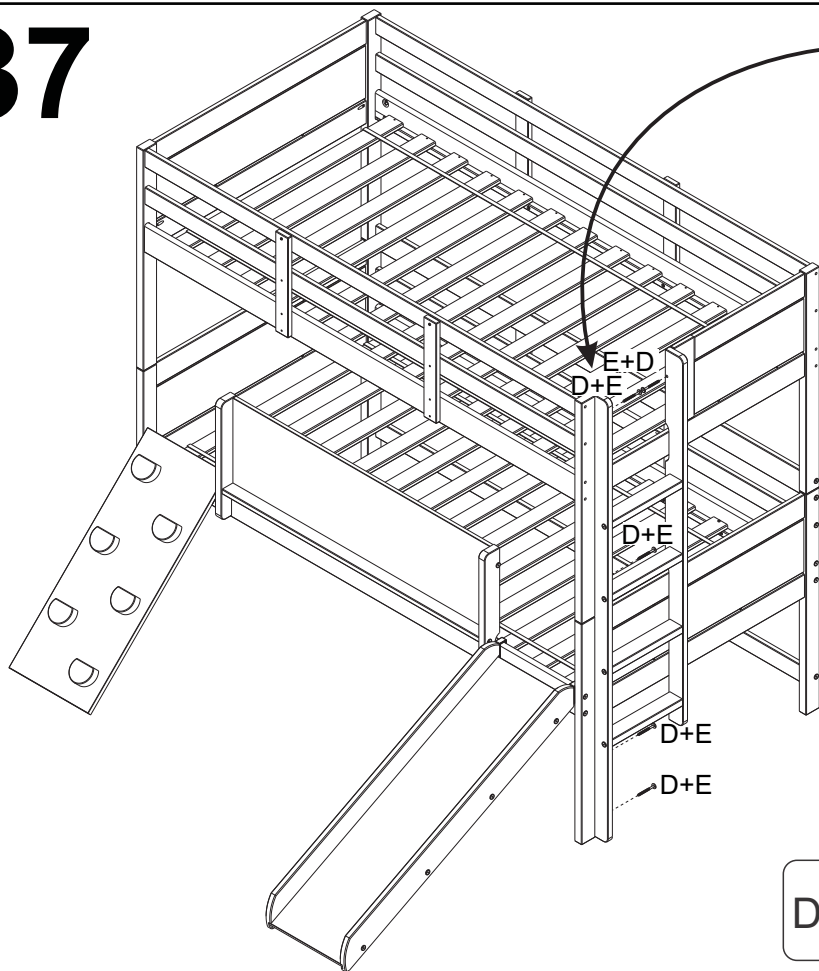

# 38

