

# About the Wood and Finish

This product has been carefully crafted of: MDF, solid pine wood and/or pine veneers. These materials derive from plantations, a renewable and well managed forest, therefore, not endangering the environment. The highest quality standards have been implemented to assure a sturdy and reliable product. Due to the natural variances in the


graining of wood, you may notice subtle differences in the shading and tone of the color stain, warp, holes, wood knots and also small cracks. This is not a defect. But rather a result of the natural beauty of the wood itself.

## Care and maintenance:

Dust when needed using a smooth, dry cloth. Household furniture polish can be used occasionally to restore luster.






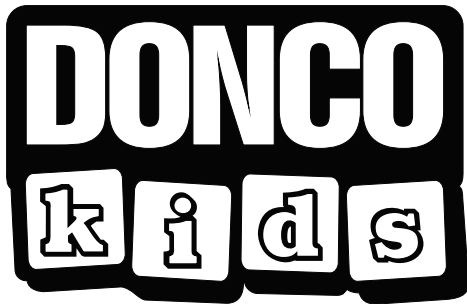

Fort Worth, Texas 76140

## ASSEMBLY INSTRUCTIONS


### 7600 6 DRAWERS DRESSER

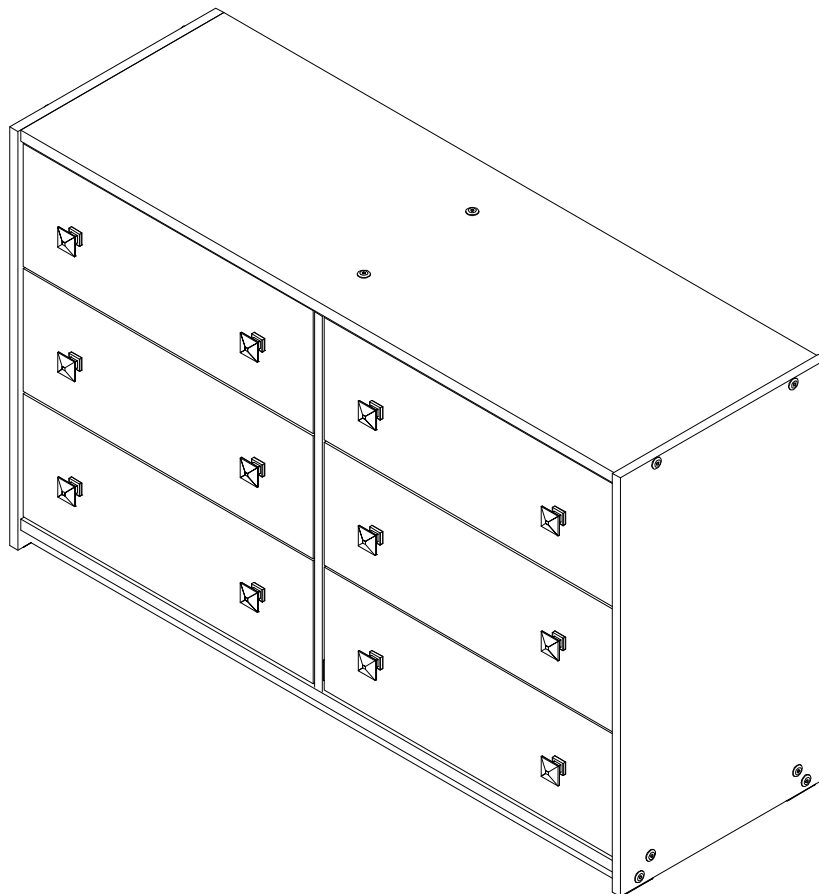

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

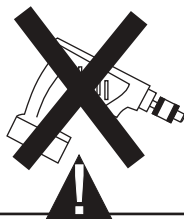


\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.




+

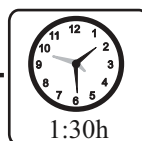

#### Tools Required



(Not included)




(Not included)

#### IMPORTANT:


**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

Part List - 7600 6 DRAWERS DRESSER

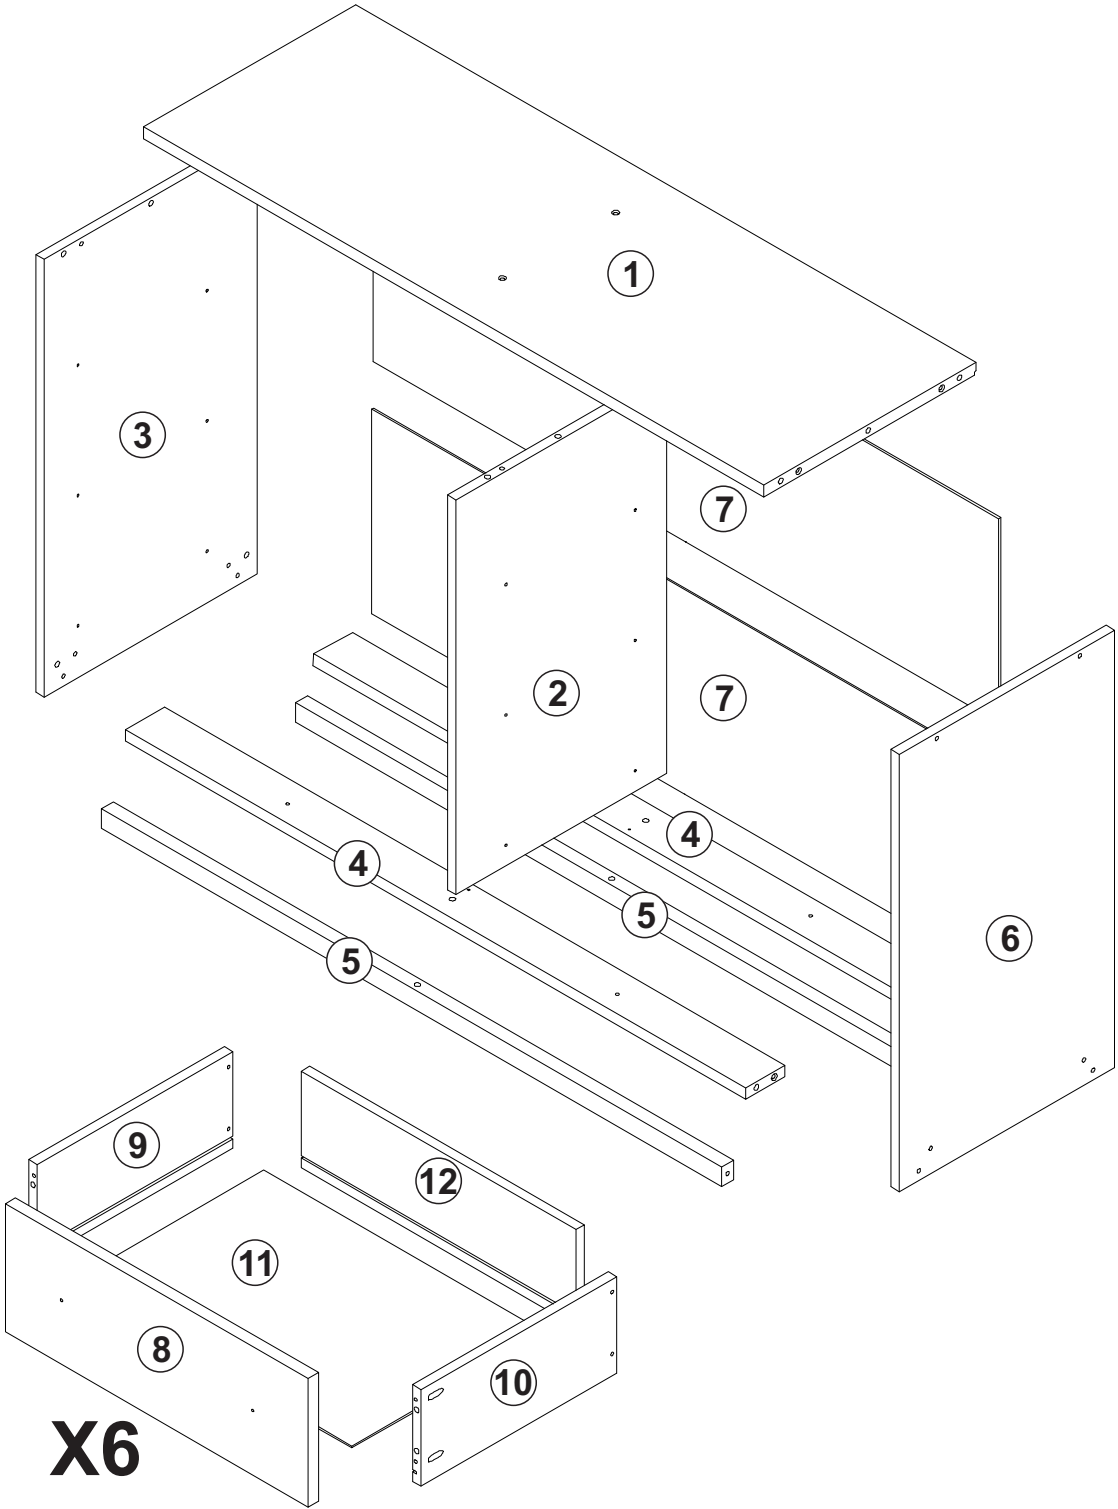

## Identifying the Hardware-Identify the hardware using the illustrations below.


A



1 3/16" Wood Dowel

Qty  
**39**


B

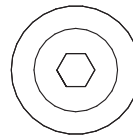

2" Screw

Qty  
**20**

C



1 3/16" Screw

Qty  
**54**

D



3/8" Screw

Qty  
**36**


E



1/4" Screw

Qty  
**12**


F

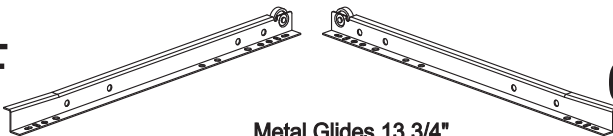

Metal Glides 13 3/4"

Qty  
**06**

G

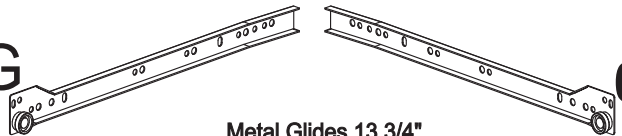

Metal Glides 13 3/4"

Qty  
**06**


H



1" Screw

Qty  
**12**

I

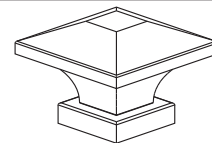

Metal Knob

Qty  
**12**


J



Plastic Foot

Qty  
**06**


K



0 7/8"


Qty  
**28**

L



Qty  
**01**


M



Hex  
Screwdriver

Qty  
**01**


# 01

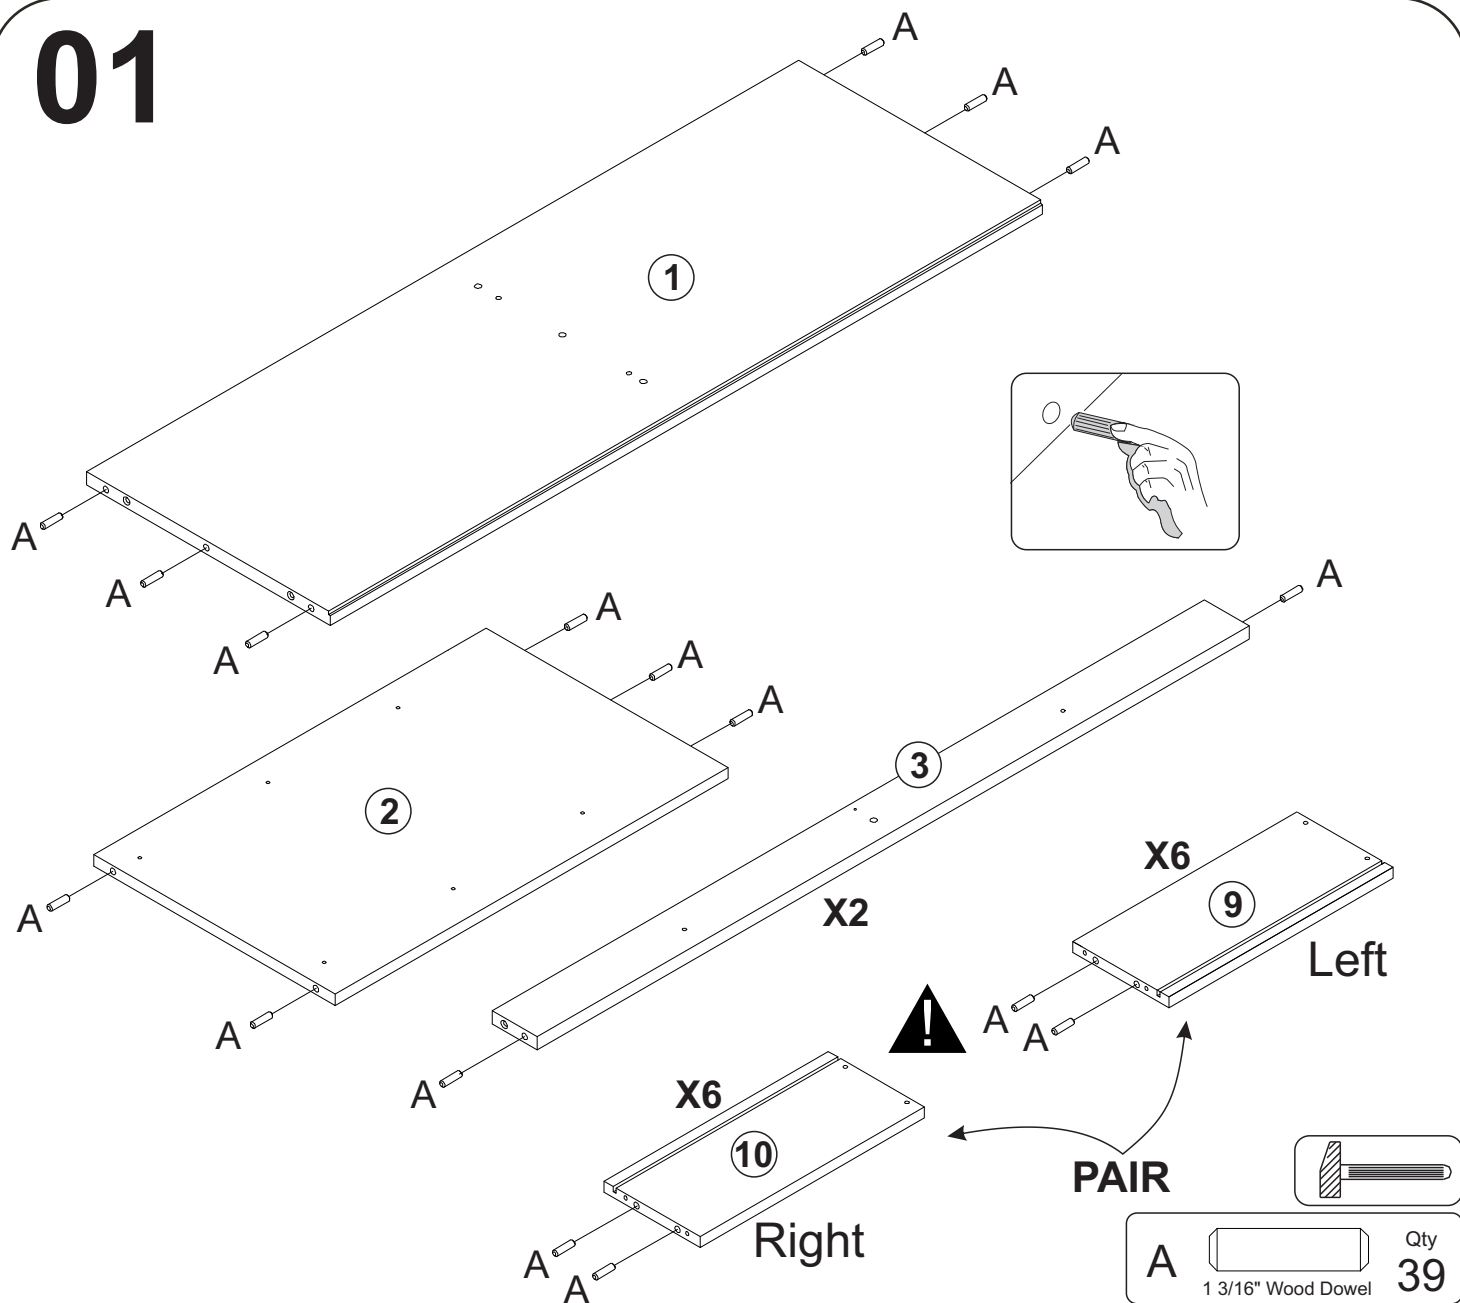


## SET OF METAL GLIDES FOR THE DRAWERS

The metal glides hardware are all in one packed. Please separate the left and right pieces like a pair.


- The glides **#G** are used on chest panel side and has a left and middle pieces.
- The glides **#F** are used on drawers side, also has a left and right pieces.

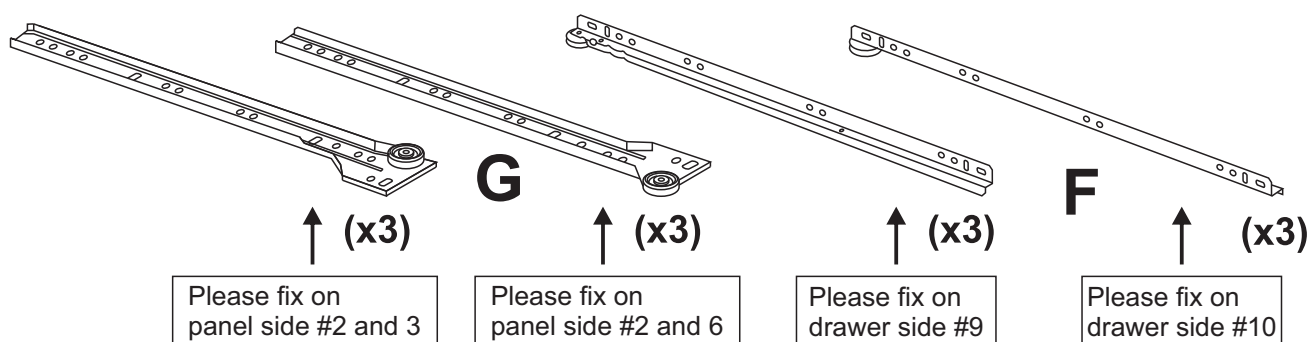





# 02

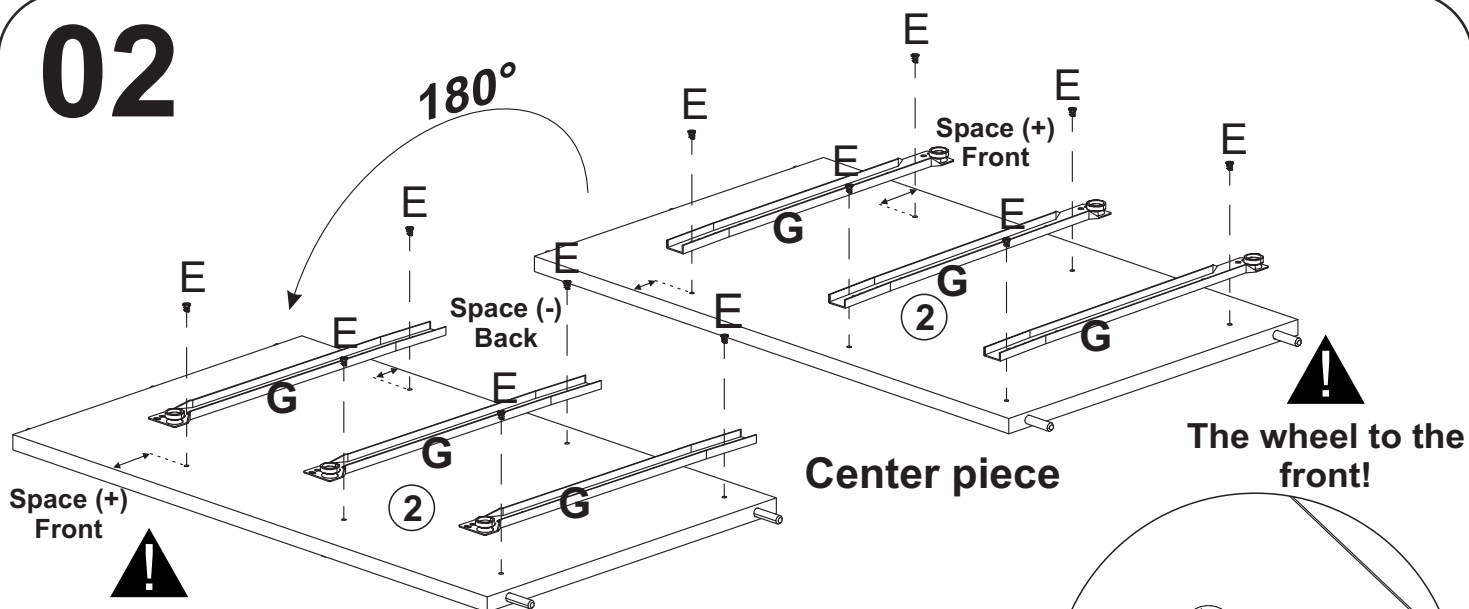


! The wheel to the front!

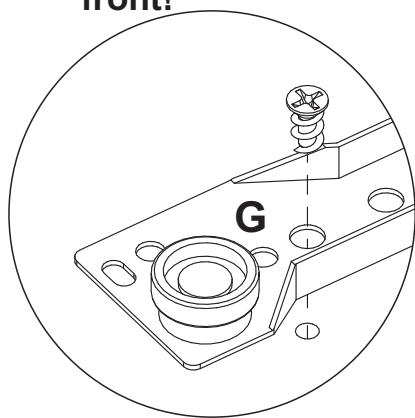

PRE DRILLED HOLES

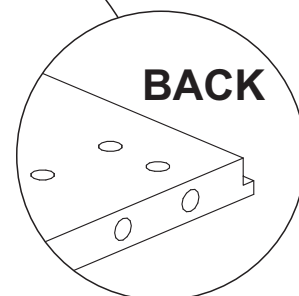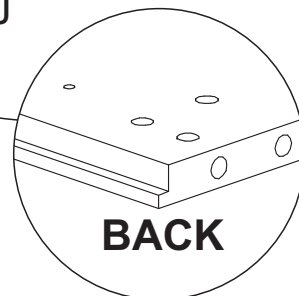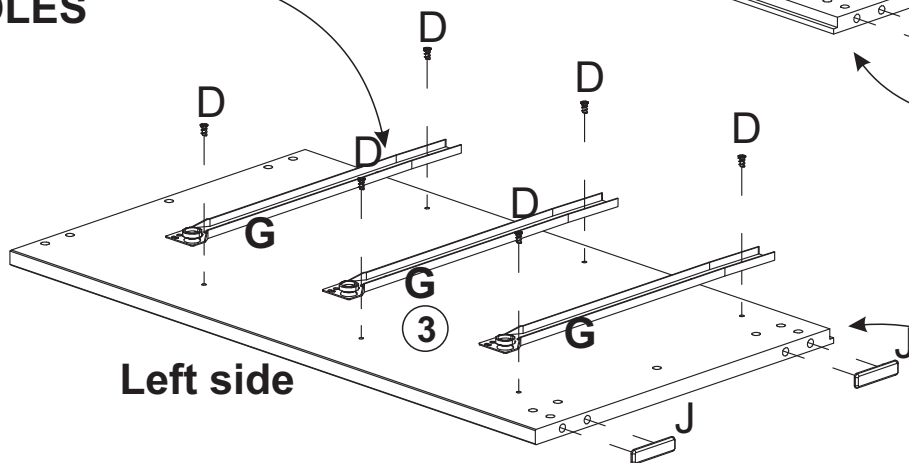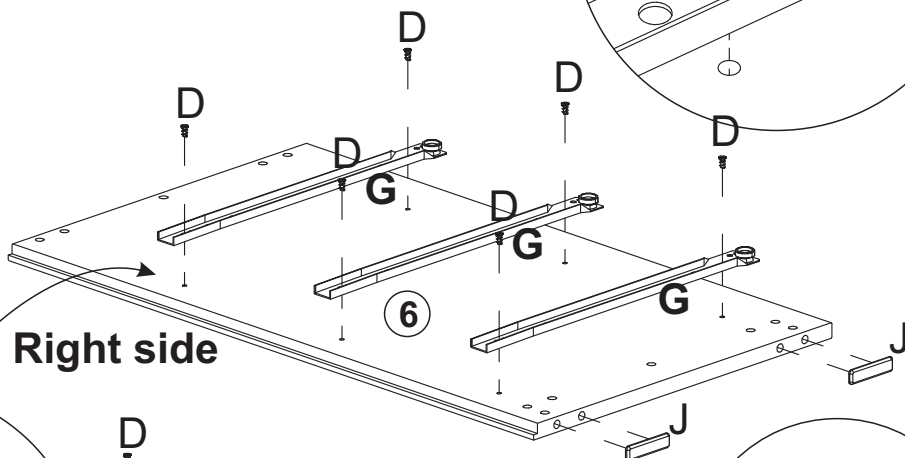

D



Qty  
12

E




Qty  
12

G






Qty  
06

J




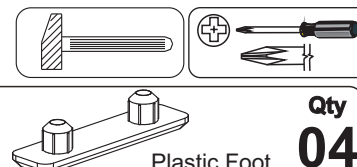


Qty  
04







# 03

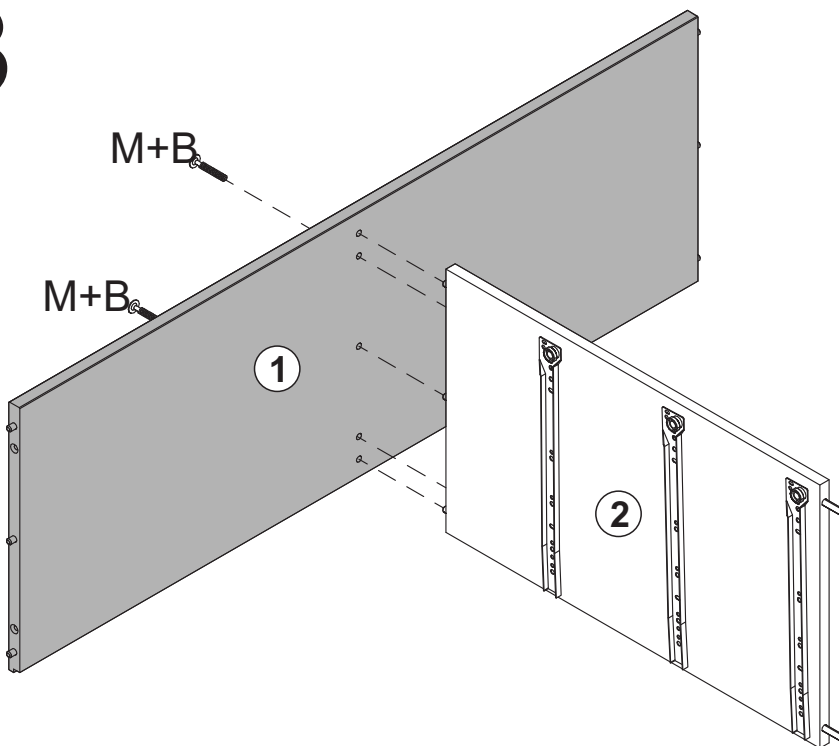



# 04

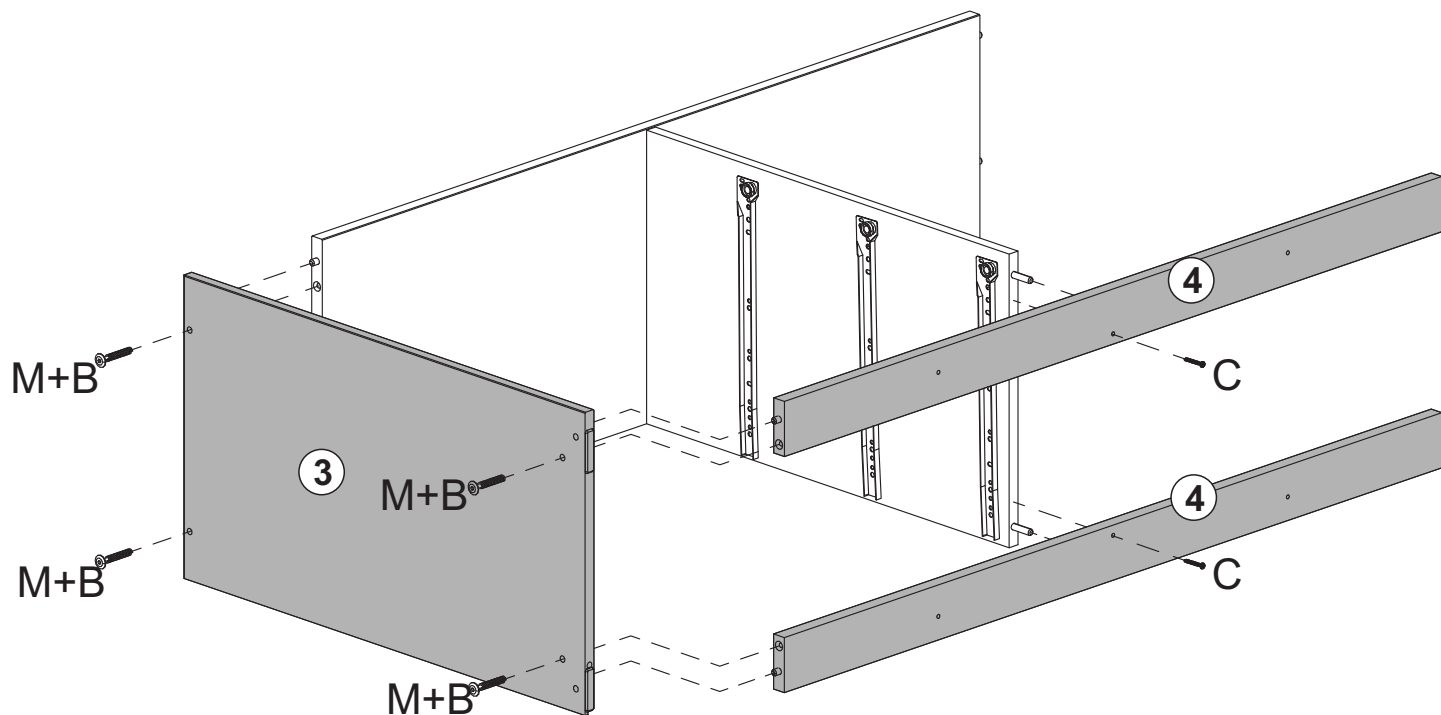


# 05

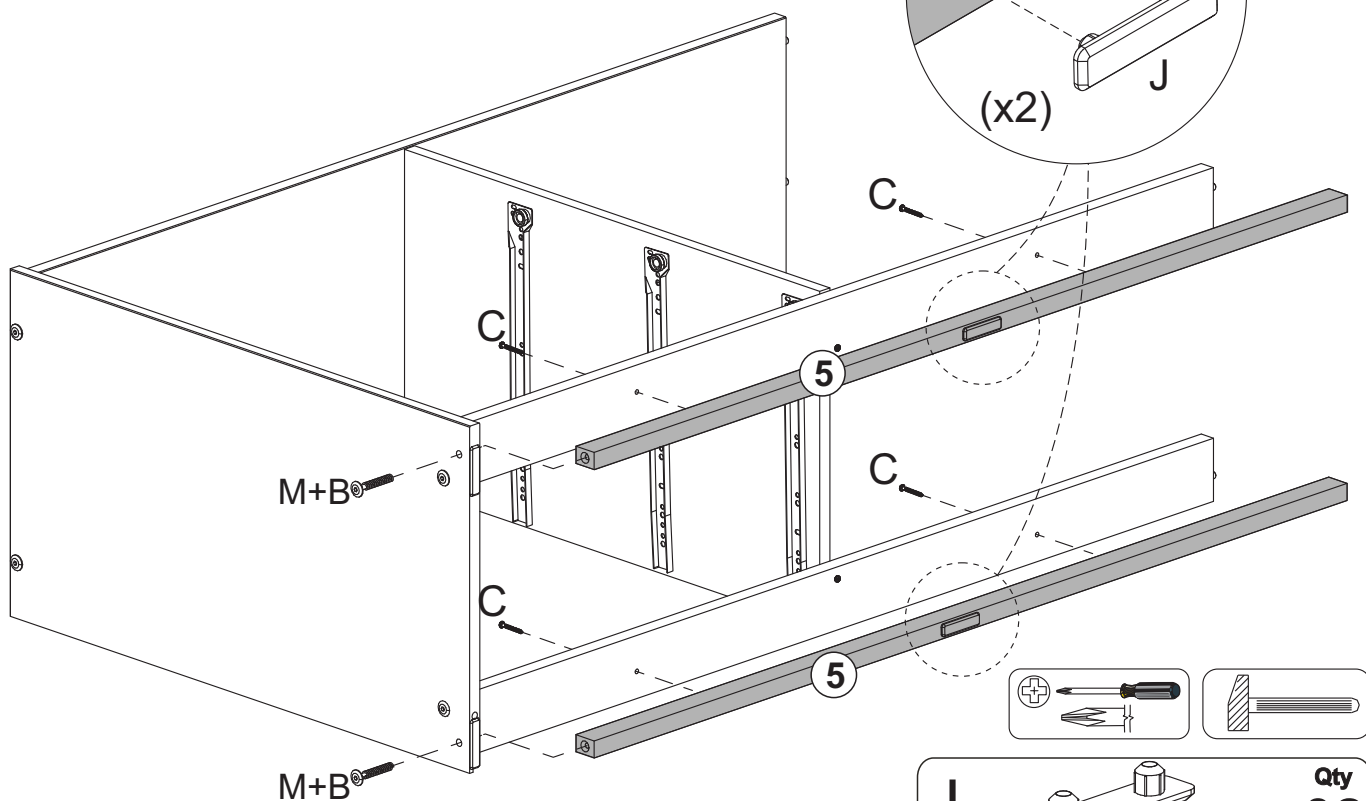



# 06

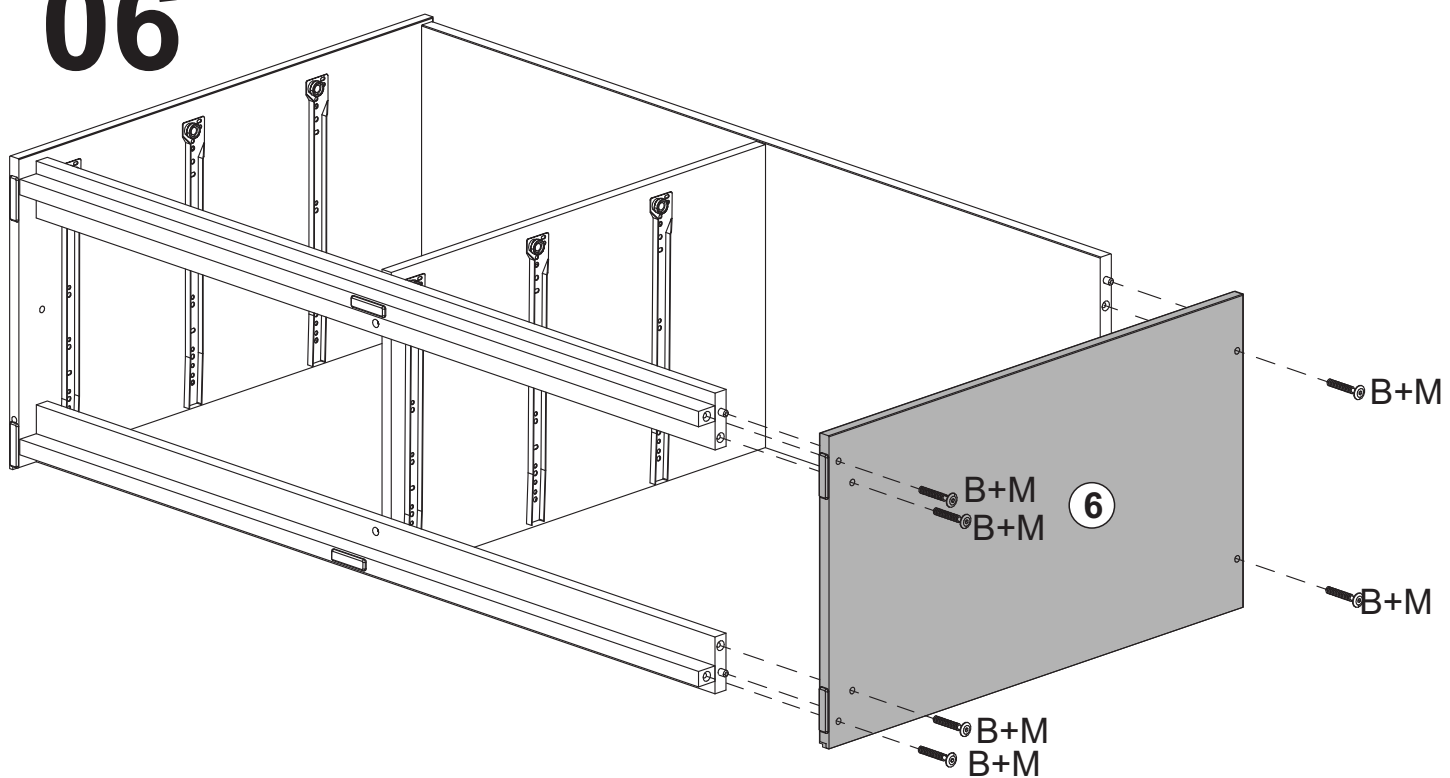

# 07

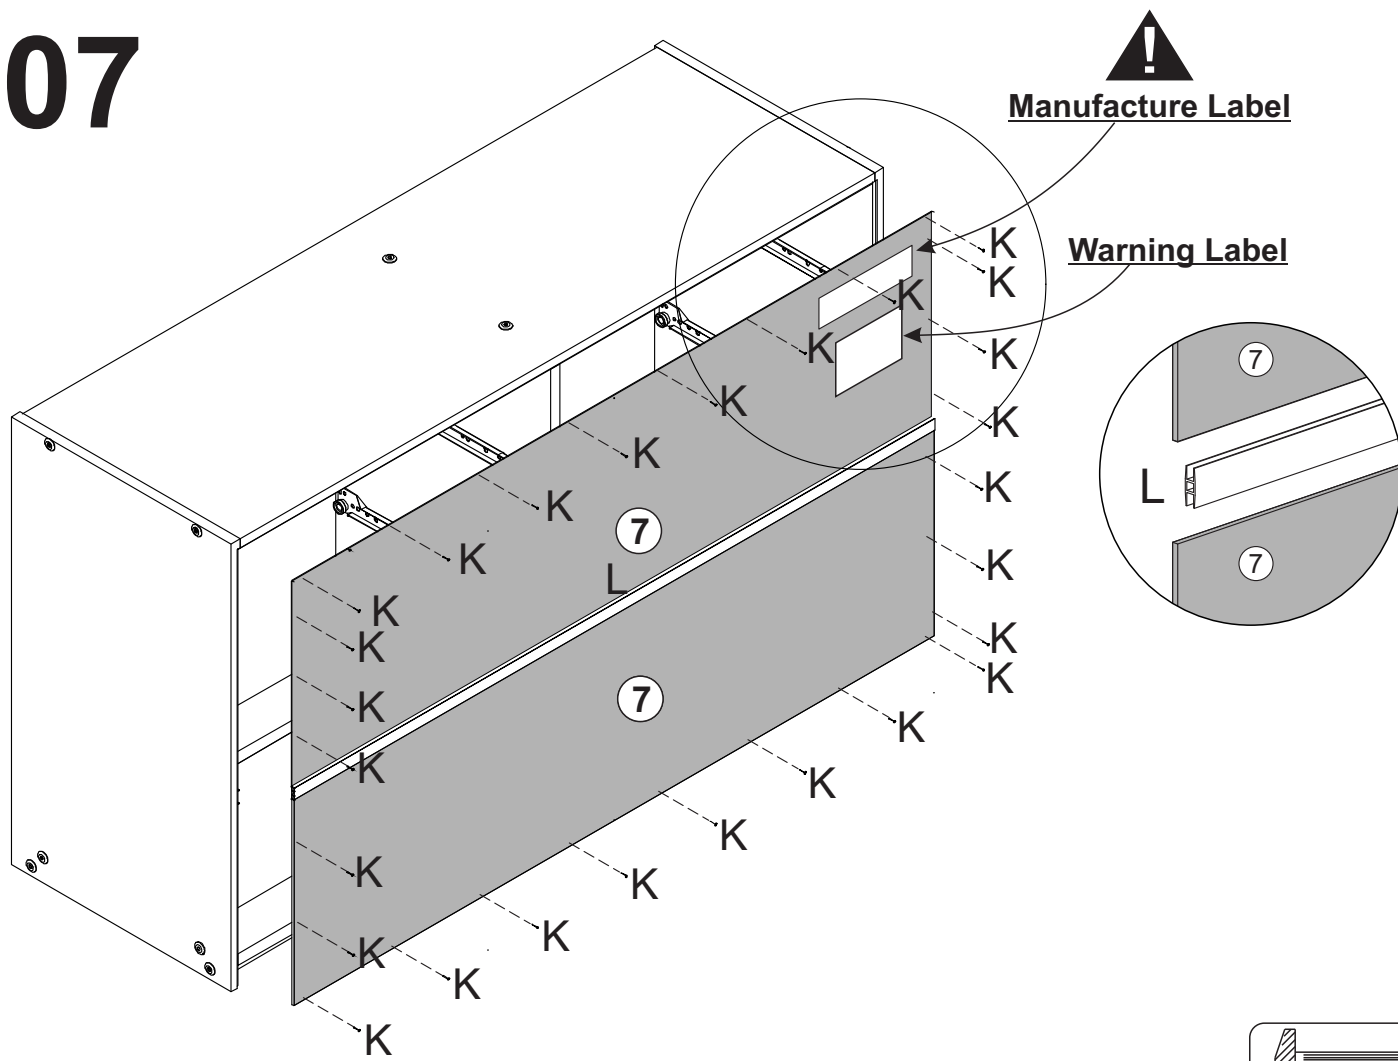


**K**  0 3/8" Qty **28**


**L**  Qty **01**

# 08

## DRAWERS


## (x6)

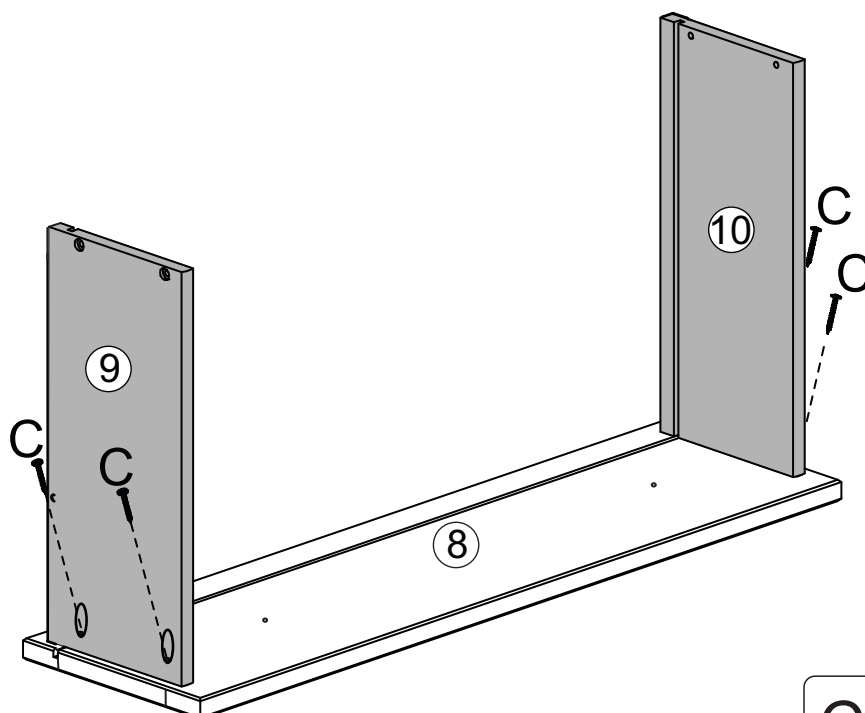

**C**  1 3/16" Screw Qty **24**




# 09

(x6)

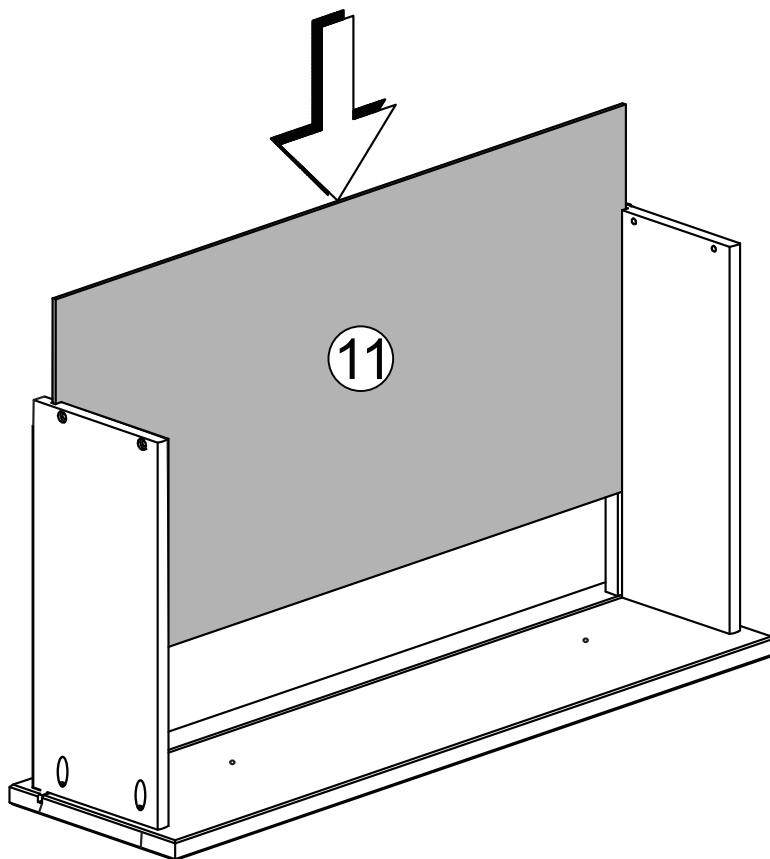


# 10

(x6)

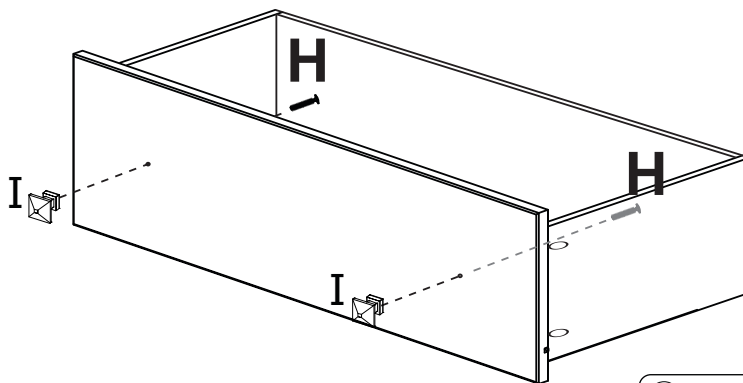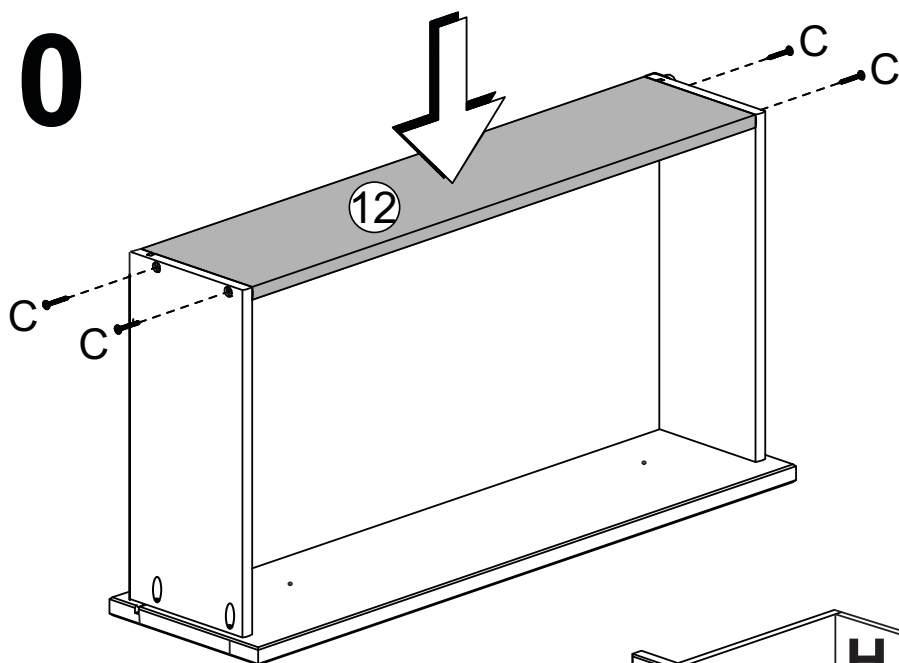


**C**  **Qty 24**  
1 3/16" Screw

**I**  **Qty 12**  
Metal Knob


**H**  **Qty 12**  
1" Screw

# 11


(x6)

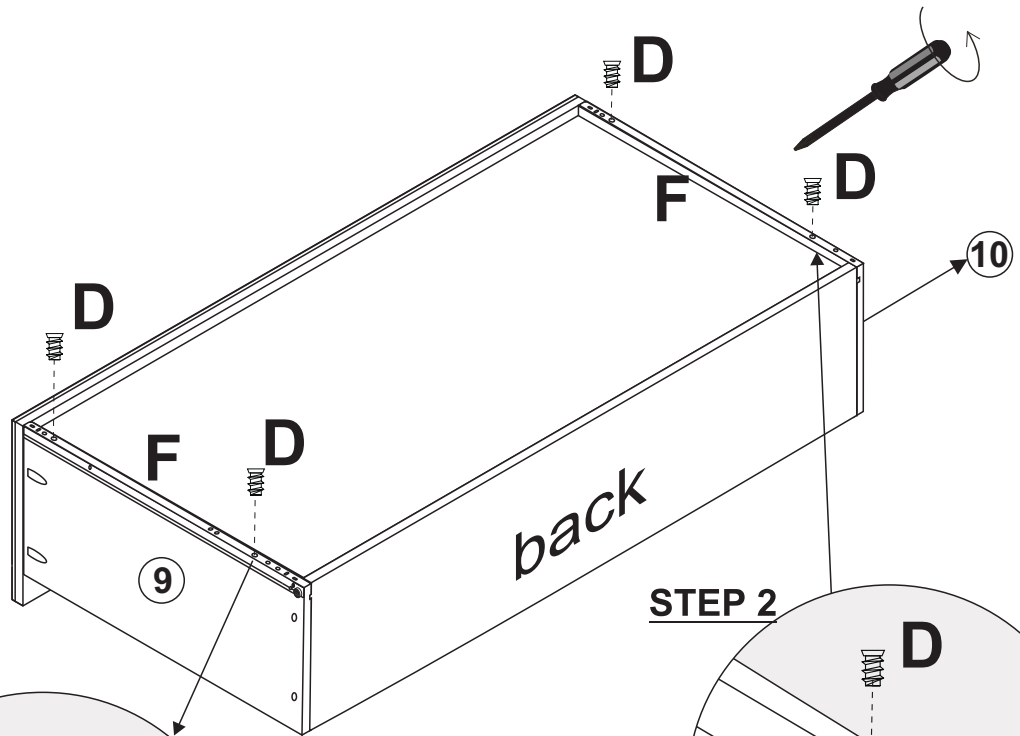

STEP 1

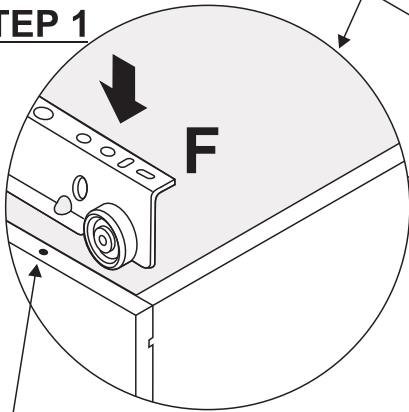



STEP 2

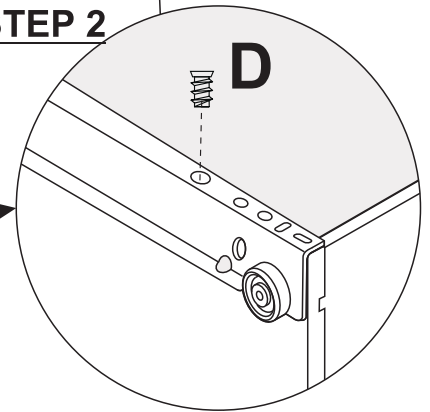


**! The wheel to the back !**

**! PRE-DRILLED HOLES**



**D**  3/8" Screw **Qty 24**

**F**  Metal Glides 13 3/4" **Qty 06**

# 12

